

LITEMAX PUSHCHAIR

Instruction manual



**IMPORTANT - RETAIN FOR FUTURE
REFERENCE, READ CAREFULLY.**

Warning: A child's safety is your responsibility.

This product is tested and approved to
EN 1888-2: 2018+A1: 2022

1.Welcome

Thank you for purchasing the Puggle Litemax Pushchair.

Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of your Puggle Litemax Pushchair.

If you have a query with this product or require replacement parts, please contact Online4baby online at online4baby.com/contact-us.

2. Safety instructions

IMPORTANT! READ THESE INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE.


- **WARNING!** Keep for future reference. The child may be hurt if you do not follow these instructions.
- **WARNING!** A child's safety is your responsibility.
- **WARNING!** Before using, remove and dispose of any plastic bags and other packaging (e.g. fasteners, fixing ties, etc.) and keep them out of reach of children.
- **WARNING!** This vehicle is intended for one child from birth up to 4 years (maximum weight of 22kg).
- **WARNING!** Never leave the child unattended.
- **WARNING!** Ensure that all locking devices are engaged before use.
- **WARNING!** To avoid injury, ensure that your child is kept away when unfolding and folding this product.
- **WARNING!** Do not let your child play with this product.
- **WARNING!** Always use the harness restraint system.
- **WARNING!** Always use the crotch strap in combination with the waist belt section of the harness.
- **WARNING!** This product is not suitable for running or skating.
- **WARNING!** Any load attached to the handles affects the stability of the stroller.
- A basket is provided for the carriage of 2kg of items evenly distributed.
- The maximum weight capacity for the cupholder is 0.5kg.
- YOUR CHILD'S SAFETY IS YOUR RESPONSIBILITY
- Do not let children play with or hang on the stroller.
- Do not overload this stroller with additional children, goods or accessories.
- Bags and other items should not be hung from the handle as this can affect the stability of the stroller.
- Overloading, incorrect folding and the use of non-approved accessories is unsafe and may damage or break this stroller.
- Do not use parts or accessories which are not approved by the manufacturer.
- Always apply the parking brake when the stroller is stationary.
- Ensure the parking brake is engaged during the loading and unloading of children.
- Do not allow your child to climb into the stroller.

2. Safety instructions


- Never leave a raincover, hood or apron on indoors, in a hot atmosphere or near a heat source as your child may overheat.
- Be careful when going up or down kerbs.
- Remove your child and fold the stroller when going up or down escalators.
- If your stroller is used by someone unfamiliar with it e.g. Grandparents, always show them how it works.
- Do not use this stroller near an open fire or exposed flame.
- Take care in windy conditions.
- Do not place anything on top of a raincover.
- To prevent your child overheating, always fold or remove a raincover when indoors or in warm environments.
- This product conforms to EN 1888-2: 2018+A1: 2022

3. Parts List - Stroller


A

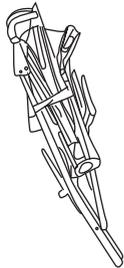

B

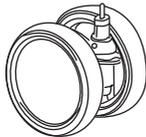

C

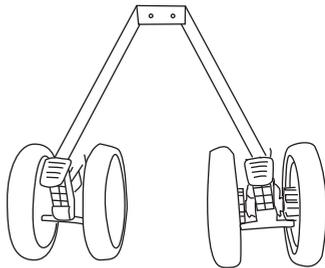


D



E



F

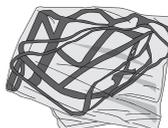


Contained in your carton are:

Nº	Part	Qty
A	Stroller	1
B	Front wheels	2
C	Rear wheels	2
D	Bumper bar	1
E	Cup holder	1
F	Raincover	1

4. Assembly


4.1. STROLLER UNFOLDING

Release the stroller (A) from the locked position by lifting the locking catch from over the locking rivet on the stroller frame.


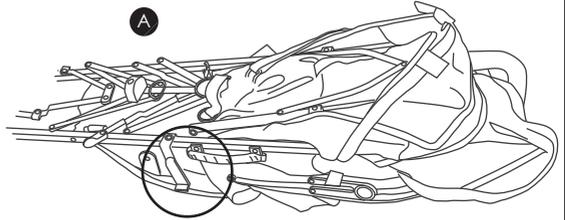


HINT. You may have to squeeze the stroller legs and handles together first so as to release the tension on the rivet.

Standing behind the stroller and holding it by the handles, allow the front wheel pins to fall forward.

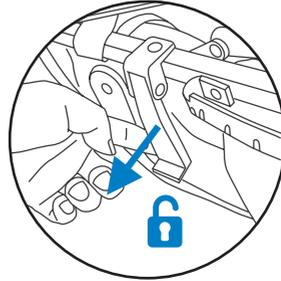

Then with your foot, press down on the locking bar until the entire frame 'clicks' into the open position signalling that it is locked.

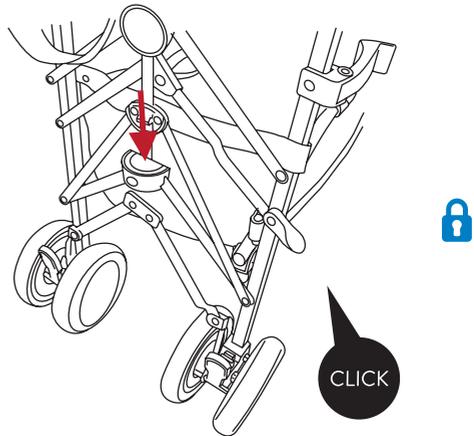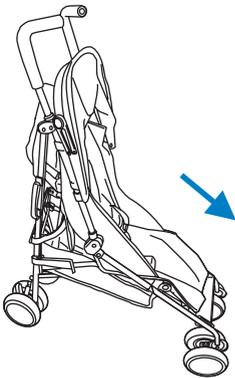

IMPORTANT:

For stroller folding instructions see section 13 (page 6)


4. Assembly

4.2. WHEEL ASSEMBLY


Insert each front wheel (B) pins into the each centre front leg tube.

A "click" will be heard, indicating that it is locked correctly into position.


Give each wheel a firm tug to ensure they're securely attached. Repeat this action for rear wheels (C).

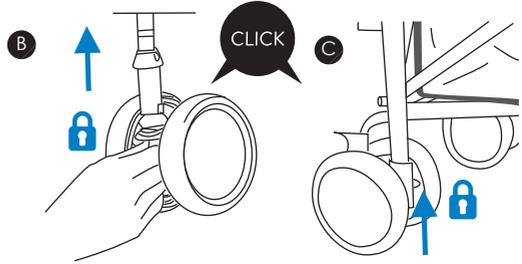

To remove locate the spring positioned between the wheels and squeeze to release.

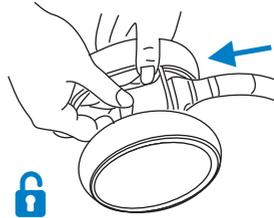


To assemble the rear wheel, insert the rear wheels into the pins of the rear leg tubing. Listen for the 'click'. Use the brace connecting the wheels to adjust the wheels position

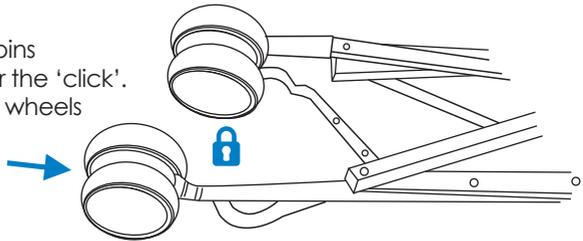

4.3. BUMPER BAR ASSEMBLY

Insert the bumper bar (D) into the corresponding slots on the frame, push until you hear a "click". Give the bumper bar a tug to ensure it's securely in place.

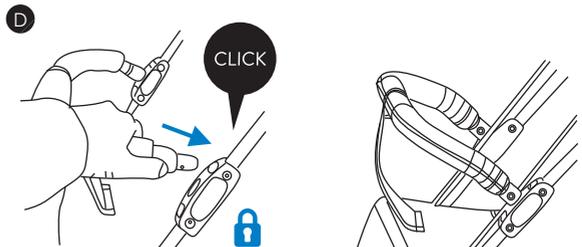


To remove the bumper bar, simply press the release buttons on both sides and lift off.

5. Canopy Adjustment


5.1. CANOPY

The canopy can be opened or closed by lowering or raising the canopy hinge.

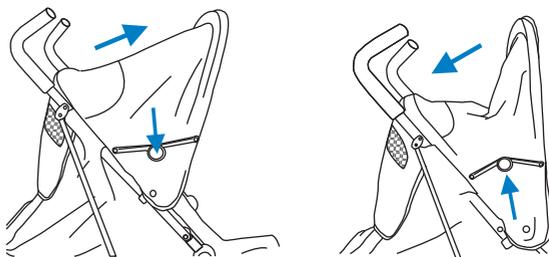


5.2. CANOPY

Open the clip at the top of the canopy to reveal the extension panel for added sun protection.

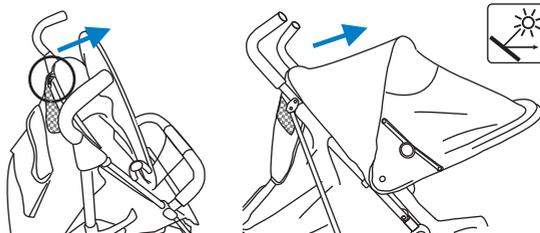

5.3. CANOPY



There is a mesh air vent under the canopy flap. Open flap for extra ventilation.

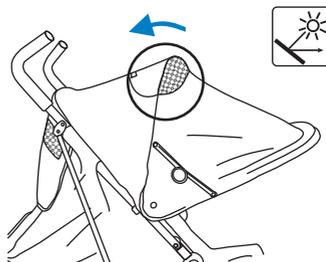

6. Ventilation

6.1. Mesh Panels


There are 4 air vents in total. Two on the canopy, top and back. Another two are located on either side of the seat unit. Increasing airflow to avoid overheating.

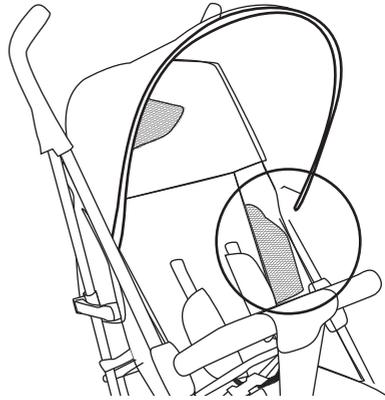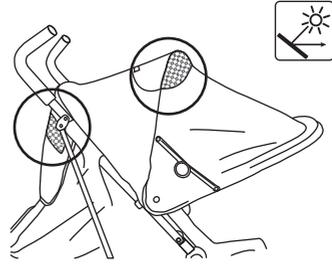

7. Cup Holder

7.1. Cupholder

To attach the cupholder to the stroller frame, line up the frame connector to the cupholder housing and slide the cupholder downwards until secure.

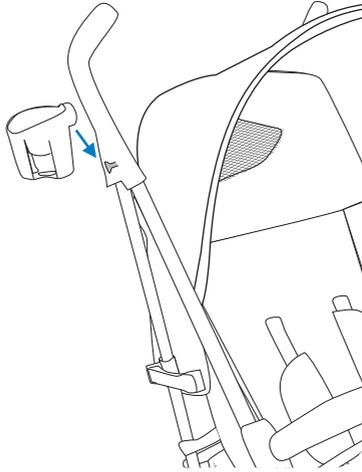


8. Swivel Wheels

8.1. SWIVEL WHEELS


When travelling along straight surfaces or uneven terrain, the front wheels may spin.



To lock the front wheels, push down on the lever located at the front of the wheels.

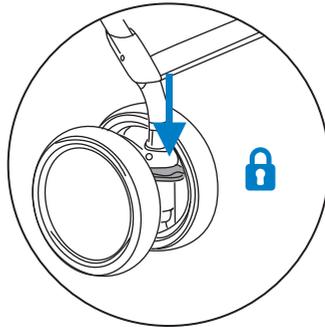



To go back to 360° swivel mode, push lever upwards.

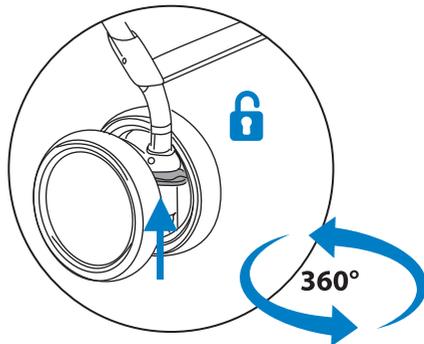

9. Calf Adjustment

9.1. CALF ADJUSTMENT


Locate the adjustment buttons either side of the calf-rest. Push to adjust to the required position. Listen for the “click” signalling that the calf-rest is locked into position.

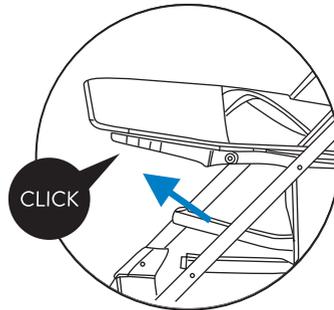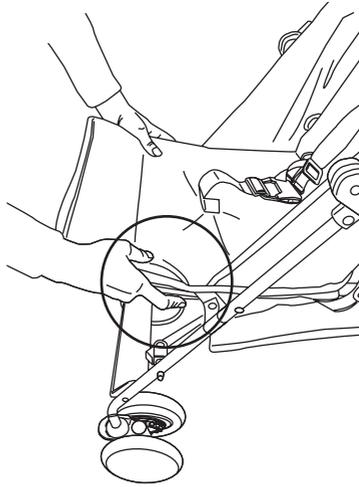

10. Harness Adjustment

10.1. HARNESS ADJUSTMENT

To fasten the harness, slide the shoulder harness prongs into the waist harness connector housing. Repeat for other side.

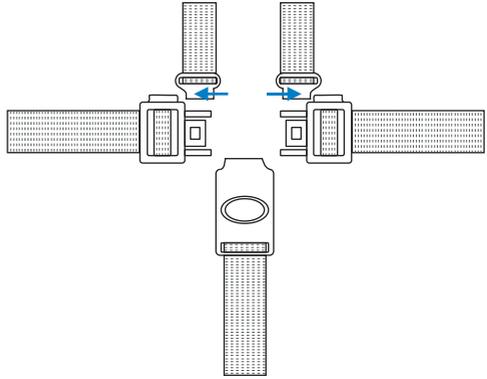


WARNING!

Always adjust the harness to fit your child correctly for their comfort and safety. A loose fitting harness can be very dangerous.

WARNING!


Never press onto the bar connecting the brake pedals.

Insert the waist connector prongs into the main crotch strap buckle housing. Listen for the “click” sound.

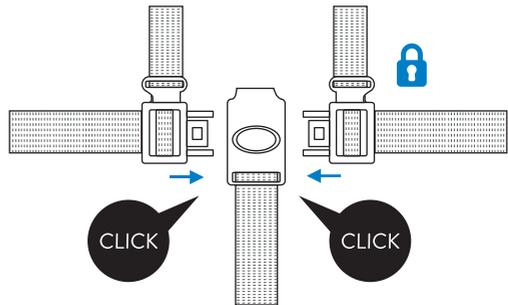

10.2. RELEASE HARNESS

To release, press the centre button and remove prongs from the buckle.

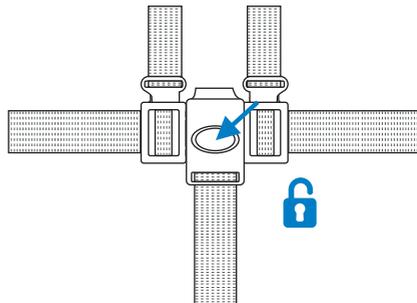

10. Harness Adjustment


10.3. HARNESS ADJUSTMENT

To adjust the harness, move the sliders as shown.




WARNING!

Always adjust the harness to fit your child correctly for their comfort and safety. A loose fitting harness can be very dangerous.

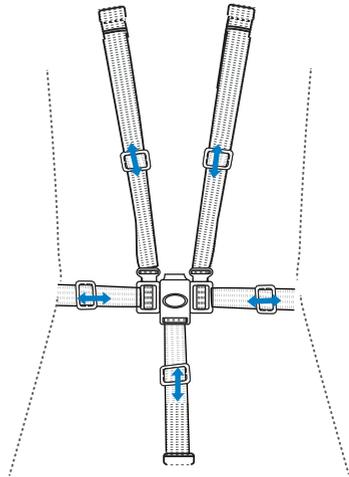


10.4. HARNESS ADJUSTMENT

The stroller has 2 height positions. For babies under 6 months in lie-flat position, feed harness tabs through slots (a) in seat unit as shown. For children 6 months + use the upper height position (b).

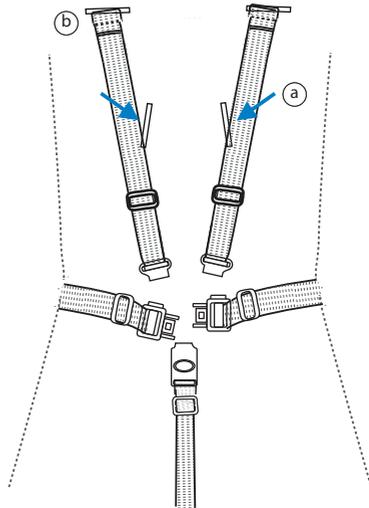

WARNING!



Always adjust the shoulder strap height according to baby height and ensure that both straps are at the same height.

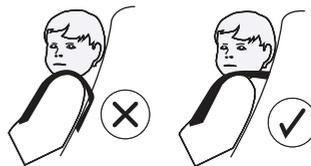

11. Backrest Adjustment



11.1. LOWER BACKREST

Locate the backrest adjustment mechanism at the rear of the seat. Squeeze the two adjustment levers on the reclining harness and gently lower the backrest.

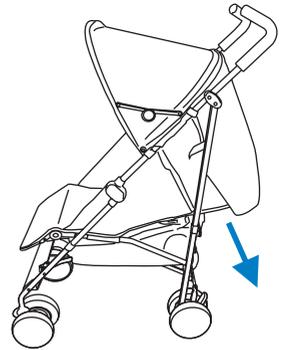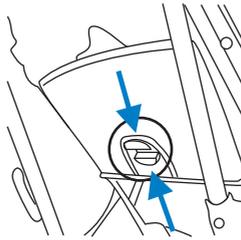

11.2. RAISE BACKREST

To raise the backrest, squeeze the two back adjustment levers together and raise the backrest to your desired height.

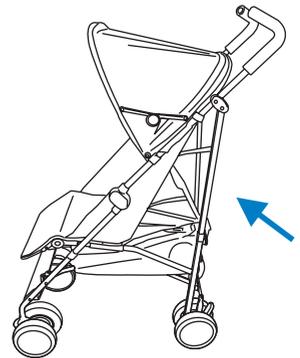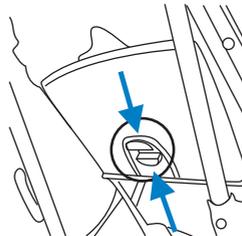

WARNING!

Always ensure that the seat is securely fixed in position before use.

12. Brakes

12.1. ENGAGE BRAKES

Press down on either brake pedal to engage the brake. Listen for the "click" signalling that the brake is locked.




WARNING!

Always engage wheel brakes when the stroller is not moving.




WARNING!

Never press onto the bar connecting the brake pedals.

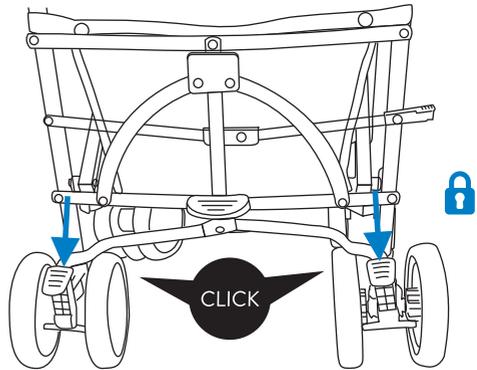

12.2. DISENGAGE BRAKES


Push the brake pedal upwards to disengage the brake.

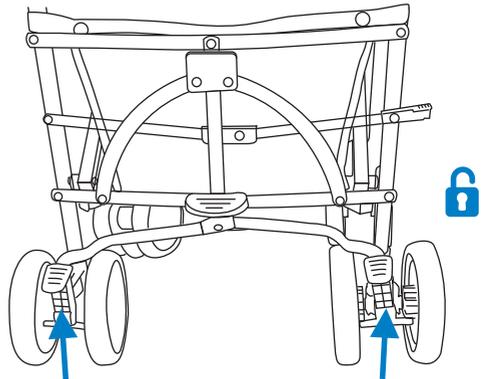

13. Folding

13.1. CLOSE CANOPY

Always close your canopy before folding the stroller. Lift the canopy hinge on both sides to close or open the canopy. Lower the backrest to its lowest position before folding.

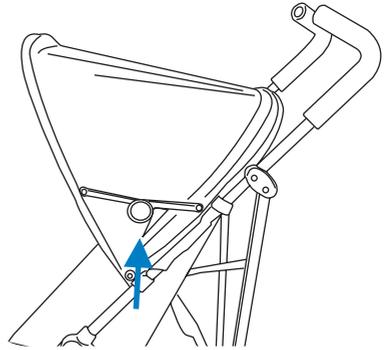


WARNING!

Do not fold the canopy before lifting the hinge or the mechanism could be damaged.

WARNING!

Remove any additional accessories, for example a footmuff/apron before folding.

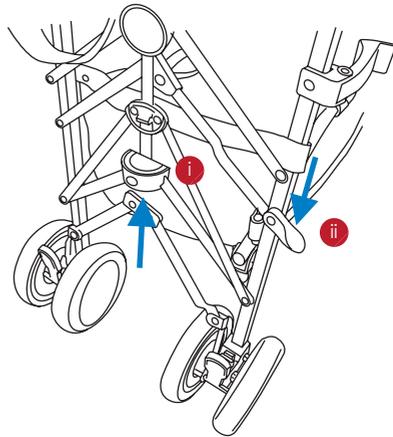



13.2. FOLD FRAME

First lift the middle pedal upwards, see (i). Push down on the second pedal lock with your foot, see (ii).

13.3 LOCK FRAME

Push the handles over to close. The locking catch will engage automatically.

To note. There is a carry handle located next to the locking mechanism.

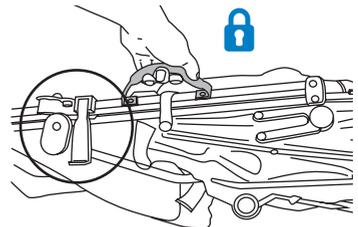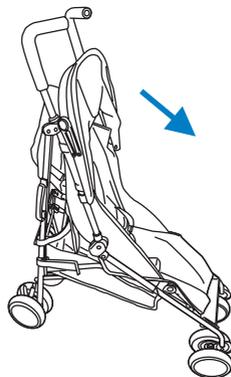


14. Raincover

14.1 RAINCOVER

Locate the raincover (F). Pull the raincover down over the pram starting at the top of the canopy and pulling down towards the footrest. Connect fasteners around the chassis to secure.

F

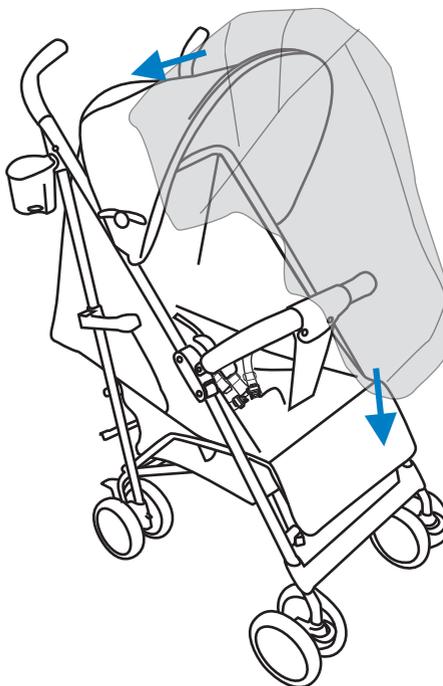

15. Care and Maintenance

15.1. CLEANING

- Spot or sponge clean fabrics with mild detergent. Use mild soap or upholstery shampoo. NEVER use bleach. Dry in shade thoroughly before reuse and avoid direct heat and sunlight. Do not iron. Do not dry clean. Do not bleach.
- Wipe clean plastics and metals with a damp cloth.
- Never clean any part of the product with abrasive, ammonia based, bleach based or spirit type cleaners.
- Ensure the product is fully dry before use or storage.
- Always ensure the product is stored in a dry place to prevent mold or mildew developing.

15.2. MAINTENANCE

- The product requires regular maintenance to ensure correct and safe performance.
- Regularly inspect the wheels, locks, brakes, harness, catches, seat adjusters, joints and fixings to ensure they are clean, operating correctly and in full working order.
- Do not use this product if any part is broken, torn or missing and use only spares provided by the manufacturer.
- Always check your stroller for loose screws, ensure they are tightened properly.
- If parts become stiff or difficult to operate, ensure dirt is not the cause, then try a light application of a silicon lubricant, ensuring it penetrates between the components. Regular lubrication of moving parts will extend the life of your product and make opening and folding easier.
- After exposure to damp conditions, dry off with a soft cloth and leave fully open in a warm environment. Storing damp will encourage mildew to form.
- Store in a dry place.
- Do not leave in sunlight for prolonged periods as some fabrics may fade.



If you have any questions or concerns regarding this product,
do not hesitate to contact our expert team online
via online4baby.com/contact-us

Feeling social?  
online4baby.com

Imported by Online4baby Ltd,
Meadowbank, Tweedale Way, Oldham, OL9 8EH