

The background of the entire page is a repeating pattern of small, solid brown circles scattered across a white background.

# **PUGGLE**

## **Lowton Luxe 2-in-1 Travel System**

**Instruction Manual**

Welcome!

Thank you for purchasing the Puggle Lowton Luxe 2-in-1 Travel System.

This instruction manual will guide you through the setup, use, and maintenance of your new travel system, ensuring you get the most out of its versatile features. Please read through the following information and safety warnings carefully to fully understand and enjoy all the benefits your travel system has to offer, and to ensure its safe operation.

## We're here to help!

If you have a query with this product or require replacement parts, please contact us at the web address below.

[thenurserystore.com/contact-us](https://thenurserystore.com/contact-us)

## Follow us on social media:



Facebook



Instagram



YouTube



Tiktok




X (formerly known as Twitter)



Pinterest

## Important Information

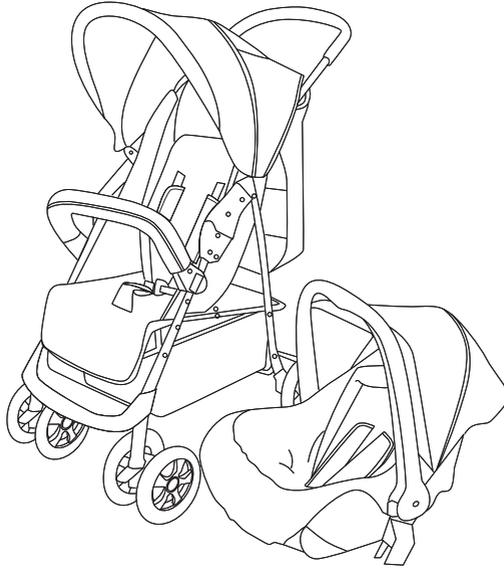

IMPORTANT! Your Lowton Luxe 2-in-1 Travel System may differ slightly from images shown above and throughout, as the images are for illustration purposes only.

Your Lowton Luxe 2-in-1 Travel System is tested to comply with EN 1888-1:2018 + A1:2022.

- DO NOT use parts or accessories which are not approved or supplied by the manufacturer.

### Safety Instructions

**IMPORTANT - Read the instructions carefully before use and keep for future reference.**

- **WARNING:** Keep for future reference. The child may be hurt if you do not follow these instructions.
- **WARNING:** A child's safety is your responsibility.
- **WARNING:** Before using, remove and dispose of any plastic bags and other packaging (e.g. fasteners, fixing ties, etc.) and keep them out of reach of children.
- **WARNING:** This product is suitable for one child from birth and up to a maximum weight of 15kg (approx. 3 years).
- **WARNING:** Suitable for newborn babies in the most reclined position only.
- **WARNING:** Not suitable for children under 6 months in the most upright position.

- **WARNING:** Follow suitability recommendations given in the separate car seat instruction manual.
- **WARNING:** Never leave the child unattended.
- **WARNING:** Ensure all locking devices are engaged before use.
- Always apply the parking brake when the product is stationary.
- Ensure the parking brake is engaged during the loading and unloading of the child.
- Take extra care in windy conditions.
- Be careful when going up or down kerbs.
- **WARNING:** To avoid injury ensure that your child is kept away when unfolding and folding this product.
- **WARNING:** Do not let your child play with this product.
- **WARNING:** ALWAYS USE THE RESTRAINT SYSTEM. Ensure it is correctly fitted at all times.
- **WARNING:** Always use the crotch strap in combination with the waist belt section of the harness.
- **WARNING:** Check that the pram body or seat unit attachment devices are correctly engaged before use.
- **WARNING:** This product is not suitable for running or skating.
- **WARNING:** Do not let other children play or hang on the product.
- **WARNING:** Do not use this product if any part is broken, torn or missing.
- **WARNING:** Do not add an additional mattress to the pram/pushchair.
- **WARNING:** Do not place the product near an open fire or other source of strong heat.
- Adult assembly is required.
- Do not use parts or accessories which are not approved by the manufacturer.
- Do not allow your child to climb unassisted into the product.
- Remove your child and fold the product when going up or down escalators.
- If this product is used by someone unfamiliar with it e.g. grandparents, always show them how it works.
- The basket for the carriage can carry a maximum load of 2kg with items evenly distributed.
- The hood pocket can carry a maximum load of 0.5kg.
- Bags and other items should not be hung from the handles as this can affect the stability of the product.
- Infant car seats should not be used in place of a cot or cot bed. Should your child need to sleep, it should be placed in a suitable cot or cot bed.
- Overloading, incorrect folding and the use of non-approved accessories is unsafe and may damage or break this product.
- Never leave the raincover, hood or apron on indoors, in a hot atmosphere or near a heat source as your child may overheat.
- To prevent damage, remove the raincover before folding the pushchair.
- Do not place anything on top of the raincover.

## Symbols and their meaning

There are a number of symbols used through this manual, please find below breakdown of what each symbol is and what it means.



Direction indicator showing direction of assembly, rotation, function.



Indicates if product is locked or unlocked



Turns 360°

## Before Assembly

Before assembly, please ensure that you have read and understood the instructions. Then carefully unpack your travel system and ensure that all parts are present. Please see parts list as follows.

## What's in the box


**x1 Puggle Lowton Luxe 2-in-1 Travel System**

**x1 Puggle Lowton Car Seat**


**x1 Instruction Manual**

## Parts List


A

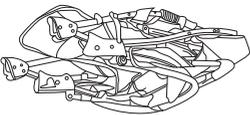


B

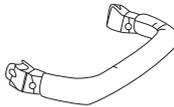


C

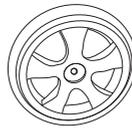

D

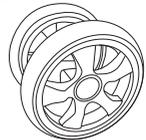

E

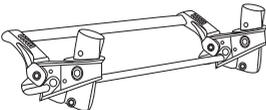

F



G




H



I



J

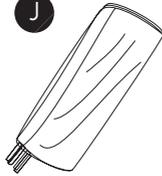

K




## Parts included with your Lowton Luxe 2-in-1 Travel System are:

Part	Description	Quantity
A	Pushchair chassis	1
B	Bumper bar	1
C	Rear wheels	2
D	Front wheels	2
E	Rear wheel axle	1
F	Washer	2
G	Plastic eye splice	2
H	Plastic cap	2
I	Round cap	2
J	Raincover	1
K	Car seat	1

## Assembling the Chassis


1. Release the pushchair chassis (A) from the locked position by lifting the locking catch from over the locking rivet on the pushchair frame.  
Note. You may have to squeeze the legs and handles together first so as to release the tension on the rivet.
2. Standing behind the pushchair and holding it by the handle, lift the handle upwards to unfold the frame.

**WARNING:** Ensure the opened chassis is locked in place before you use it.

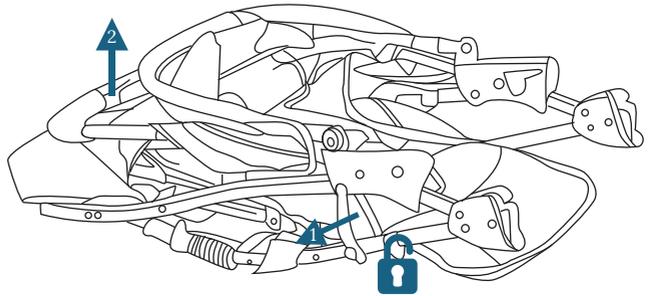


## Assembling the Rear Wheels

3. Place one metal washer (F) onto the end of the rear axle (E).
4. Place one wheel (C) followed by one plastic eye splice (G) and one plastic cap (H).
5. Finally attach the round cap (I) as illustrated and repeat for the other side.

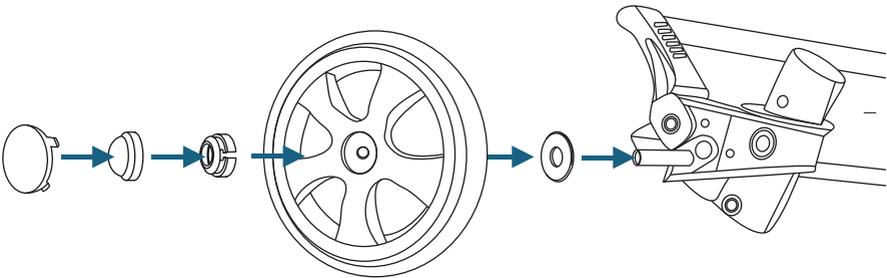


## Assembling the Rear Wheels

6. Fit the assembled rear wheel axle to the pushchair. Insert the ends of the tubing into the housing located on the assembled rear wheel axle.
7. Push upward until you hear it lock and “click” into position.

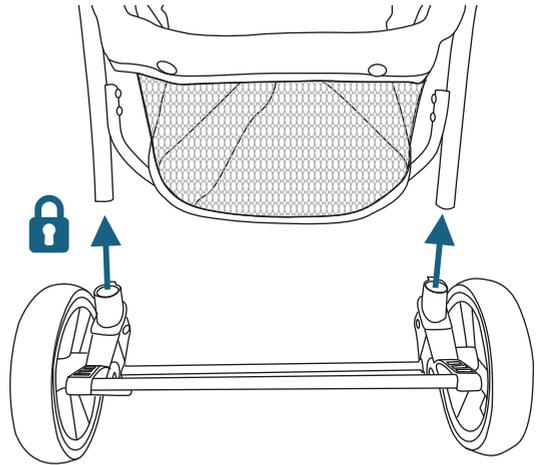


## Assembling the Front Wheels

8. Attach the front wheels (D). Insert wheel housing onto the front leg and push upward until you hear it “click” into position.
9. Repeat for other leg.

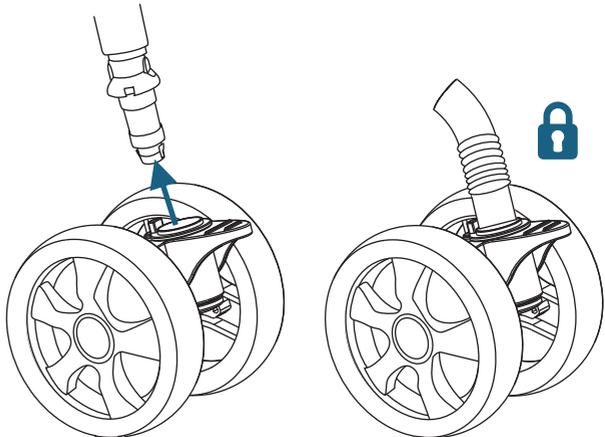


## Assembling the Bumper Bar

10. Attach the bumper bar (B) connector posts to the frame and push in the locking clip to secure.
11. Repeat for both sides of the bumper bar.
12. To remove, lift up the locking clip and pull the bumper bar away from the pushchair. Ensure both clips are released before trying to remove the bumper bar.

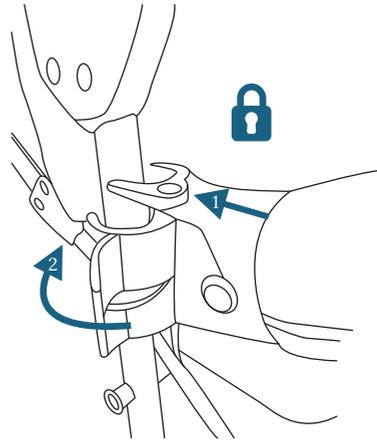


## Adjusting the Canopy

13. The canopy can be opened or closed by pulling or pushing on the canopy rim. There is also a viewing window located at the top of the canopy and a pocket at the rear of the canopy.

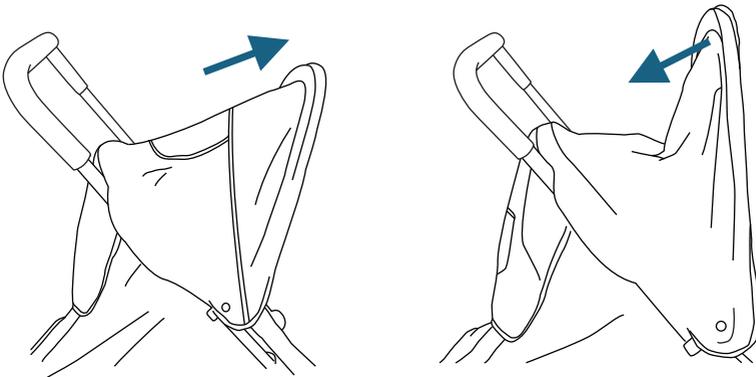

## Adjusting the Footrest

14. Press on each adjuster in turn while simultaneously pressing down or pulling up lightly on the footrest.

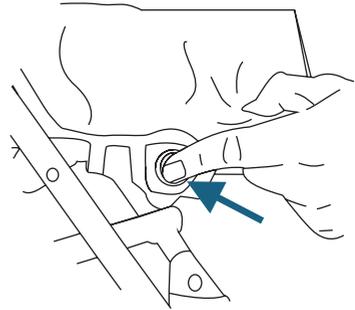



## Adjusting the Brakes

15. To engage the brake push down the brake locking bar. Listen for the “click” signalling that the brake is locked.
16. Lift up the bar to release the brake.

**WARNING:** Always apply the parking brake when the pushchair is not moving.


**WARNING:** Always apply the brake when you are placing and removing the child.

**WARNING:** Always apply the brake when you are making adjustments to the pushchair.

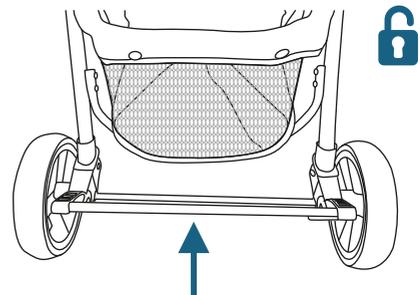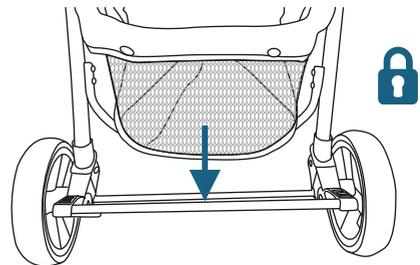

## Adjusting the Swivel Wheels

17. The pushchair has lockable front swivel wheels. To lock swivel wheels press the pedal down. Repeat on both wheels.
18. Push up to release and engage swivel wheel.

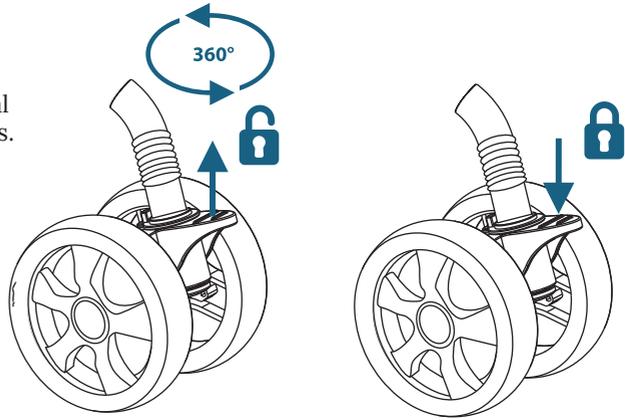


## Adjusting the Backrest

19. Locate the backrest adjustment mechanism at the rear of the seat. Squeeze the clip on the reclining harness and gently lower the backrest.
20. Alternatively, squeeze the clip on the reclining harness and gently pull up the backrest to the desired height.

**WARNING:** Always ensure that the seat is securely fixed in position before use.

**WARNING:** Suitable for newborn babies in the most reclined position only.


**WARNING:** Not suitable for children under 6 months in the most upright position.

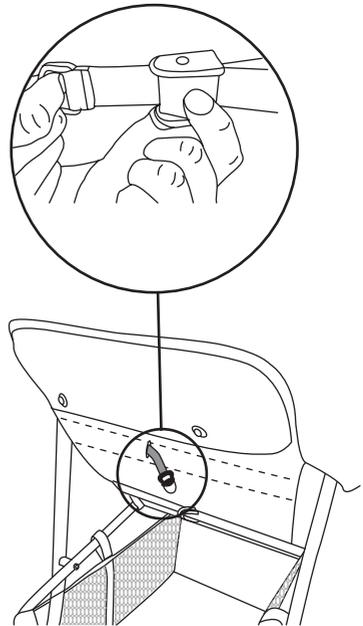


## Harness Operation

21. A five-point safety harness is provided to restrain your child and should always be worn.

To fasten, push the side clips into the centre buckle.

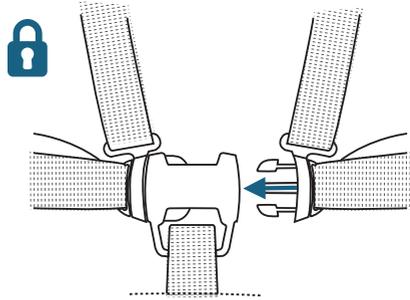


22. Press the side clip prongs and remove from buckle to release the buckle.

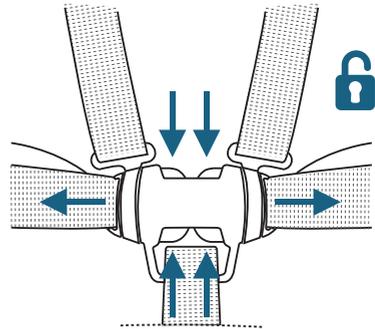

23. Sliding adjusters are fitted and should be adjusted to suit your child.


**WARNING:** Always adjust the harness to fit your child correctly for their comfort and safety. A loose fitting harness can be very dangerous.

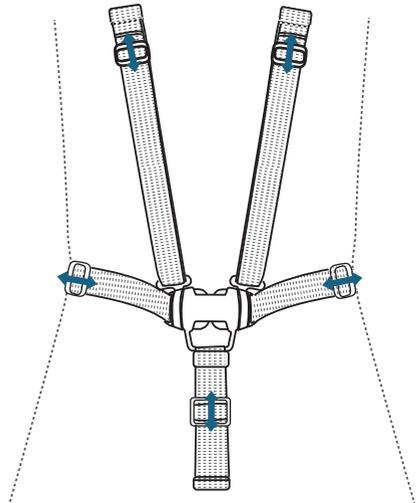

## Attaching the Car Seat to the Pushchair

24. The car seat (K) can be fitted to the pushchair to create a travel system.  
Adjust the pushchair backrest to the lowest recline position and fold the canopy.
25. Lower the car seat onto the pushchair ensuring to attach the connectors located both sides of the car seat to the frame. Ensure the car seat 'clicks' into place. Lift the car seat gently by the handle to check the car seat has locked into place.
26. Refer to the car seat manual and adjust the car seat handle to position C.

**WARNING:** Ensure the car seat base aligns with the bumper bar and the car seat connectors are correctly engaged before use.

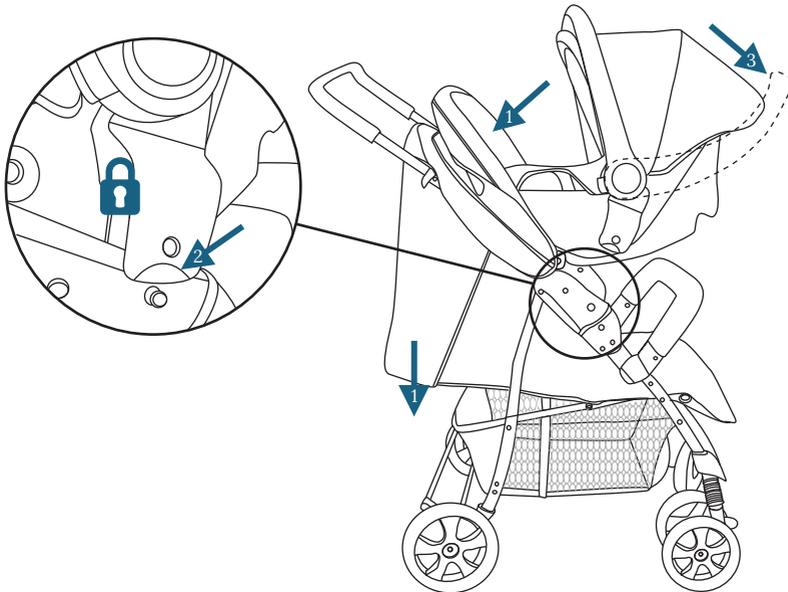


## Removing the Car Seat from the Pushchair

27. Refer to the car seat manual and rotate the car seat handle to the carrying position B.
28. Pull out the car seat connector from the pushchair frame to release the connector from the holding pin. Repeat for both sides of the pushchair.
29. Lift the car seat away from the pushchair.

**IMPORTANT!** Refer to the car seat manual for full details of use.



**WARNING:** Never attach the car seat forward facing.

**WARNING:** The car seat is compatible with the Puggle Lowton Luxe pushchair only. **DO NOT** use car seat with any other model of pushchair.

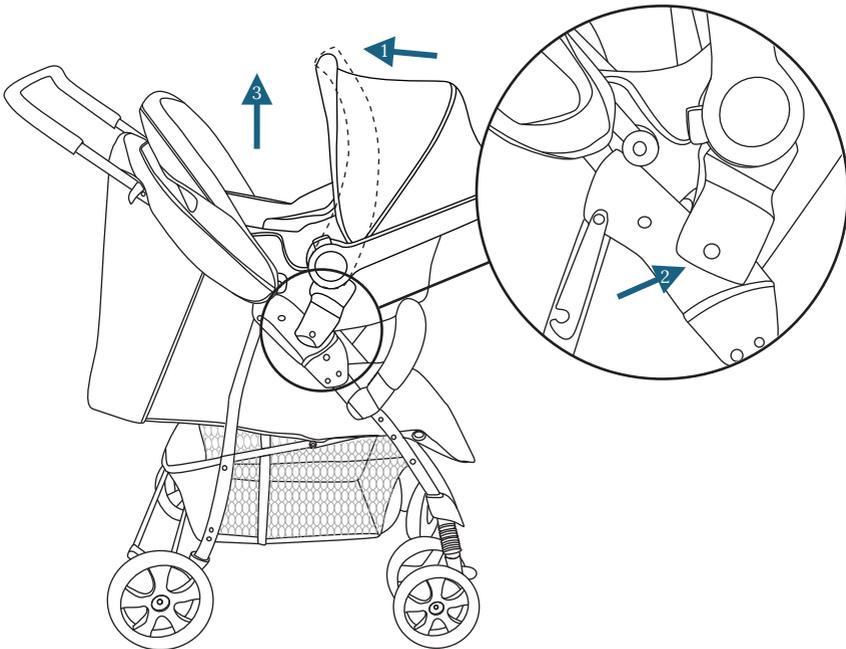


## Attaching the Raincover

30. Place the raincover (J) over the canopy front. Fasten the hook and loop straps around the front legs (a), handle bars (b) and canopy (c) to secure.

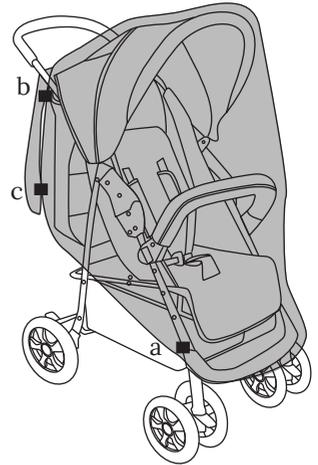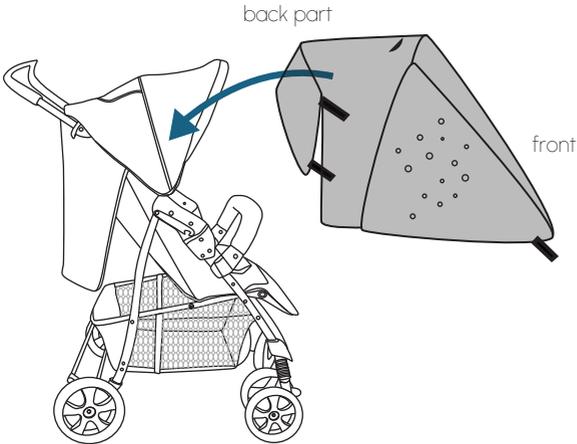

31. The raincover also fits in travel system mode (i.e. when the car seat is fitted to the pushchair). Secure with the hook and loop tabs.

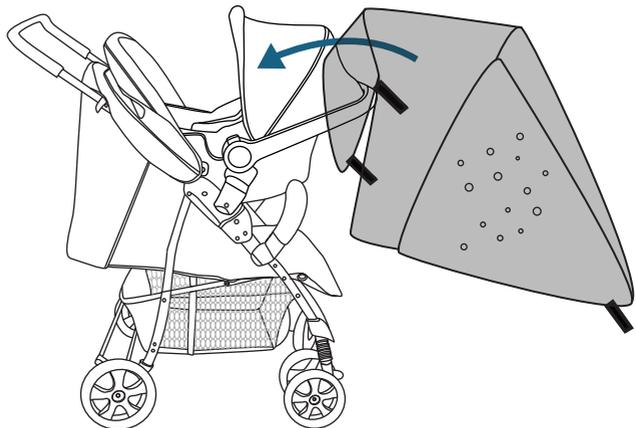


## Folding the Pushchair

32. Remove all items from the basket before attempting to fold. If using with car seat, ensure it has been removed before folding.
33. Lock swivel wheels, fold the canopy and engage the brake.
34. Pull both fold release triggers towards you. Push the handle downwards gently and lower the pushchair to a close. Engage the locking catch.

**WARNING:** Always fold the canopy before folding the pushchair.

**WARNING:** Due care should be taken when folding and unfolding pushchair.

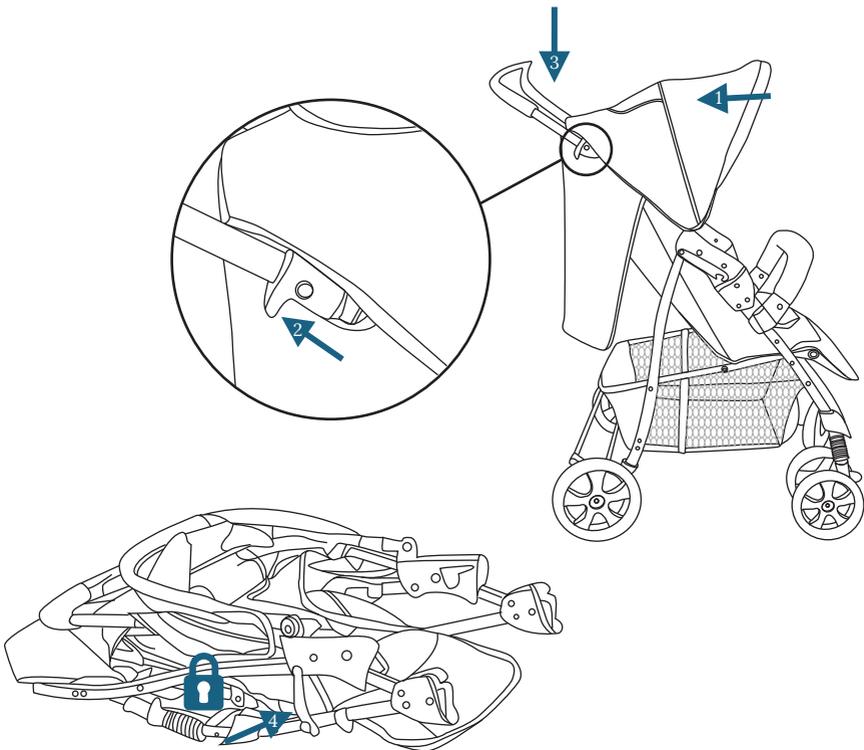

## *Care and Maintenance*

### *Cleaning*

- Spot or sponge clean fabrics with mild detergent. Use mild soap or upholstery shampoo. NEVER use bleach. Dry in shade thoroughly before reuse and avoid direct heat and sunlight. Do not iron. Do not dry clean.
- Wipe clean plastics and metals with a damp cloth.
- Never clean any part of the product with abrasive, ammonia based, bleach based or spirit type cleaners.
- Ensure the product is fully dry before use or storage.
- Always ensure the product is stored in a dry place to prevent mold or mildew developing.

### *Maintenance*

- The product requires regular maintenance to ensure correct and safe performance.
- Regularly inspect the wheels, locks, brakes, harness, catches, seat adjusters, joints and fixings to ensure they are clean, operating correctly and in full working order.
- Replace tyres if they are excessively worn.
- Do not use this product if any part is broken, torn or missing and use only spares provided by the manufacturer.
- If parts become stiff or difficult to operate, ensure dirt is not the cause, then try a light application of a silicon lubricant, ensuring it penetrates between the components. Regular lubrication of moving parts will extend the life of your product and make opening and folding easier.
- After exposure to damp conditions, dry off with a soft cloth and leave fully open in a warm environment. Storing damp will encourage mildew to form.
- Store in a dry place.
- Do not leave in sunlight for prolonged periods as some fabrics may fade.

## Troubleshooting Tips

Issue	Possible Root Cause	Solution
Joints are stiff.	Lack of lubricant.	Lubricate joint as per the instructions in the maintenance section.
Wheels are sticking.	Debris or dirt.	Clean the wheels and check for dirt, mud, or hair buildup.
Harness straps are too loose.	Not adjusted correctly.	Adjust the harness to the appropriate height for the baby's growth. Ensure that the straps are not twisted and that the buckle mechanism works properly.

For any and all other product issues not covered in the above please contact our dedicated customer services team at the below web address and they will endeavour to resolve any queries that you may have as soon as possible.

[thenurserystore.com/contact-us](https://thenurserystore.com/contact-us)

### Recycling the Packaging

When you've unpacked your product and have ensured that all parts are present, please discard packaging components in accordance with your local authority guidelines, for further information please check the material and your postcode at

<https://www.recyclenow.com/recycle-an-item>. Your packaging will include the following materials;

Carton - 5Ply Corrugated Paper - Widely recycled in your card and paper bin  
 Polybag - PE Plastic - Recycle with bags at large supermarkets

## WARRANTY

Thank you for purchasing your Puggle product.

At the Nursery Store we endeavour to provide quality, affordable products and as such we look to provide you as a proud parent with peace of mind that your Puggle product comes with a standard 12 months warranty.

Your Puggle product is guaranteed for 12 month from the date of original purchase. If any defects should arise due to faulty workmanship or material, your faulty product should be returned to us and repair, replacement or refund will be at our discretion based upon thorough investigation from our QA team.

The guarantee is subject to the following provisions:

- The product must be assembled correctly and operated in accordance with the requirements contained within the instruction manual.
- The product must be solely used for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The warranty is rendered invalid if the product has been resold or has been damaged through inexpert repair.
- The warranty is only valid within the UK.

You do not need to validate your 12 month warranty, it will be effective as of initial purchase date.

For full terms and conditions please see online at, [www.thenurserystore.com/warranty](http://www.thenurserystore.com/warranty)



# PUGGLE

[thenurserystore.com](http://thenurserystore.com)

Imported by Online4baby Ltd.

Meadowbank, Tweedale Way, Oldham, OL9 8EH