

PUGGLE



Durham Dresser

Instruction Manual

Welcome

Thank you for purchasing the **Puggle Durham Dresser**

Please read these instructions and safety warnings carefully before use to ensure safe and satisfactory operation of this product.

 
 
 
 
WARNING! Assembly by an adult. Keep away from children until fully assembled. Keep children clear during assembly as pack contains small parts which may present a choking hazard.

Lay out the parts on a soft level surface and compare to the part/fixings checklist. Do not discard any packaging until you are sure that you have all the parts.


We're here to help!


If you have a query with this product or require replacement parts, please contact us at:
support@pugglebaby.co.uk

Parts List

<p>1005727</p>  <p>(M6 x 25)</p> <p>x 3</p>	<p>1005857</p>  <p>x 20</p>	<p>1003272</p>  <p>x 4</p>
<p>1005367</p>  <p>x 28</p>	<p>1006091</p>  <p>x 28</p>	<p>1006031</p>  <p>(4 x 22)</p> <p>x 6</p>
<p>1006012</p>  <p>(3 x 16)</p> <p>x 31</p>	<p>1000893</p>  <p>x 1</p>	<p>1133252</p>  <p>x 3</p>
<p>1115207</p>  <p>(3 x 10)</p> <p>x 4</p>	<p>1001786</p>   <p>x 2</p>	<p>1004049</p>  <p>x 3</p>
<p>1005876</p>  <p>x 12</p>	<p>1000806</p>  <p>x 1</p>	<p>1006022</p>  <p>x 4</p>

 Parts List


ARTIKELNUMMER ITEM NUMER ARTIKELNUMMER		4022721	AANTAL QUANTITY ANZAHL	AFTMETINGEN [mm] DIMENSIONS [mm] ABMESSUNGEN [mm]		
				825	500	16
				791	90	16
1	1/2	2227549	1	825	500	16
2	2/2	2227550	2	791	90	16
3	2/2	2227551	1	828	480	16
4	2/2	2227552	1	828	480	16
5	2/2	2227553	1	791	150	16
6	1/2	2227554	3	819	252	16
7	2/2	2227555	3	350	160	16
8	2/2	2227556	3	350	160	16
9	1/2	2227557	3	734	139	16
10	1/2	2227558	3	747	355	3
11	1/2	2227560	1	825	78	16
12	1/2	2227561	1	825	78	16
13	2/2	2227562	2	500	60	16
14	2/2	2225698	1	803	604	3

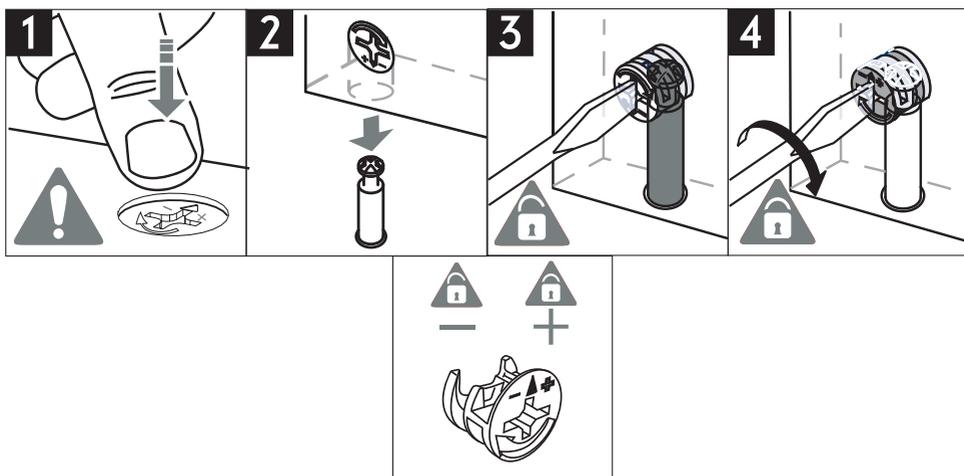


Before Assembly

Main Components

- Unpack all the parts and identify them against the fitting and components list.
- Do not discard any packaging until you have checked that you have all parts as shown below.
- You may find the construction of your dresser easier if you have the help of another person.
- Crosshead screwdriver (not provided).

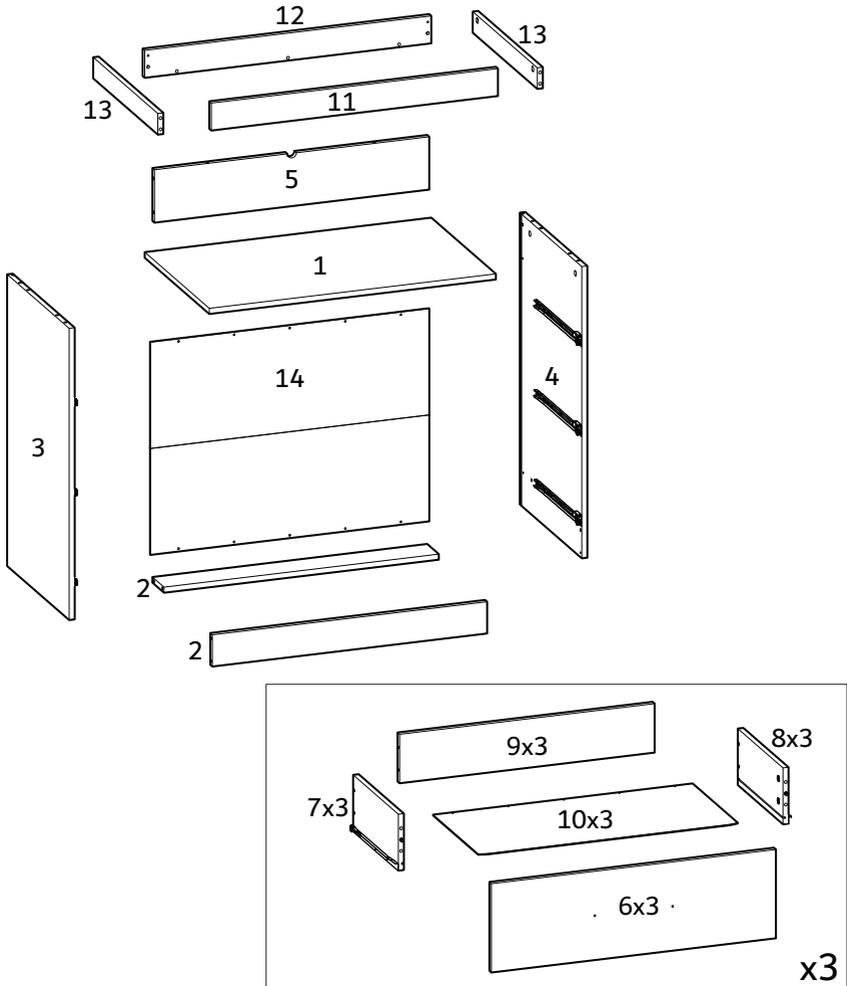

Assembling the Dresser

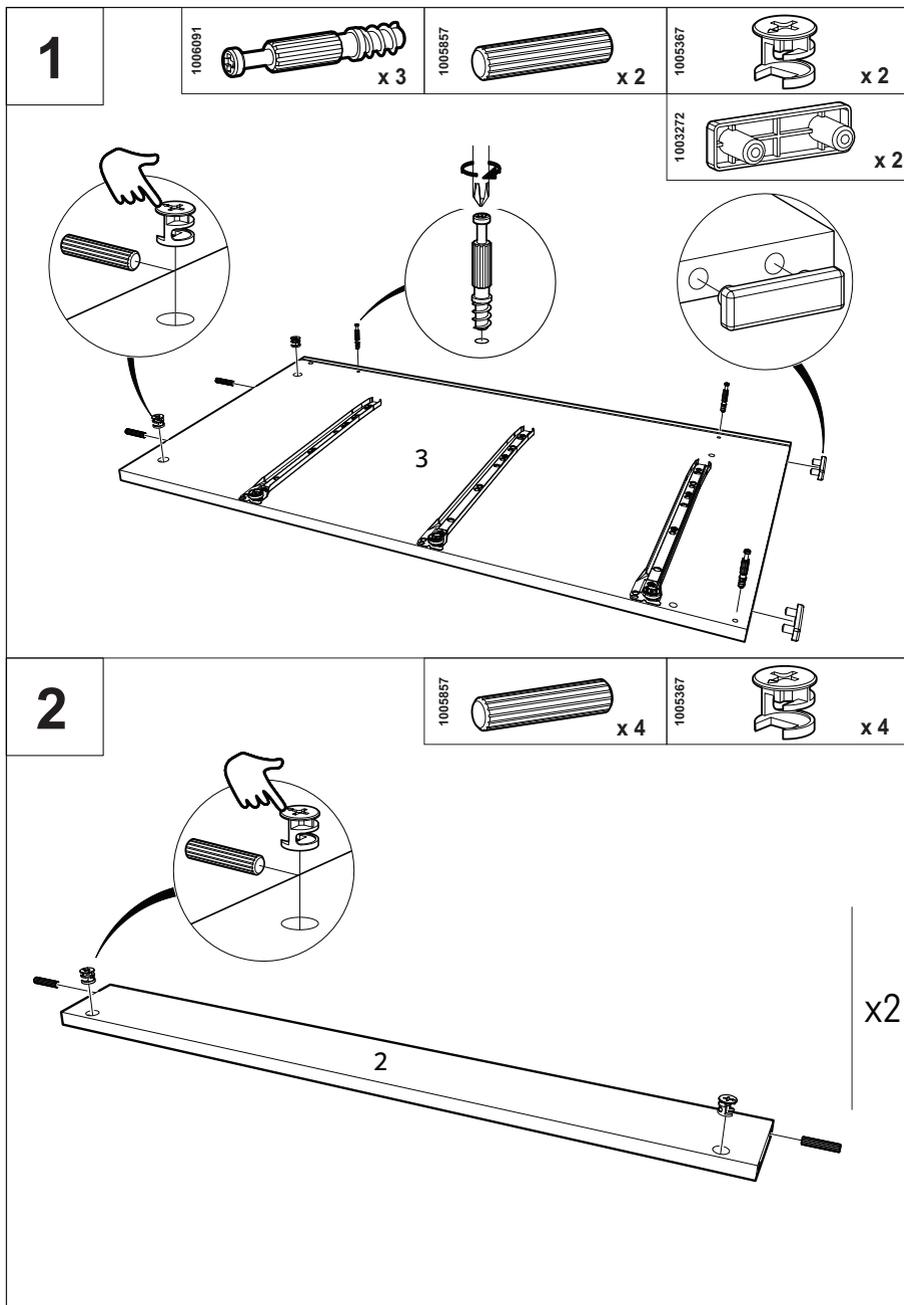

Assembling the Dresser

3

1005857




x 2



1005367




x 4

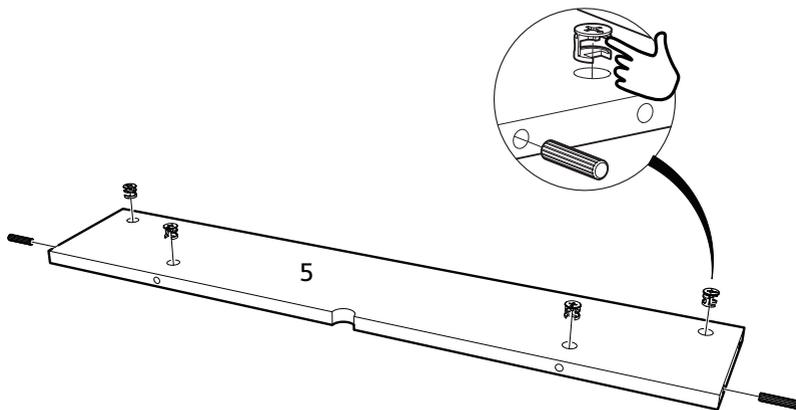

4

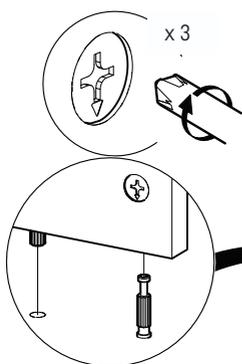 


Assembling the Dresser

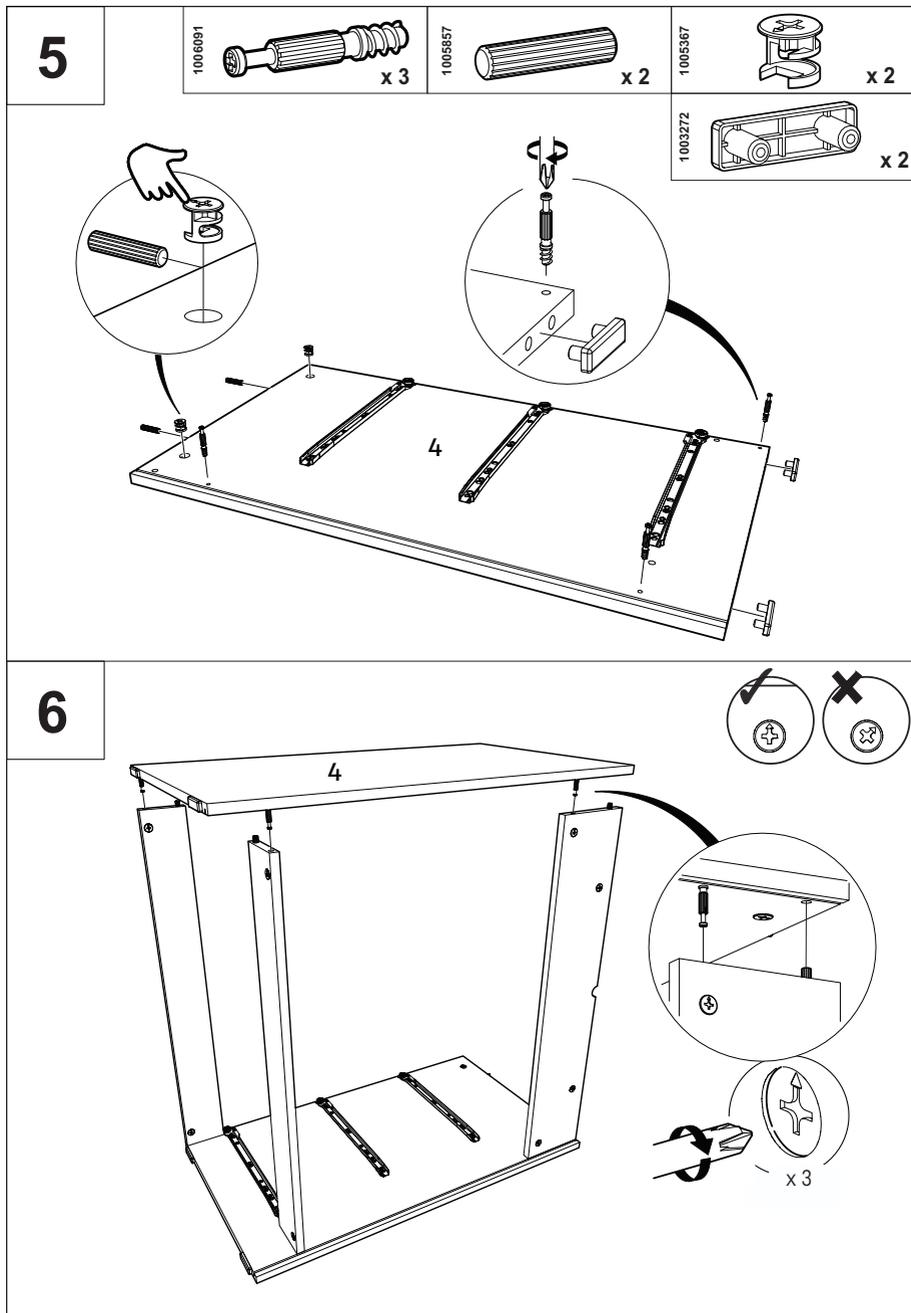

Assembling the Dresser

9

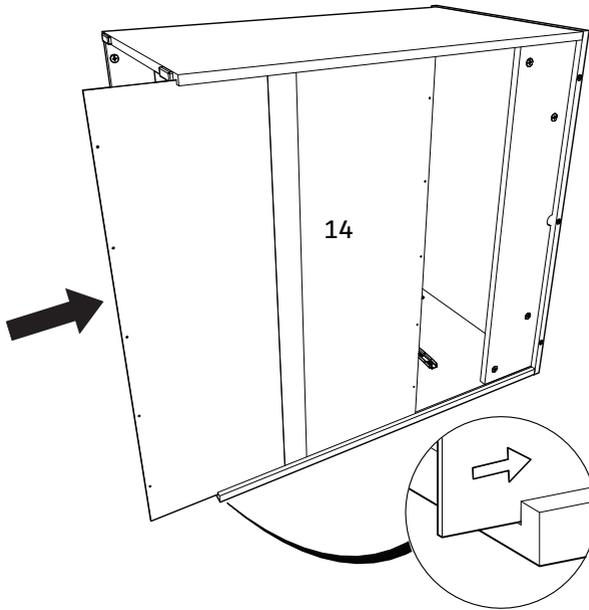


10



1006012





(3 x 16) x 10

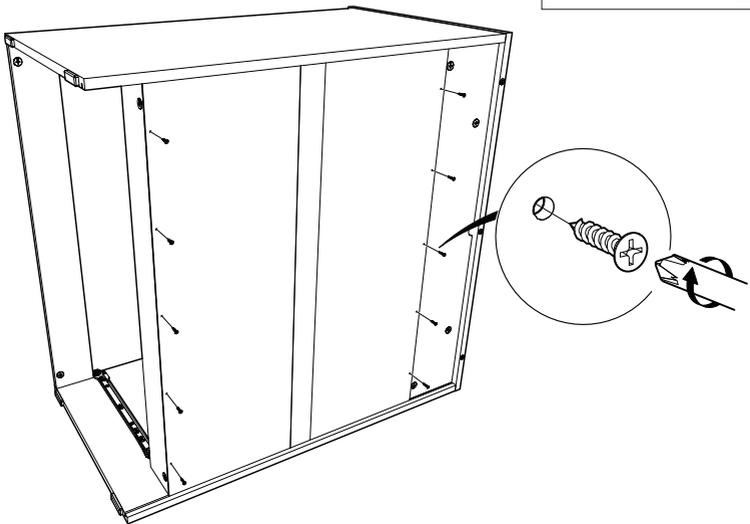



Assembling the Dresser

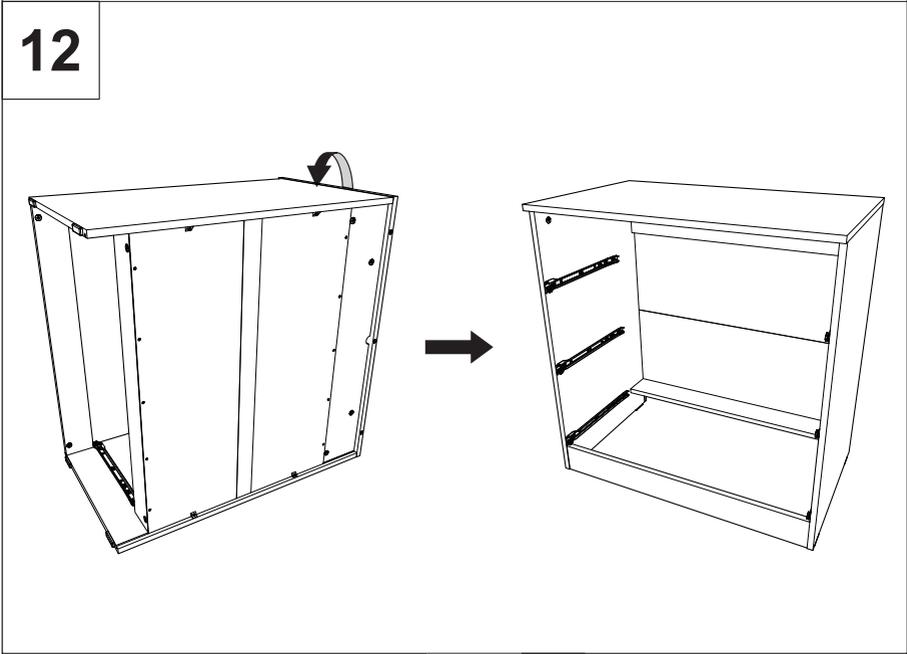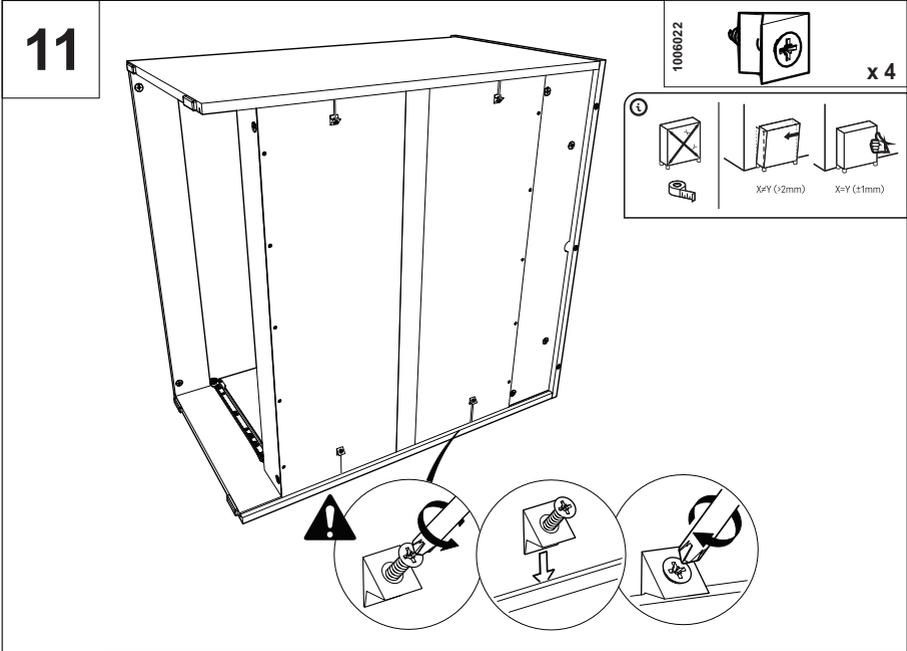

Assembling the Dresser

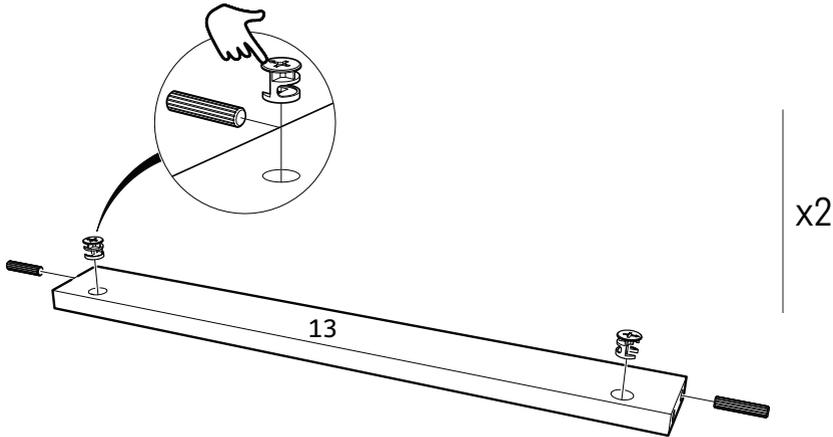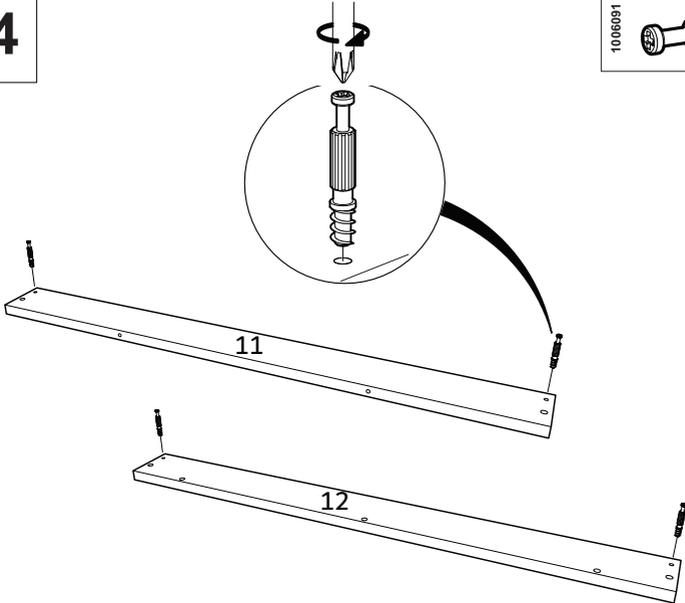13		1005857  x 4	1005367  x 4
			
14		1006091  x 4	
			


Assembling the Dresser

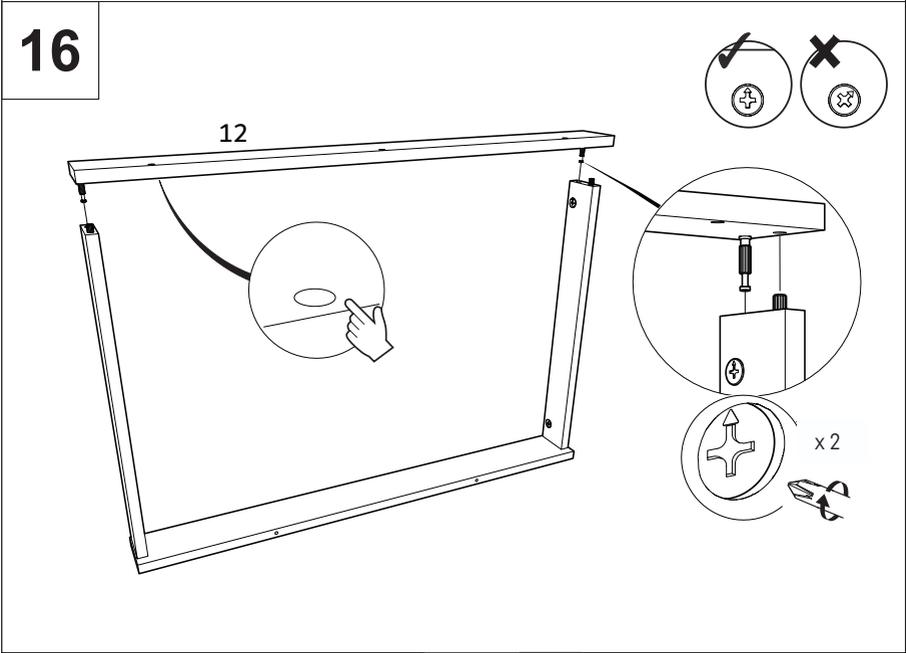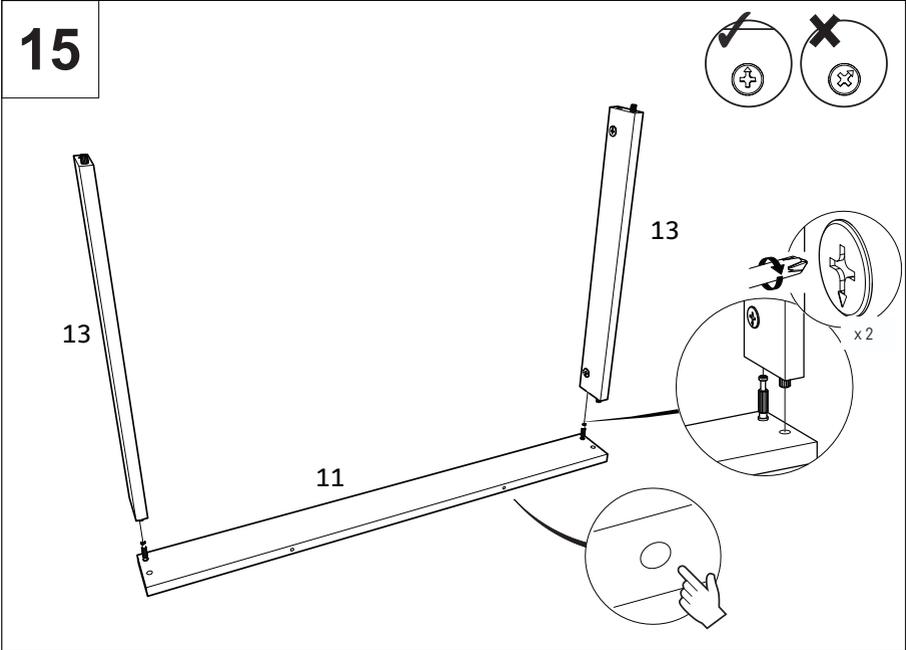

Assembling the Dresser

17

1005727
(M6 x 25) x 3

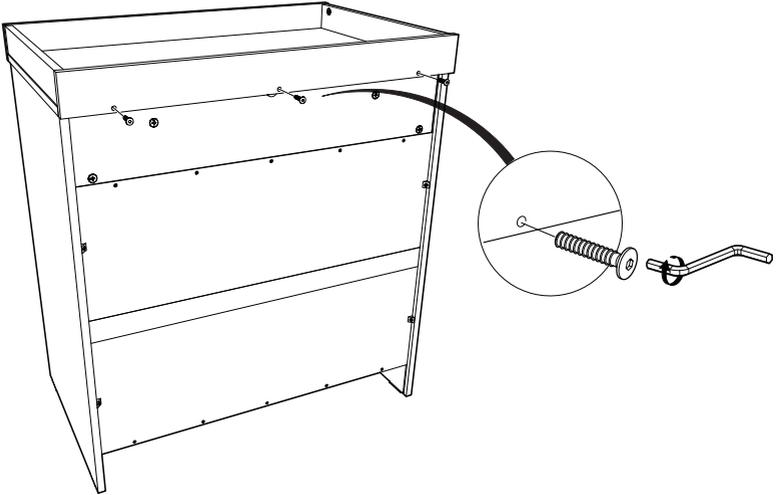


18





1115207
(3 x 10) x 4

1001786
x 2

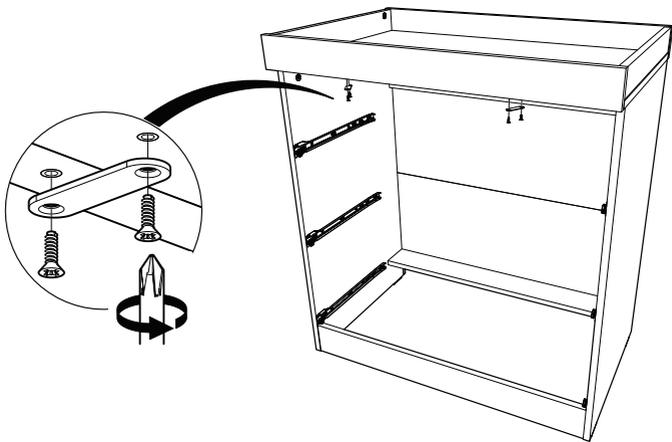

Assembling the Dresser

19

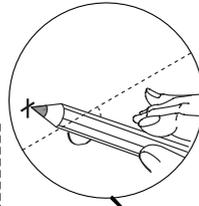
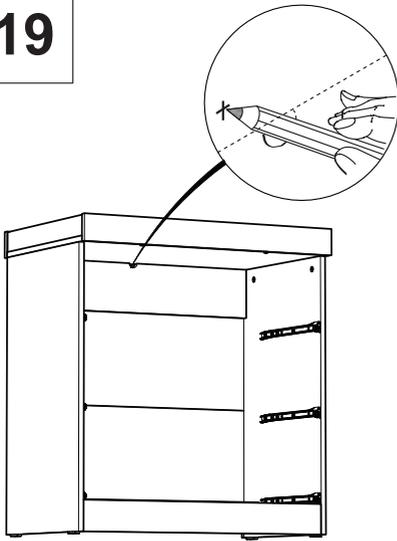


1000893




x 1

20

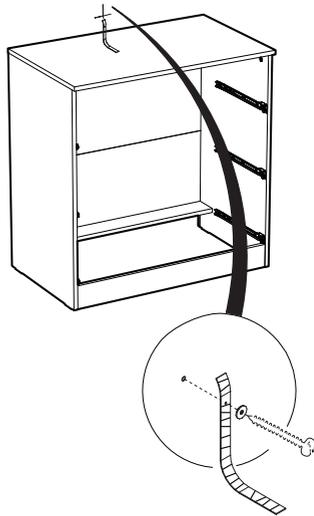
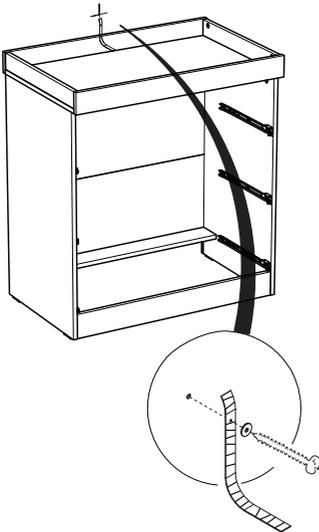


Assembling the Dresser

21

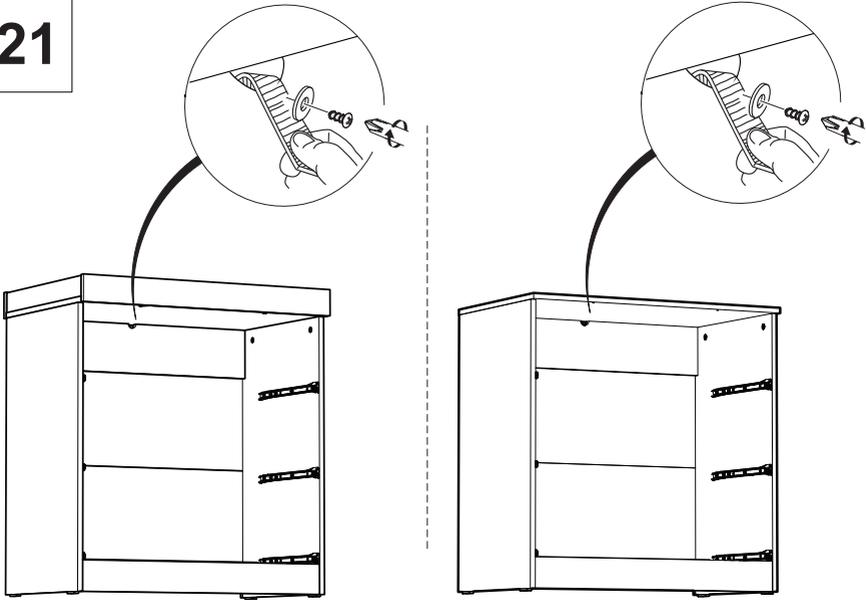

22

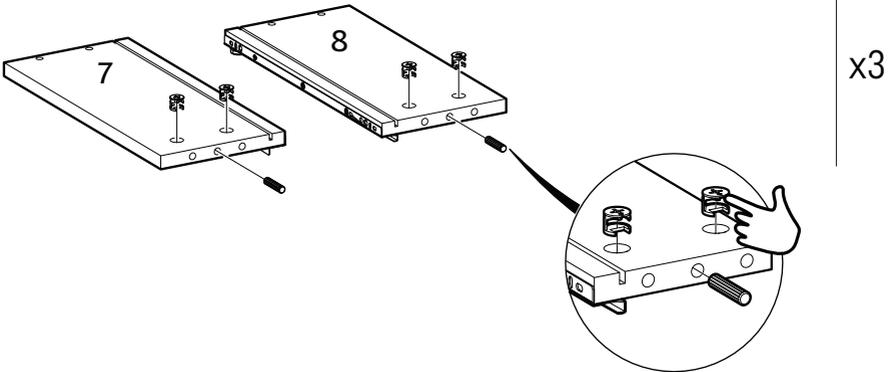 


Assembling the Dresser

23

1005876



x 12

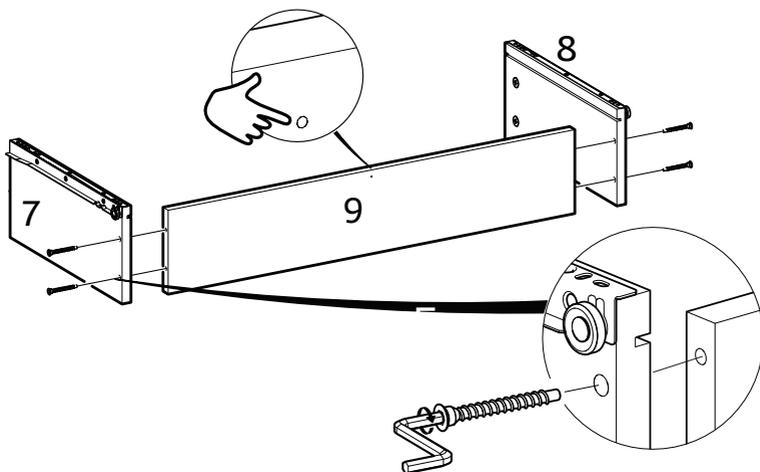


x3

24

1006091



x 12

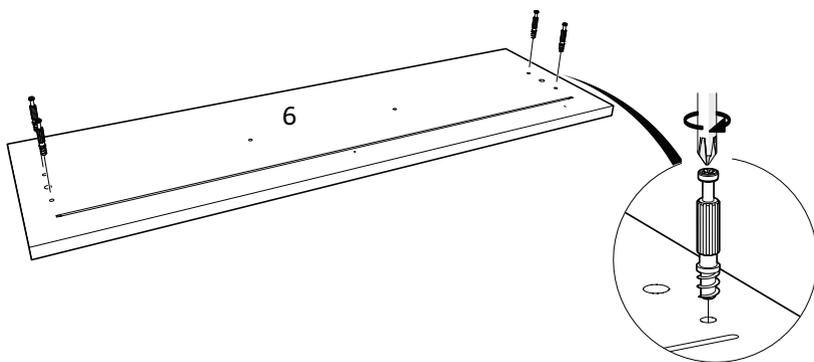

x3

Assembling the Dresser


27

1006012



(3 x 16)

x 15

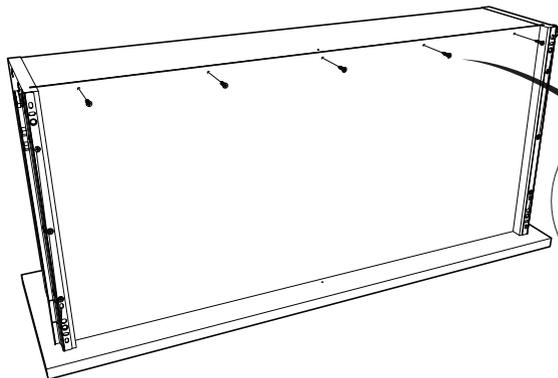

x3

28

1006012




(3 x 16)

x 6

1004049



x 3

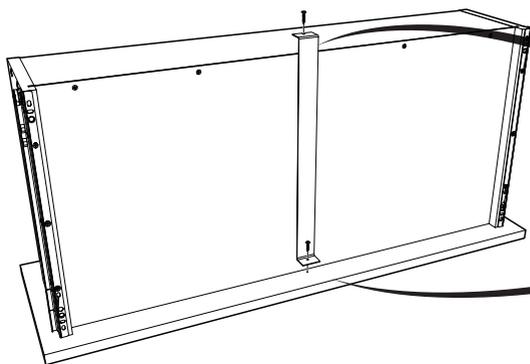


x3



Assembling the Dresser

29





 
1006031



1133252

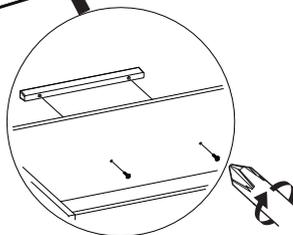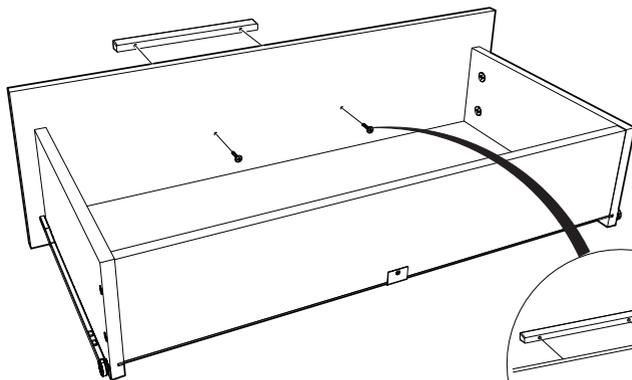

30

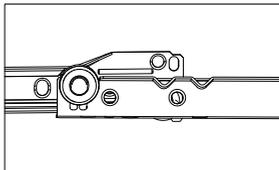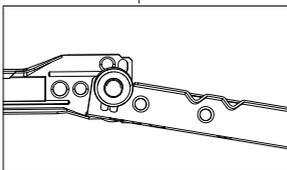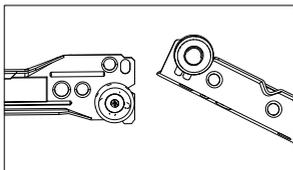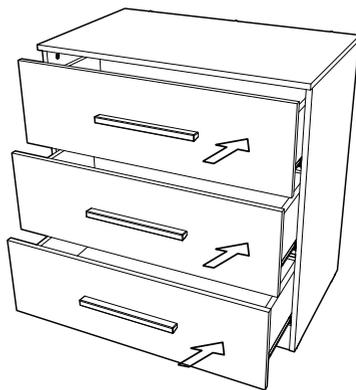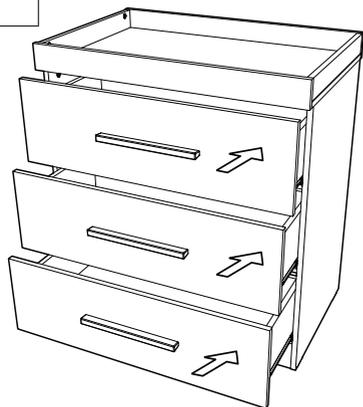



IMPORTANT – Read the instructions carefully before use and keep for future reference.

Warning: Do not leave your child unattended.

Always use the wall attachment strap provided.

All assembly fixings should always be tightened properly. Care should be taken that no screws are loose because a child could trap parts of their body, or clothing (e.g., strings, necklaces, ribbons, dummies, etc.) which could pose a risk of strangulation.

Be aware of the risk of open flames and other such sources of strong heat, such as electric bar fires, gas fires, etc. in the near vicinity of the dresser.

Suitable for use with a changing mat of max size 75 x 50 cm.

The changing area is suitable for use up to 12 months old or 11 kg in weight maximum.

DO NOT use the dresser if any of the parts are broken, torn or missing.

Any additional or replacement parts can only be obtained from the manufacturer or the distributor.

Ensure there are no small parts fittings are left after assembly as these can be a choking hazard.

This product conforms to: EN 12221-1:2008+A1:2013

Warnings

Take care when handling or moving the furniture. Careless handling may cause damage.

Regularly check that all fixings are tightened and that there are no broken or damaged parts.

Cleaning

Your dresser can be cleaned by wiping with a damp cloth and drying with a soft clean cloth.

Do not use abrasives, bleach, alcohol or ammonia-based household polishes.

A series of 20 horizontal dashed lines spanning the width of the page, intended for writing or drawing.



Imported by Online4baby Ltd.
Meadowbank, Tweedale Way, Oldham, OL9 8EH