



PUGGLE

Folding 2 in 1 Travel Trike with Parent Handle

Instruction manual

Welcome!

Thank you for purchasing the Folding 2 in 1 Travel Trike with Handle.

This instruction manual will guide you through the setup, use, and maintenance of your new trike, ensuring you get the most out of its versatile features. Please read through the following information and safety warnings carefully to fully understand and enjoy all the benefits your Folding 2 in 1 Travel Trike with Handle has to offer, and to ensure its safe operation.

We're here to help!


If you have a query with this product or require replacement parts, please contact us at the email address below.

thenurserystore.com/contact-us


Follow us on social media:

 Facebook

 Instagram

 YouTube

 TikTok

 X (formerly known as Twitter)

 Pinterest

Important Information




IMPORTANT! Your Puggle Folding 2 in 1 Travel Trike with Handle may differ slightly from images shown above and throughout, as the images used are for illustration purposes only.

Your Puggle Folding 2 in 1 Travel Trike with Handle is tested to comply with EN 71.

- Bags and other items should not be hung from the handles as this can affect the stability of the product.
- DO NOT use parts or accessories which are not approved or supplied by the manufacturer.
- DO NOT allow your child to play with this product without adult supervision.
- Ensure that the basket is emptied and any accessories are removed prior to folding.
- A basket is provided for the carriage of items evenly distributed upto a maximum of kg.
- Overloading, incorrect folding and the use of non-approved accessories is unsafe and may damage or break this product.




Safety Instructions

IMPORTANT – Read the instructions carefully before use and keep for future reference.

- **WARNING:** A child's safety is your responsibility.
- **WARNING:** Adult assembly is required.
- **WARNING:** Ensure that all components are fitted securely into place and tightened where applicable before allowing your child to play with the 2 in 1 travel trike.
- **WARNING:** Ensure that the child is supervised by an adult when using the 2 in 1 travel trike at all times, and is taught about the correct usage of the product.
- **WARNING:** Ensure that all locking devices are engaged before usage.
- **WARNING:** This product is suitable for use by one child at a time only.
- **WARNING:** DO NOT overload this product, maximum capacity is 25kg.
- Approximate age range is 18 months to 5 years.
- **WARNING:** Keep hands and other limbs away from moving parts such as the wheel to prevent entrapment and injury.
- **WARNING:** Protective equipment should be worn. Children should wear approved protective equipment e.g. helmet and correct fitting is required.
- **WARNING:** DO NOT allow a child to ride on roadways, public highways or alleys. Not to be used in traffic.
- **WARNING:** DO NOT allow a child to ride on steeply sloped areas, near steps, swimming pools, or other bodies of water.
- For use on smooth, paved surfaces only.
- Ensure that the rider keeps both hands on the handlebar at all time for proper control.
- **WARNING:** DO NOT allow a child to ride the product at dusk, at night or at times of limited visibility.
- Children should be reminded that the toy should be used with caution, since it requires skill, so as to avoid falls or collision causing injury to the user and third parties. They should also be reminded of the dangers of using this product on public highways.
- All assembly fittings should always be tightened properly, checked periodically and the care should be taken that no bolts are loose, because a child could trap parts of the body or clothing (e.g. strings, necklaces, ribbons for babies' dummies), which could pose a risk of suffocation and strangulation.
- Replace broken or worn parts immediately, only use parts supplied or approved by the manufacturer.
- This 2 in 1 Trike with Handle conforms to BS EN 71. 

Symbols and their meaning

There are a number of symbols used through this manual, please find below breakdown of what each symbol is and what it means.

	European conformity – This mark is applied to both physical product and product packaging, indicating conformity with the relevant European testing standards.
	UK Conformity Assessed – This mark is applied to both physical product and product packaging, indicating conformity with the relevant UKSI testing standards.
	Direction indicator showing direction of assembly, rotation, function.

What's in the box

x1 Puggle Folding 2 in 1 Travel Trike with Parent Handle

x1 Bell

x1 Allen Key

x1 Instruction Manual

Before Assembly


Before assembly, please ensure that you have read and understood the instructions. The carefully unpack our folding travel trike and ensure that all parts are present, please see parts list as follows.

Discard packaging in accordance with your local authority guidelines.

The folding travel trike should be assembled on a clean surface, free from any sharp objects that could mark or damage the product.

CAUTION: There are many small components used in the construction of this folding travel trike. These items should be kept out of reach of young children whilst assembling the unit.

Parts List

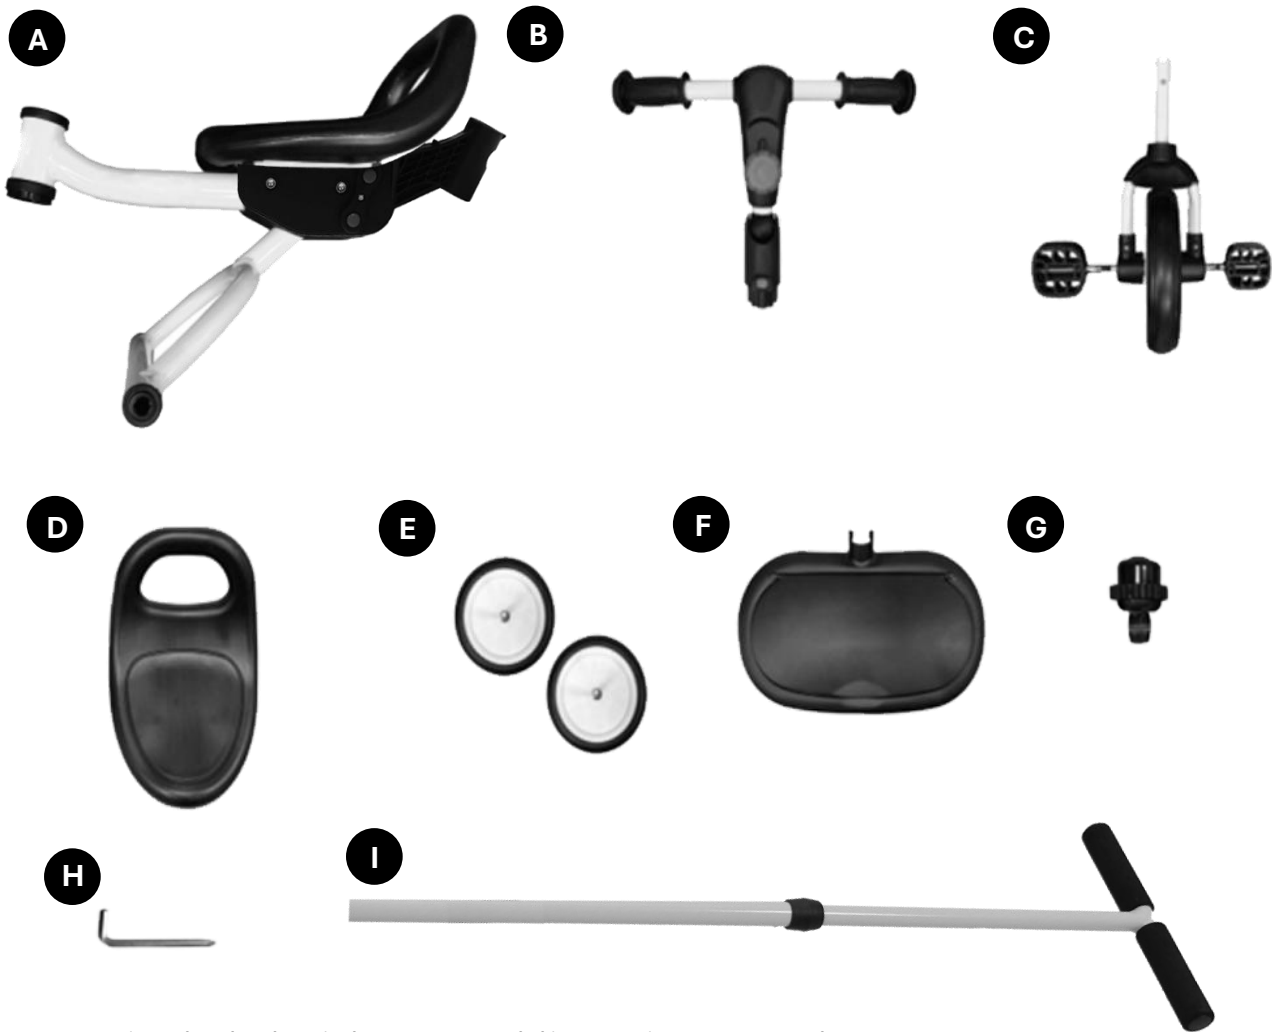

Parts included with your Folding 2 in 1 Travel Trike are:


Part	Description	Quantity
A	Chassis/frame	1
B	Handlebar	1
C	Front Wheel	1
D	Seat	1
E	Rear Wheel	2
F	Rear Basket	1
G	Bell	1
H	Allen Key	1
I	Parent Handle	1

Assembling the Folding 2 in 1 Travel Trike




1. Attach the Seat (D) to the Chassis (A) using the screws pre-attached to the Chassis (A) as shown left and tighten with the Allen Key (H).

2. Open the rear wheel part of the Chassis (A), pressing the bottom button on the Chassis (A) and then unfold as shown in the diagram below.

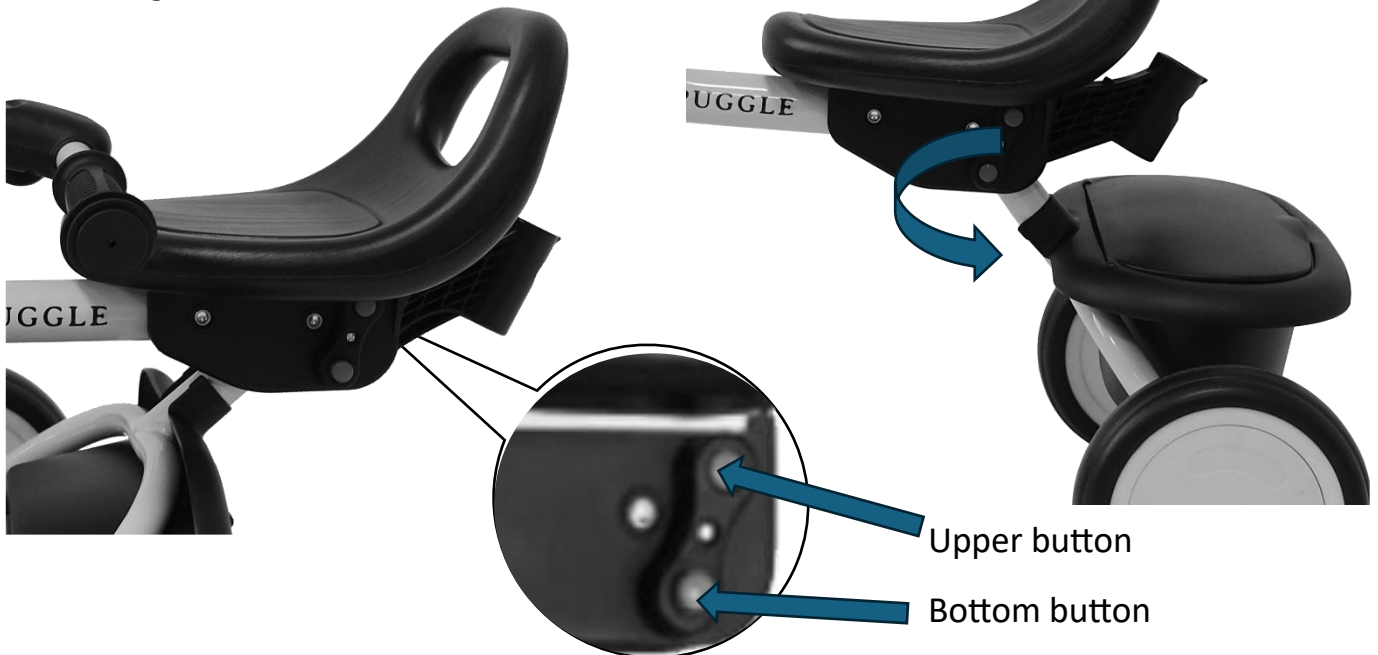

Assembling the Folding 2 in 1 Travel Trike

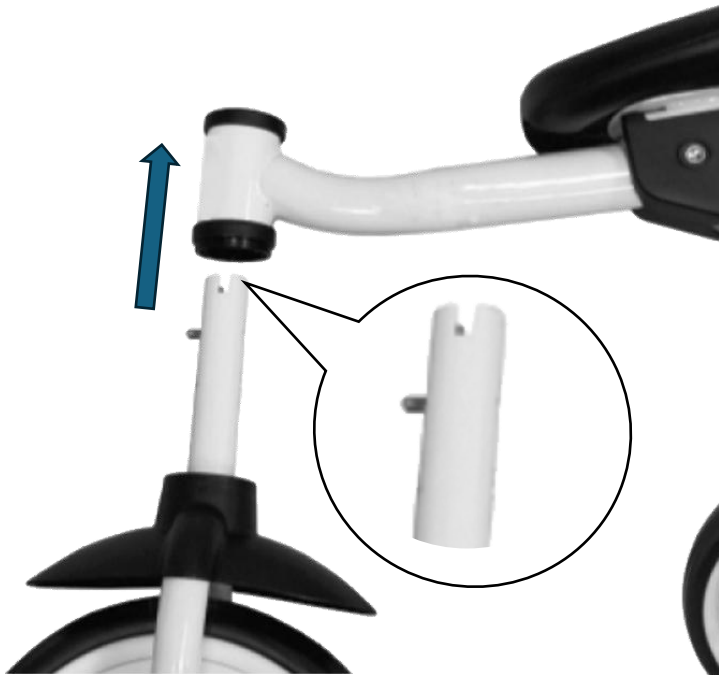

3. Attach the Front Wheel (C) to the Chassis (A) as shown left. The spring pin should be above the frame as shown below.



4. Attach the Handlebar (B) to the Front Wheel (C) and Chassis (A), ensuring that it is clicked into place. Note: the button on the Handlebar (B) will protrude indicating that the spring pin on the Front Wheel (C) is in place, gently pull up the Handlebar (B) to ensure it is securely in place.



Assembling the Folding 2 in 1 Travel Trike



5. Attach the Rear Wheels (E) to the Chassis (A), slotting the wheel axle into the corresponding slot on the frame. Ensure that the Rear Wheels (5) click securely into place, gently pull the wheel to check.

Note: To remove Rear Wheels (E) simply press the catch shown left and remove the wheel from the Chassis (A).

6. Attach the Rear Basket (F) to the Chassis (A), by slotting the Rear Basket (F) onto the metal of the Chassis (A) Ensure that it is clicked into place and gently pull the basket.
7. Attach the Bell (G) to the metal frame of the Handlebar (B) and tighten the screw to secure into place.




Assembling your Folding 2 in 1 Travel Trike



8. Insert the Parent Handle (I) into at the rear of the Chassis (A) as shown below, the spring pin should click into place and should be visible, gently pull up the Parent Handle (I) to ensure securely in place.

Note: To remove press the spring pin in and pull up on the Parent Handle (I) and remove from the Chassis (A).


9. To adjust the height of the Parent Handle (I), you can select from 1 of the 3 variable height positions by pressing the spring pin and pulling the handle up or down to the desired height. The spring pin will pop back out to indicate height position is clicked into place.

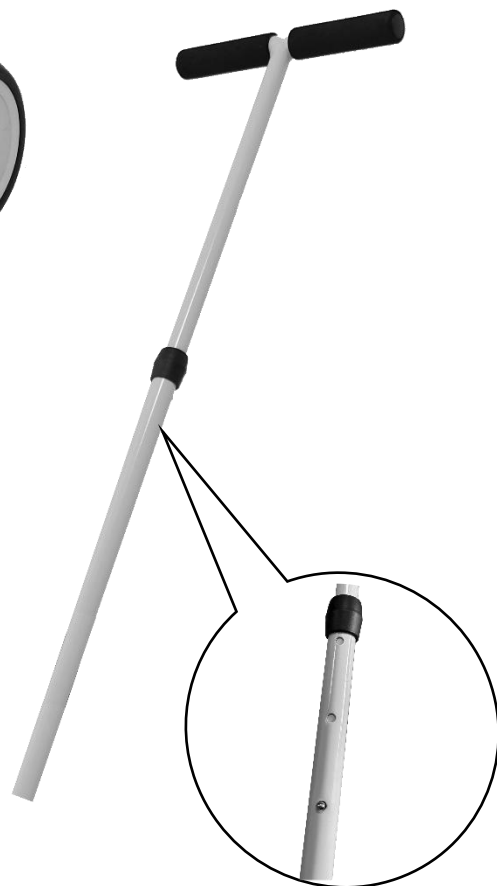

Folding your Folding 2 in 1 Travel Trike



1. Loosen the button on the Handlebar (B), by turning anti-clockwise and lift upwardly. The Handlebar (B) can now be folded as shown below.

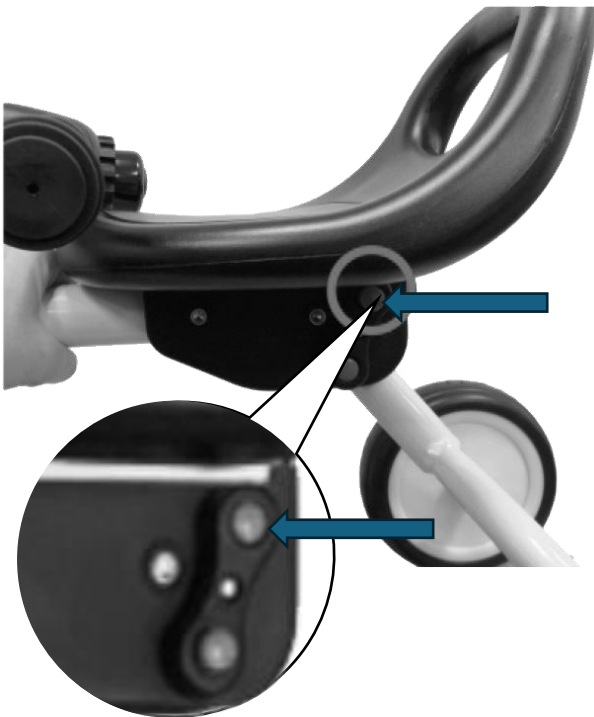

2. Remove the Parent Handle (I) from the housing on the rear of the Chassis (A). Press the Upper button on the Chassis (A), the rear wheel part of the chassis can now be folded inwards as shown below.



Care and Maintenance

Cleaning

- Scuff marks may be removed with a soft, damp cloth.
- DO NOT use harsh or abrasive cleaners or bleaches on this product, as they may damage the product.

Maintenance

- Periodically check all fixings to ensure they remain tight and tighten where required.
- Regularly inspect the wheels, locks, harness, catches, seat adjusters, joints and fixings to ensure they are clean, operating correctly and in full working order.
- Do not use this product if any part is broken, torn or missing and use only spares provided by the manufacturer.
- If parts become stiff or difficult to operate, ensure dirt is not the cause, then try a light application of a silicon lubricant, ensuring it penetrates between the components. Regular lubrication of moving parts will extend the life of your product and make opening and folding easier.
- After exposure to damp conditions, dry off with a soft cloth and leave fully open in a warm environment. Storing damp will encourage mildew to form.
- Store in a dry place.
- Do not leave in sunlight for prolonged periods as some colours may fade.

Troubleshooting Tips

Issue	Possible Root Cause	Solution
Joints are stiff, in particular elbow joint	Lack of lubricant	Lubricate joint as per the instructions in the maintenance section.
Spring Pin is missing	Spring Pin may have become lodged within the tubing	Using a pair of long nose pliers, carefully replace the spring pin into position.

For any and all other product issues not covered in the above please contact our dedicated customer services team at the below web address and they will hope to resolve any queries that you may have as soon as possible.

thenurserystore.com/contact-us

Recycling the packaging

When you've unpacked your product and have ensured that all parts are present, please discard packaging components in accordance with your local authority guidelines, for further information please check the material and your postcode at

<https://www.recyclenow.com/recycle-an-item>. Your packaging will include the following materials;

Carton – 5Ply Corrugated Paper – Widely recycled in your card and paper bin

WARRANTY

Thank you for purchasing your Puggle product.

At the nursery store we endeavour to provide quality, affordable products and as such we look to provide you as a proud parent with peace of mind that your Puggle product comes with a standard 12 months warranty

Your Puggle product is guaranteed for 12 months from the date of original purchase. If any defects should arise due to faulty workmanship or material, your faulty product should be returned to us and repair, replacement or refund will be at our discretion based upon thorough investigation from our QA team.

The guarantee is subject to the following provisions:

- The product must be assembled correctly and operated in accordance with the requirements contained within the instruction manual.
- The product must be solely used for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The warranty is rendered invalid if the product has been resold or has been damaged through inexpert repair.
 - The warranty is only valid within the UK.

You do not need to validate your 12 month warranty, it will be effective as of initial purchase date or if you notify us in advance your baby's due date.

For full terms and conditions please see online at,
www.thenurserystore.com/s/12-month-product-warranty-registration

PUGGLE

thenurserystore.com

Imported by Online4baby Ltd.

Meadowbank, Tweedale Way, Oldham, OL9 8EH