

**PUGGLE**

**PUGGLE**

[thenurserystore.com](http://thenurserystore.com)

Imported by Online4baby Ltd.

Meadowbank, Tweedale Way, Oldham, OL9 8EH

# **Designer Double Twin 4 in 1 Trike**

**Instruction manual**

## *Welcome!*

Thank you for purchasing the Puggle Designer Double Twin 4 in 1 Trike.

This instruction manual will guide you through the setup, use, and maintenance of your new trike, ensuring you get the most out of its versatile features. Please read through the following information and safety warnings carefully to fully understand and enjoy all the benefits your Twin 4 in 1 Trike has to offer, and to ensure its safe operation.

## **We're here to help!**


If you have a query with this product or require replacement parts, please contact us at the web address below.

[thenurserystore.com/contact-us](https://thenurserystore.com/contact-us)


## **Follow us on social media:**

 Facebook

 Instagram

 YouTube

 TikTok

 X (formerly known as Twitter)

 Pinterest

### *Important Information*



IMPORTANT! Your Designer Double Twin 4 in 1 Trike may differ slightly from images shown above and throughout, as the images used are for illustration purposes only.

Your Designer Double Twin 4 in 1 Trike is tested to comply with EN 71.

- Bags and other items should not be hung from the handles as this can affect the stability of the product.
- DO NOT use parts or accessories which are not approved or supplied by the manufacturer.
- DO NOT allow your child to play with this product without adult supervision.
- Ensure that both the basket and bag is emptied and any accessories are removed prior to folding.
- A basket is provided for the carriage of items evenly distributed upto a maximum of 1 kg.
- A bag is provided for the carriage of items evenly distributed upto a maximum of 1 kg.
- Overloading, incorrect folding and the use of non-approved accessories is unsafe and may damage or break this product.
- If a raincover is supplied, do not leave the raincover on indoors, in a hot atmosphere or near a heat source as your child may overheat.
- To prevent damage, remove the raincover before folding.
- Do not place anything on top of the raincover.

*Safety Instructions*

**IMPORTANT – Read the instructions carefully before use and keep for future reference.**

- **WARNING:** A child’s safety is your responsibility.
- **WARNING:** Adult assembly is required.
- **WARNING:** Ensure that all components are fitted securely into place and tightened where applicable before allowing your child to play with the Twin 4 in 1 trike.
- **WARNING:** Ensure that the child is supervised by an adult when using the Twin 4 in 1 trike at all times, and is taught about the correct usage of the product.
- **WARNING:** Ensure that all locking devices are engaged before usage.
- **WARNING:** This product is suitable for use by one child at a time only.
- **WARNING:** DO NOT overload this product, maximum capacity is 25kg.
- Approximate age range is 9 months to 5 years.
- **WARNING:** Keep hands and other limbs away from moving parts such as the wheel to prevent entrapment and injury.
- **WARNING:** Protective equipment should be worn. Children should wear approved protective equipment e.g. helmet and correct fitting is required.
- **WARNING:** DO NOT allow a child to ride on roadways, public highways or alleys. Not to be used in traffic.
- **WARNING:** DO NOT allow a child to ride on steeply sloped areas, near steps, swimming pools, or other bodies of water.
- For use on smooth, paved surfaces only.
- Ensure that the rider keeps both hands on the handlebar at all time for proper control.
- **WARNING:** DO NOT allow a child to ride the product at dusk, at night or at times of limited visibility.
- Children should be reminded that the toy should be used with caution, since it requires skill, so as to avoid falls or collision causing injury to the user and third parties. They should also be reminded of the dangers of using this product on public highways.
- All assembly fittings should always be tightened properly, checked periodically and the care should be taken that no bolts are loose, because a child could trap parts of the body or clothing (e.g. strings, necklaces, ribbons for babies’ dummies), which could pose a risk of suffocation and strangulation.
- Replace broken or worn parts immediately, only use parts supplied or approved by the manufacturer.
- This Puggle Designer Double Twin 4 in 1 Trike conforms to BS EN 71.



*Notes*

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

**WARRANTY**

Thank you for purchasing your Puggle product.

At the nursery store we endeavour to provide quality, affordable products and as such we look to provide you as a proud parent with peace of mind that your Puggle product comes with a standard 12 months warranty

Your Puggle product is guaranteed for 12 months from the date of original purchase. If any defects should arise due to faulty workmanship or material, your faulty product should be returned to us and repair, replacement or refund will be at our discretion based upon thorough investigation from our QA team.

The guarantee is subject to the following provisions:




- The product must be assembled correctly and operated in accordance with the requirements contained within the instruction manual.
- The product must be solely used for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The warranty is rendered invalid if the product has been resold or has been damaged through inexpert repair.
- The warranty is only valid within the UK.

You do not need to validate your 12 month warranty, it will be effective as of initial purchase date.

For full terms and conditions please see online at, [www.thenurserystore.com/s/12-month-product-warranty-registration](http://www.thenurserystore.com/s/12-month-product-warranty-registration)

*Symbols and their meaning*

There are a number of symbols used through this manual, please find below breakdown of what each symbol is and what it means.

	European conformity – This mark is applied to both physical product and product packaging, indicating conformity with the relevant European testing standards.
	UK Conformity Assessed – This mark is applied to both physical product and product packaging, indicating conformity with the relevant UKSI testing standards.
	Direction indicator showing direction of assembly, rotation, function.

*What's in the box*

**x1 Puggle Designer Double Twin 4 in 1 Trike**

**x1 Instruction Manual**

*Before Assembly*


Before assembly, please ensure that you have read and understood the instructions. Then carefully unpack your Designer Double Twin 4 in 1 Trike and ensure that all parts are present, please see parts list as follows.

Discard packaging in accordance with your local authority guidelines.

The Designer Double Twin 4 in 1 Trike should be assembled on a clean surface, free from any sharp objects that could mark or damage the product.

CAUTION: There are many small components used in the construction of this folding travel trike. These items should be kept out of reach of young children whilst assembling the unit.

Parts List

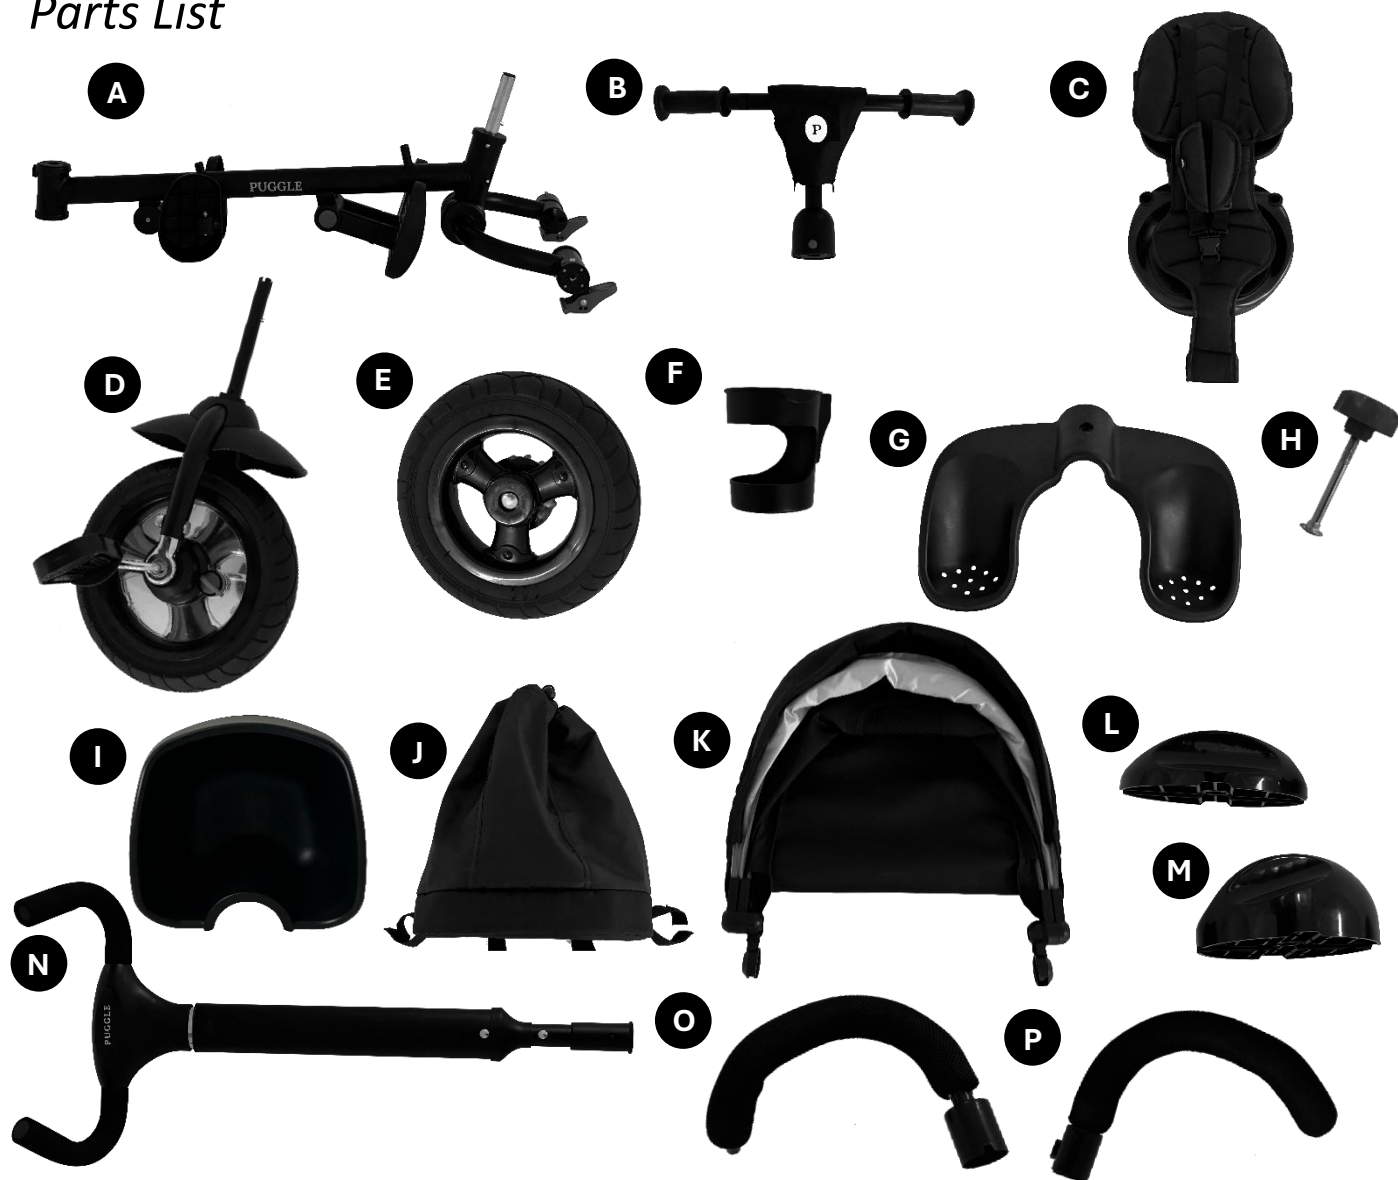

Parts included with your Designer Double Twin 4 in1 Trike are:

Part	Description	Quantity	Part	Description	Quantity
A	Chassis/frame	1	I	Basket	1
B	Handlebar	1	J	Bag	1
C	Seat	2	K	Canopy	2
D	Front Wheel	1	L	Front Seat Mount	1
E	Rear Wheel	2	M	Rear Seat Mount	1
F	Cup Holder	1	N	Parent Handle	1
G	Footrest	1	O	Bumper Bar (L)	2
H	Bolt	1	P	Bumper Bar (R)	2

Troubleshooting Tips

Issue	Possible Root Cause	Solution
Joints are stiff, in particular elbow joint	Lack of lubricant	Lubricate joint as per the instructions in the maintenance section.
Parts do not click into place	Parts incorrectly or not fully adjusted/inserted.	Follow assembly/folding instructions as above closely.

For any and all other product issues not covered in the above please contact our dedicated customer services team at the below web address and they will hope to resolve any queries that you may have as soon as possible.

[thenurserystore.com/contact-us](http://thenurserystore.com/contact-us)

Recycling the packaging

When you've unpacked your product and have ensured that all parts are present, please discard packaging components in accordance with your local authority guidelines, for further information please check the material and your postcode at <https://www.recyclenow.com/recycle-an-item>. Your packaging will include the following materials;

- Carton – 5Ply Corrugated Paper – Widely recycled in your card and paper bin
- Polybag – PE Plastic – Recycle with bags at large supermarkets

## Care and Maintenance

### Cleaning

- Scuff marks may be removed with a soft, damp cloth.
- DO NOT use harsh or abrasive cleaners or bleaches on this product, as they may damage the product.

### Maintenance

- Periodically check all fixings to ensure they remain tight and tighten where required.
- Regularly inspect the wheels, locks, harness, catches, seat adjusters, joints and fixings to ensure they are clean, operating correctly and in full working order.
- Do not use this product if any part is broken, torn or missing and use only spares provided by the manufacturer.
- If parts become stiff or difficult to operate, ensure dirt is not the cause, then try a light application of a silicon lubricant, ensuring it penetrates between the components. Regular lubrication of moving parts will extend the life of your product and make opening and folding easier.
- After exposure to damp conditions, dry off with a soft cloth and leave fully open in a warm environment. Storing damp will encourage mildew to form.
- Store in a dry place.
- Do not leave in sunlight for prolonged periods as some colours may fade.

## Assembling the Designer Double Twin 4 in 1 Trike

1. Insert the Front Wheel (D) into the Chassis (A) as shown in the diagram right.



2. Insert the Handlebar (B) onto the Chassis (A) until it clicks into place. Pull up on the Handlebar (B) to ensure it is securely in place.

Note: To remove Handlebar (B), press the release button on the front of the Handlebar (B) as shown below and then pull up to remove.



Fig. 1

3. Insert both of the Rear Wheels (E) into the corresponding slots on the Chassis (A) as shown below right, they will click into place. Gently pull the Rear Wheel (E) to ensure that it is securely in place.

Note: To remove the Rear Wheels (E), press the release catch (image shown below) on the Chassis (A) and pull the Rear Wheel (E) away from the Chassis (A).



Fig. 2



### Assembling the Designer Double Twin 4 in 1 Trike

4. Sit both the Front Seat Mount (L) and the Rear Seat Mount (M) onto the Chassis (A) as shown right.



5. Sit the Footrest (G) onto the Chassis (A) as shown left.

6. Attach the Footrest (G) to the Chassis (A), using the Bolt (H), insert the top of the Bolt (H) through the hole on the top of the Footrest (G) and tighten the nut by rotating clockwise until securely in place as shown right.



### Folding the Designer Double Twin 4 in 1 Trike

To fold the trike, remove the Parent Handle (N) and collapse into the lowest height position, fold both Seats (C) forwards using the button on the backrest and then fold forwards. The Seats (C) can be removed of their fabric and the Canopies (K) can either be fully removed or can be folded backwards so that it rests on the Seat (C) snugly. Press the button on the underside of the rear of the Chassis (A) close to where the Parent Handle (N) sits, fold the rear wheel axle of the Chassis forwards to complete the folding as per the below image and store away in a cool, dry place.



*Seat Configuration of the Designer Double Twin 4 in 1 Trike*



Facing Each Other

Forward Facing – No Canopy



Forward Facing – No Canopy/Bumper Bar

*Assembling the Designer Double Twin 4 in 1 Trike*

7. Unfold the front footrest. To release unfold the footrest as shown below in Fig. 3, then push the folding mechanism down as shown below in Fig. 4 and fold the footrest down as shown below in Fig. 5 into the open position (it will click to lock into place).

Note : To Fold simply repeat the above in reverse.

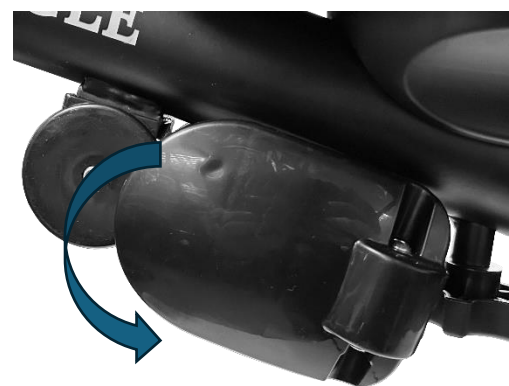


Fig. 3



Fig. 4



Fig. 5

8. Unfold the rear footrest. To unfold press the button on the elbow joint and then unfold as shown right.

Note: To fold simply repeat the above in reverse.




9. Attach the Seat (C) to the Chassis (A) shown right by unscrewing the nut on the base of the Seat (C) and then sit the Seat (C) on the Front Seat Mount (L). Fix into place using the nut removed earlier and tighten, ensuring that the seat is not loose.

*Assembling the Designer Double Twin 4 in 1 Trike*

10. Attach the remaining Seat (C) as per the previous step.

Note: The backrest can be adjust according to the desired position of the child, by pressing the button on the back of the Seat (C) and then moving the back of the seat forwards or backwards until it clicks into the desired position.

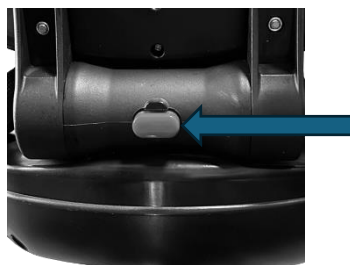

11. Attach the Canopy (K) to the Seat (C) by slotting onto the canopy mounts on either side of the Seat (C).

Note: To remove simply pull the Canopy (K) up and free from the Seat (C).



12. Attach the remaining Canopy (K) as per the previous step.



*Assembling the Designer Double Twin 4 in 1 Trike*

21. When using the Parent Handle (N) the Front Wheel (D) can be locked so that the Handlebar (B) does not adjust the direction of travel. To lock/unlock the Front Wheel (D), rotate the lock as shown right until it clicks into place.



*Seat Configuration of the Designer Double Twin 4 in 1 Trike*

The Seats (C) can be installed in a number of positions, as shown below. To adjust the Seat (C) configuration, unscrew the bolt on the underside of the Chassis (A) and then the Seat (C) can either be pulled forward, pushed back or rotated to have both Seats (C) forward facing, facing each other or parent facing.



Forward Facing



Parent Facing

*Assembling the Designer Double Twin 4 in 1 Trike*

18. Attach the Cup Holder (F) to the Parent Handle (N) as per the above steps.



19. Attach the Bag (J) to both the Chassis (A) and the Parent Handle (N) using the Velcro straps on the Bag (J).

Note: To secure contents in the Bag (J), tighten the drawstring at the top of the bag and release when required to remove contents.



20. When using the Parent Handle (N), the Chassis (A) is fitted with dual brake pedals located on either side of the Chassis (A) as shown right.

Note: To fully engage the brake shown as shown below, push down on both the left and right brake pedals as they do not work in conjunction with each other.

Note: To disengage, using your toe push the brake up and it will click into the disengaged position and the wheels will now turn freely.



*Assembling the Designer Double Twin 4 in 1 Trike*

13. Unfold the Canopy (K) as far as possible, however the fabric will not be taught as shown below in Fig. 6. To tighten locate the inner ribs of the Canopy (K) Fig. 7 and push the outwardly facing ribs on either side and it will click into place. The Canopy (K) should now be fully extended and taught as per Fig. 8



Fig.6



Fig.7



Fig. 8

14. Attach the Bumper Bar R (P) to the Seat (C), by pushing the end with the spring pin into the corresponding hole on the Seat (C) as shown below in Fig. 6. Push the Bumper Bar R (P) in until the spring pin clicks into place in the Seat (C) housing as per Fig. 7 below. Slot the Bumper Bar R (P) through the centre of the crotch strap on the Seat (C) as shown below in Fig. 8. Attach the Bumper Bar L (O) as per the above steps and then attach to the Bumper Bar R (P) as shown in Fig. 9, pull on both sides to check securely in place.



Fig. 6



Fig. 7



Fig. 8

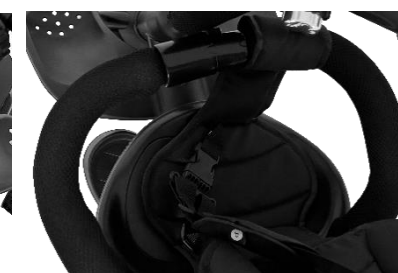


Fig. 9

Assembling the Designer Double Twin 4 in 1 Trike

15. Attach the remaining Bumper Bar L (O) and Bumper Bar R (P) as per the above steps.



16. Attach the Parent Handle (N) to the protruding part on the rear of the Chassis (A) as shown left and Fig. 10 below. It will click into place to indicate the spring pin is in place as shown in Fig. 11 below. Gently pull up on the Parent Handle (N) to ensure it is securely in place and then lift the release catch up and over as shown in Fig. 12 below.



Fig. 10



Fig. 11



Fig. 12

Assembling the Designer Double Twin 4 in 1 Trike

Note: To remove the Parent Handle (N) simply lower the catch as shown in Fig. 13 and ensure that the spring pin is recessed and lift the Parent Handle (N) up and away from the Chassis (A).



Fig. 13

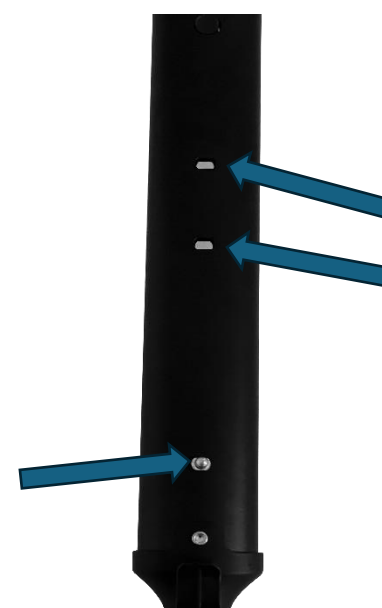


Fig. 14

Note: To adjust the Parent Handle (N) height simply press the spring pin in on the back of the Parent Handle (N) and move up or down accordingly until the spring pin locks into place in one of the 3 height settings as shown in Fig. 14.

17. Attach the Basket (I) to the Chassis (A), slot the Basket (I) onto the Chassis (A) ensuring that the recess on the inner lip of the Basket (I) as shown in Fig. 15 below aligns with the mount on the Chassis (A) as shown in Fig. 16 below. Ensure the basket is securely in place as shown in Fig. 17 below.



Fig. 15



Fig. 16



Fig. 17