 


# Eco Hiker 3 Wheel Pushchair

Instruction manual

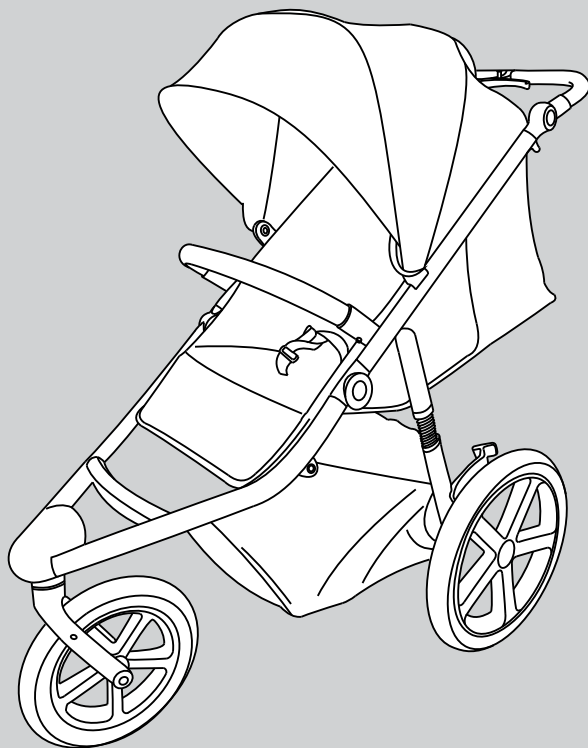

**IMPORTANT! READ CAREFULLY  
AND KEEP FOR FUTURE REFERENCE.**

**Warning:** A child's safety is your responsibility.

This product is tested and approved to  
EN1888-2:2018+A1:2022



# 1. Welcome

Thank you for purchasing the Puggle Eco Hiker 3 Wheel Pushchair.

Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of your Puggle Eco Hiker 3 Wheel Pushchair.

If you have a query with this product or require replacement parts, please contact Online4baby online at [online4baby.com/contact-us](http://online4baby.com/contact-us).

## 2. Safety instructions

### **IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.**

Before using, remove and dispose of any plastic bags and other packaging (e.g. fasteners, fixing ties, etc.) and keep them out of reach of children.

- **WARNING!** Please ensure that you follow the instructions enclosed as failure to do so may result in potential injury to the child.
- **WARNING!** This vehicle is intended for one child from birth up to a maximum weight of 22kg or 4 years, whichever comes first.
- **WARNING!** Stroller is not suitable for children under 6 months when angle of seat and backrest is less than 150 degrees.
- **WARNING!** Use the most reclined position for newborn babies.
- **WARNING!** Never leave the child unattended.
- **WARNING!** Ensure that all locking devices are engaged before use.
- **WARNING!** To avoid injury ensure that your child is kept away when unfolding and folding this product.
- **WARNING!** Do not let your child play with this product.
- **WARNING!** ALWAYS USE THE HARNESS RESTRAINT SYSTEM.
- **WARNING!** Always use the crotch strap in combination with the waist belt section of the harness.
- **WARNING!** This product is not suitable for running or skating.
- **WARNING!** Any load attached to the handle affects the stability of the stroller.
- **WARNING!** Your child's safety is your responsibility.
- Do not let children play with or hang on the stroller.
- Do not overload this stroller with additional children, goods or accessories.
- Bags and other items should not be hung from the handle as this can affect the stability of the stroller.
- Overloading, incorrect folding and the use of non-approved accessories is unsafe and may damage or break this stroller.
- Do not use parts or accessories which are not approved by the manufacturer.
- Always apply the parking brake when the stroller is stationary.


## 2. Safety instructions

- Ensure the parking brake is engaged during the loading and unloading of children.
- Do not allow your child to climb into the stroller.
- Never leave raincover on indoors, in a hot atmosphere or near a heat source as your child may overheat.
- Be careful when going up or down kerbs.
- Remove your child and fold the stroller when going up or down escalators or flights of stairs.
- If your stroller is used by someone unfamiliar with it e.g. Grandparents, always show them how it works.
- Do not use this stroller near an open fire or exposed flame.
- Take care in windy conditions.
- To prevent damage, always remove the raincover before folding the stroller.
- Do not place anything on top of the raincover.
- To prevent your child overheating, always fold or remove raincover when indoors or in warm environments.
- The maximum weight that can be carried in the storage basket is 5kg evenly distributed.
- The maximum weight that can be carried in the back canopy pocket is 0.5kg evenly distributed.

This product conforms to EN 1888-2:2018+A1:2022

### 3. Parts List - Stroller


A

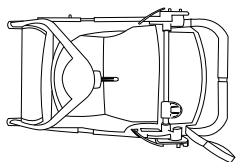

B



C

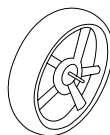


D




E



F

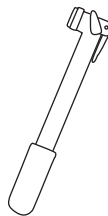

G

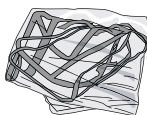

#### Contained in your carton are:

Nº	Part	Qty
A	Stroller	1
B	Front wheel	1
C	Rear wheels	2
D	Canopy	1
E	Bumper bar	1
F	Tyre pump	1
G	Raincover	1

## 4. Unfolding

### 4.1. UNFOLDING STROLLER

Unpack all contents and check that all parts are present before starting assembly. Please refer to the parts list.

#### **WARNING!**

**Keep children away from stroller while unfolding.**



1. Position the jogger (A) with the seat facing up and the handle bar closest to you.
2. If necessary, release the locking latch located on the lower right side by lifting the latch off of the catch.
3. Pull up on the handle bar so that the jogger unfolds to its upright and locked position.
4. Ensure that the jogger is completely opened and the latching mechanism is secured before ANY further assembly or use of the stroller.

#### **WARNING!**

**To avoid injury ensure that your child is kept away when unfolding and folding this product.**

#### **CAUTION!**

**While unfolding the jogger, be careful to keep your fingers from being pinched by moving parts.**

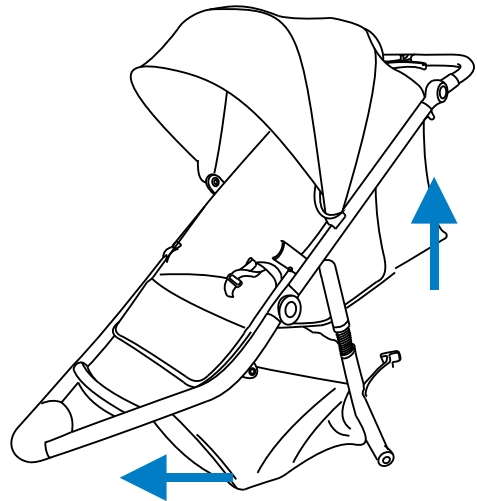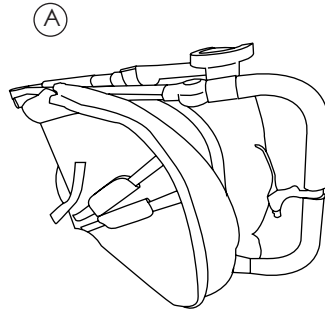


## 5. Stroller Assembly


### 5.1. REAR WHEEL ASSEMBLY

1. Insert rear wheels (C) into each of the rear wheel hubs until you hear the "click". Pull outwards on the wheel to ensure the wheel is installed properly.

**NOTE:** You may need to push the wheel with some force to get it past the locking mechanism.

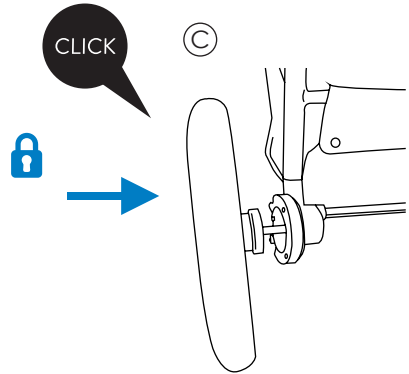


**To remove the rear wheel,** push down on the plastic tab on the rear axle and then pull outward on the wheel.

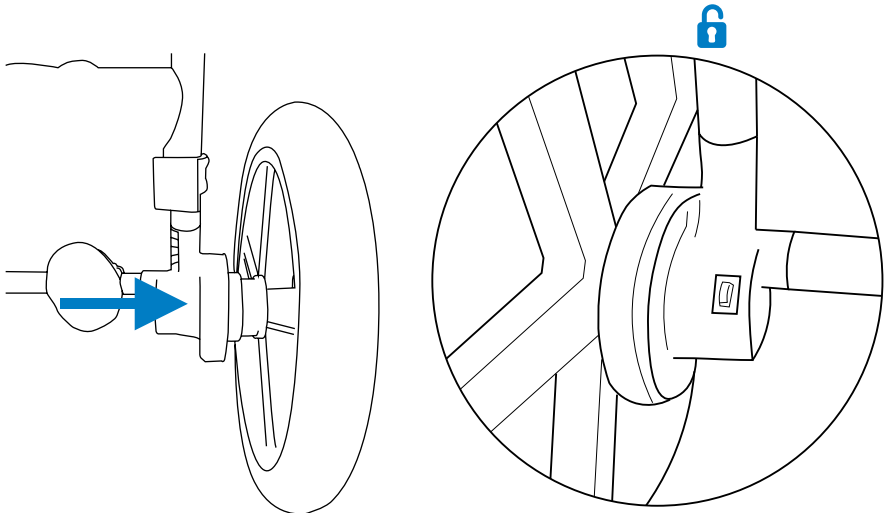



## 5. Stroller Assembly

### 5.2. FRONT WHEEL ASSEMBLY

1. Slide front wheel (B) onto the front wheel post until it clicks into place. Pull on the wheel to ensure it is installed properly.

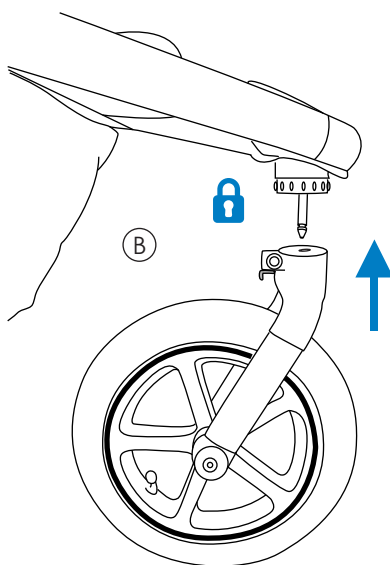

**To remove the front wheel**, pull the metal release tab on the back of the front wheel post and pull away from the jogger.

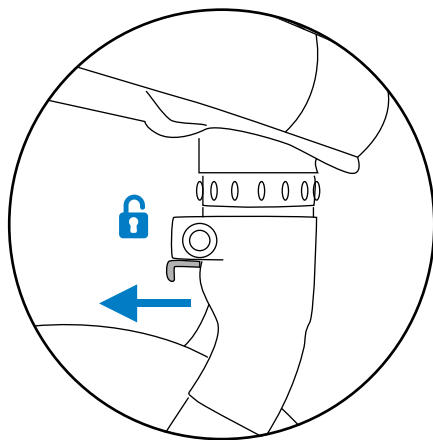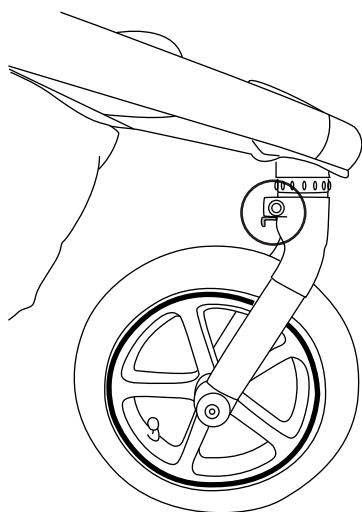





## 5. Stroller Assembly

### 5.2. CANOPY ASSEMBLY

1. Slide the canopy (D) hinge into the canopy housing clip located on the stroller frame. Repeat on the other side.

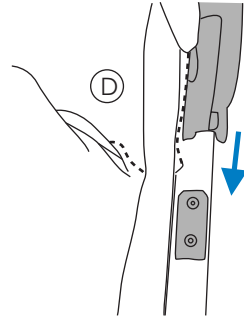

2. Fasten the zip to secure the canopy to the frame.

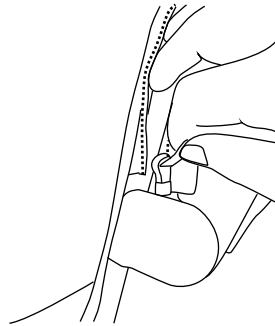



## 6. Swivel Wheel

### 6.1. LOCKING & UNLOCKING SWIVEL WHEELS

The stroller can be operated with the front wheel in either swivel mode or locked mode.

To set the front wheel to either lock or swivel mode, twist the ring near the top of the wheel to the desired mode.

The adjustable tracker allows for wheel alignment fine-tuning.

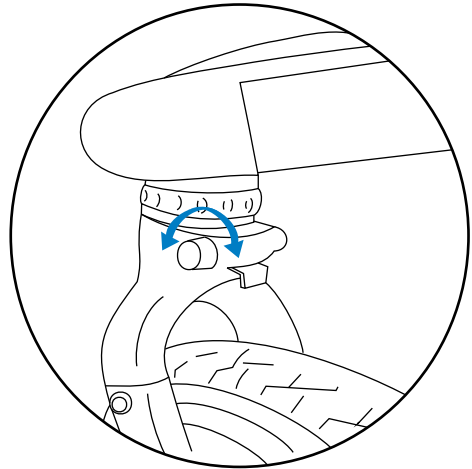
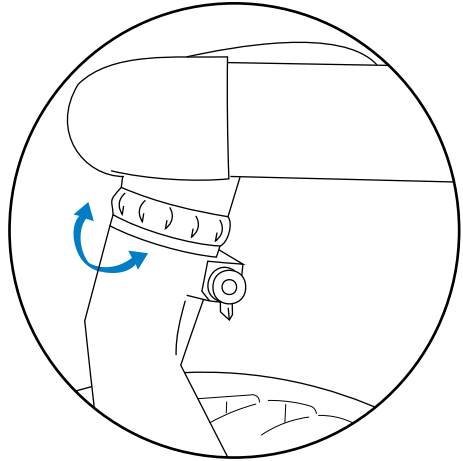


## 7. Rear Wheel Brake

### 7.1. ENGAGE WHEEL BRAKE

This jogger is equipped with a linked parking brake for the rear wheels.

1. Before placing your child into the jogger or removing them from the jogger, be certain that the rear parking brake is engaged.
2. To engage the brakes, push down on the brake lever on the rear axle of the jogger until you hear the 'click'.
3. Check that the brake is properly applied by attempting to push the jogger backwards and forwards.
4. To release the brake, lift up on the brake lever until it locks into the UP position and you hear a "click".

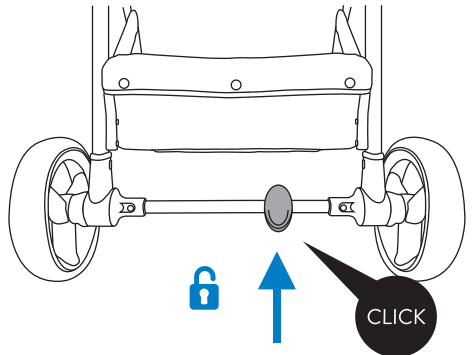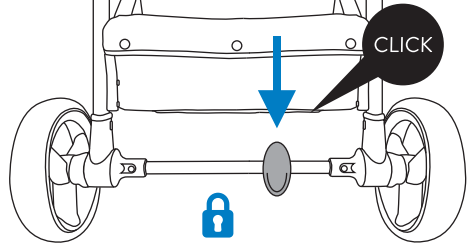

### **WARNING!**

Always engage the parking brake when the jogger is not being pushed so that it will not roll away.



### **WARNING!**

Never leave the jogger unattended, especially on a hill or incline, as the jogger may tip over or slide.

## 8. Handbrake

### 8.1. ENGAGE HANDBRAKE

There is a handbrake installed, which may be necessary to use when walking the jogger at a speed.

1. To use, press the handbrake in towards the handle bar. To release the brake, lift the pressure from the handbrake.

The handbrake activates on both wheels.





#### **WARNING!**

Always engage the parking brake when stopping the jogger indefinitely.



#### **WARNING!**

The handbrake will only engage, whilst being pressed and if stopping for any duration i.e. to load/unload child wheel brake should be engaged.

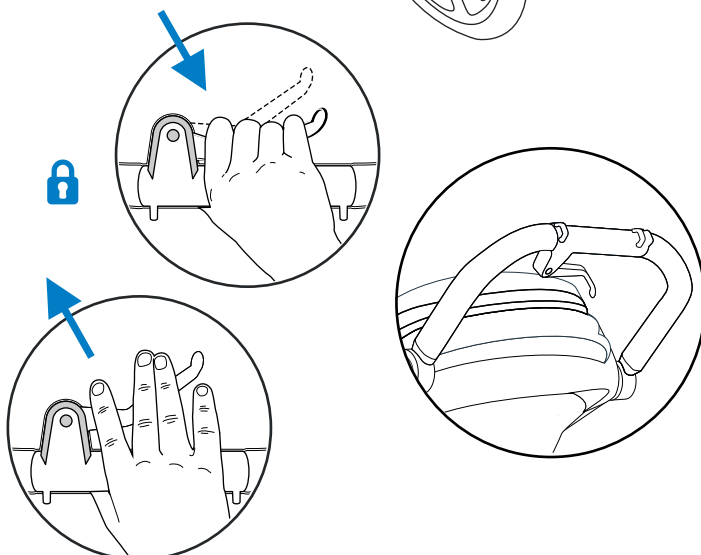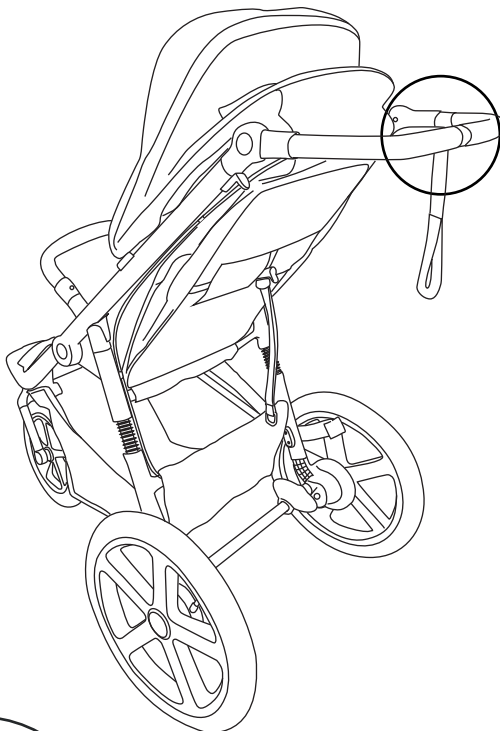




## 9. Bumper bar

### 9.1. BUMPER BAR ASSEMBLY

1. Remove the two safety caps from the seat mount points by pressing the release button and pulling each cap off.

2. Align the bumper bar (E) with the frame. Push down onto the bumper bar until you hear a “click” confirming it is securely attached. Pull outward on the bumper bar to ensure it is secure.

3. To remove the bumper bar, press both buttons located on the under sides of the bumper bar connectors and remove from frame.

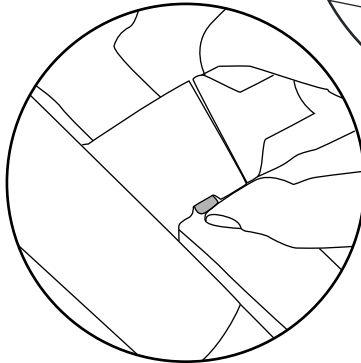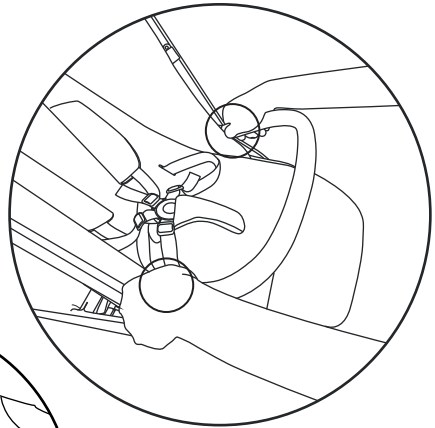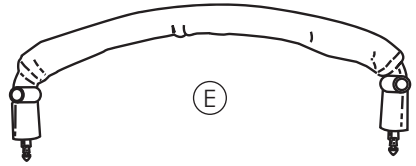


# 10. Canopy Adjustment

## 10.1. CANOPY ADJUSTMENT

1. To open the canopy pull forwards on the front edge of the canopy until it is fully extended. The canopy visor can be adjusted into several positions, ranging from fully closed to fully extended.


2. The top rear position of the canopy has a roll up window. To open, roll the flap up inside between the canopy and the window.

3. To close the canopy, push the front edge of the canopy towards the rear of the jogger.

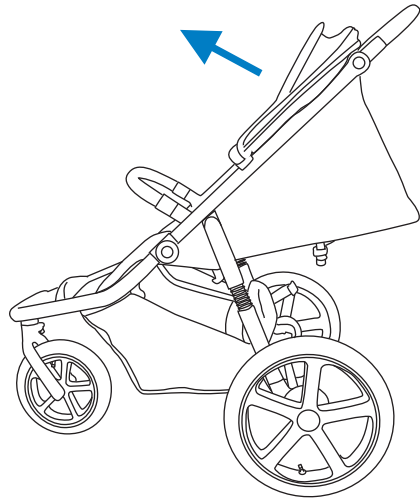

### **WARNING!**

**Possible pinching hazard - be careful of the side hinges when opening and closing the canopy.**

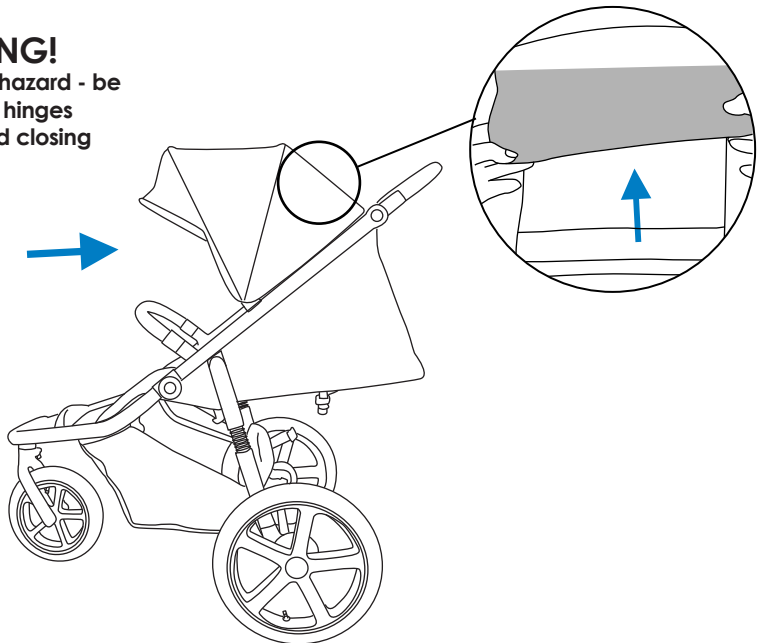


# 11. Handle Adjustment

## 11.1. HANDLE ADJUSTMENT

1. The jogger is equipped with an adjustable handle. To use the adjustable handle, press in both buttons on either side of the handlebar.

Move the adjustable handle to the required position.

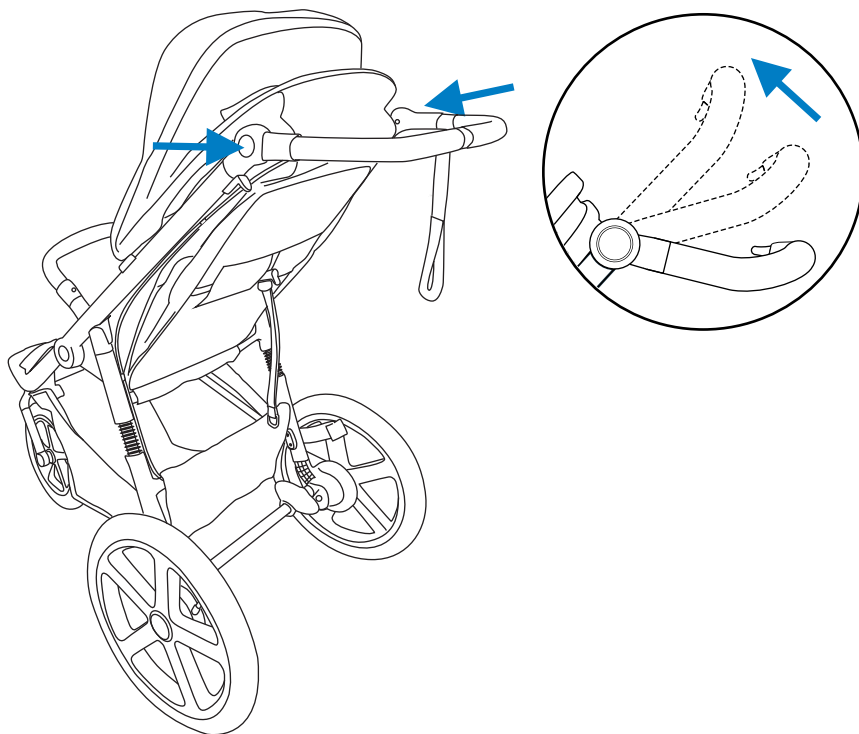

## 12. Wrist Tether Strap

### 12.1. WRIST TETHER STRAP


There is a tether strap located on the rear frame of the jogger to keep your stroller close by, in case you lose your grip.

Always loop the wrist tether around your wrist before using the jogger.



### **WARNING!**

**Please ensure that even when using the wrist tether you maintain grip on the handle and do not leave the child unattended.**

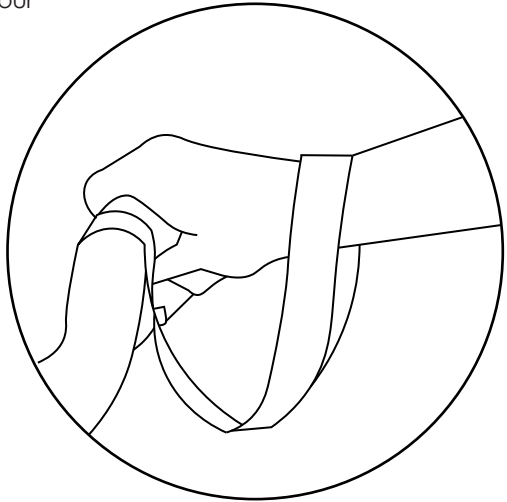



# 13. Backrest Adjustment

## 13.1. BACKREST

1. The seat can be adjusted to any position, upright to reclining.
2. To recline the seat, loosen the adjustment strap at the back of the seat by squeezing the adjustment button and recline the seat to the desired position.
3. To adjust the seat back to a more upright position, simply tighten both adjustment straps until the seat is in the desired position.






### **WARNING!**

Stroller is not suitable for children under 6 months when angle of seat and backrest is less than 150 degrees.



### **WARNING!**

Use the most reclined position for newborn babies.

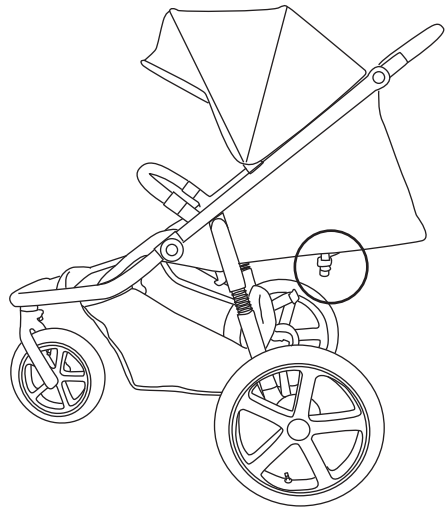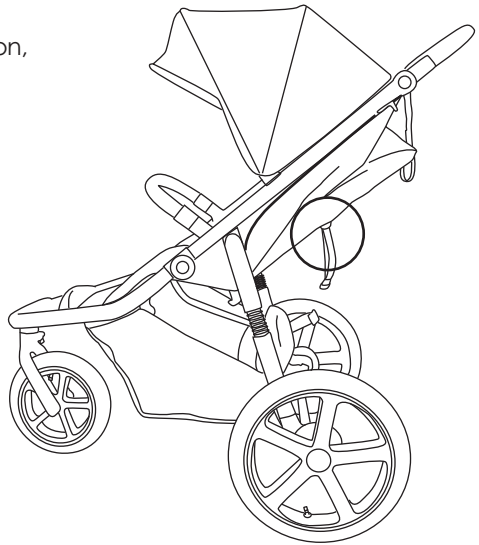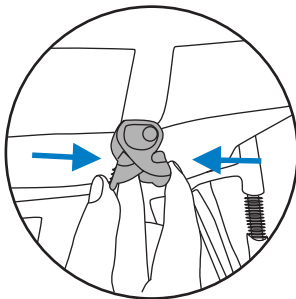


# 14. Harness Adjustment

## 14.1. HARNESS

1. Carefully place the child into the seat with the shoulder straps over their shoulders and chest. Insert all buckle clips into the buckle housing until they engage securely in place. Listen for the "click".

2. Combine the shoulder waist buckles together, then place the crotch buckle on top of the combined buckles until all parts are in place.

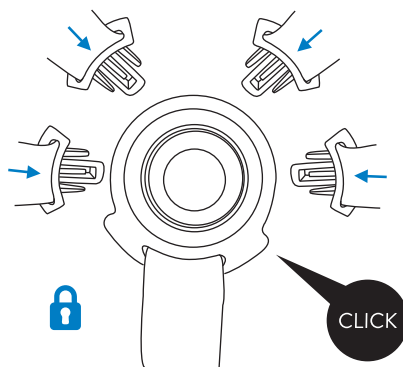


### **WARNING!**

Always use the crotch strap in combination with the waist belt.

### **WARNING!**

To avoid serious injury, always use the restraint system.

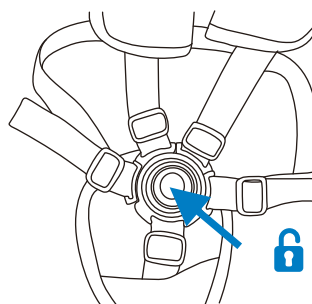


# 14. Harness Adjustment

## 14.2. HARNESS ADJUSTMENT


1. To adjust the shoulder straps, move the sliders as shown.

### **WARNING!**

Always adjust the harness to fit your child correctly for their comfort and safety. A loose fitting harness can be very dangerous.

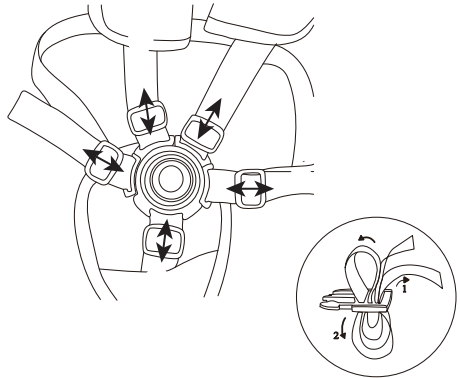


2. There are three height adjustment positions for the shoulder harness. Adjust the height to the closest height above your child's shoulders. To unlock the buckle, press the buttons on both sides and remove the harness which slots into the buckle on each side.

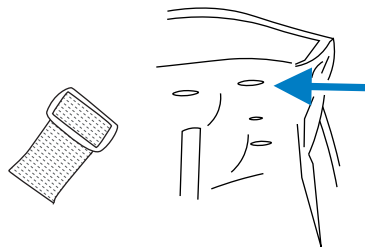

3. To remove the shoulder harness, at the rear of the seat turn the plastic ends sideways and push them through the slots in the seat liner. Re-attach the harness at the proper height by re-inserting the plastic ends through the slots. Ensure both straps are the same height.

### **WARNING!**

Always adjust the shoulder strap height according to baby height and ensure that both straps are at the same height.

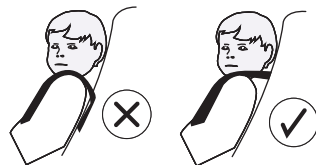

# 15. Folding

## 15.1. FOLDING


Rear wheel brake lever **MUST** be engaged before folding the jogger.

Close the canopy. Make sure the front wheels are in swivel mode and **NOT** locked.

1. Press the button on the left side of the handle.



2. Pull the triggers on both side of the frame at the same time. Slowly guide the handle down towards the rear wheels and safety latch. The jogger should automatically lock into place.

DO NOT force the jogger closed. Pull up on the handle to ensure the safety latch is secure.

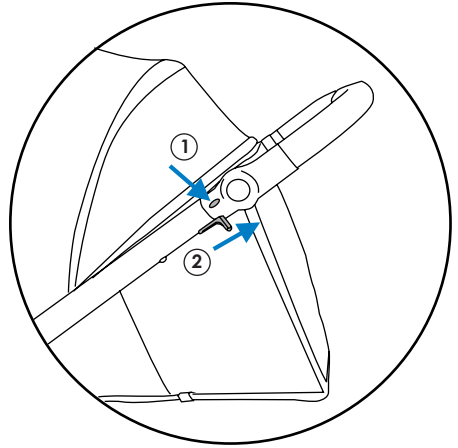

### **WARNING!**

Remove objects from the basket and any footmuffs prior to folding, as folding with these in place may damage both the seat backrest and folding mechanism.

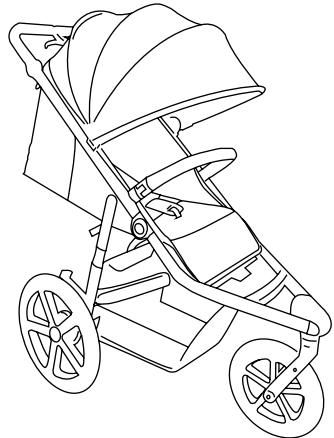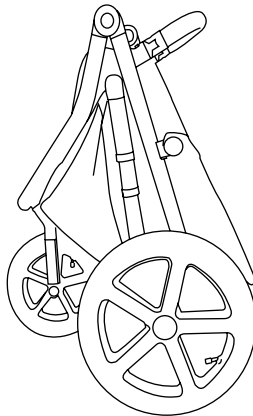

## 16. Tyre Pump


### 16.1. TYRE PUMP

1. Remove protective cap from the tyre tube air valve. Attach air pump to the air valve on the tyre.

3. Pump air into the tube until the tyres are filled to 35 psi or as specified on the tyre wall.

4. When finished, replace the tube in the end of the pump and return the pump to its storage location in the basket.


(F)

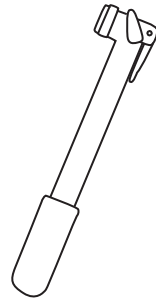

### **WARNING!**

**DO NOT over inflate the tyres, as this may cause a potentially hazardous condition.**



The pump may become warm to the touch, but this is not an abnormal condition.

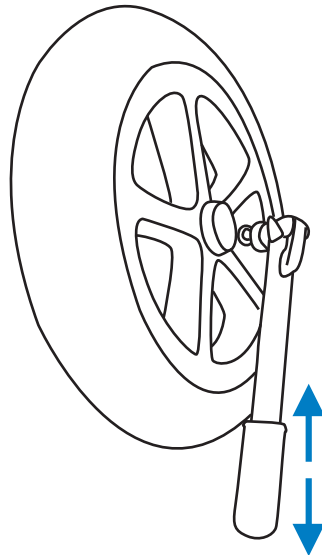

## 17. Raincover

### 17.1. RAINCOVER

1. Pull the raincover (G) down over the canopy and tuck the rear section behind the back of the canopy.
2. Connect the fasteners on the rear section of the raincover to the rear sides of the jogger. Start near the handle and work your way down the sides.
3. Connect the fastener straps at the bottom of the raincover, to the frame below the footrest to secure.

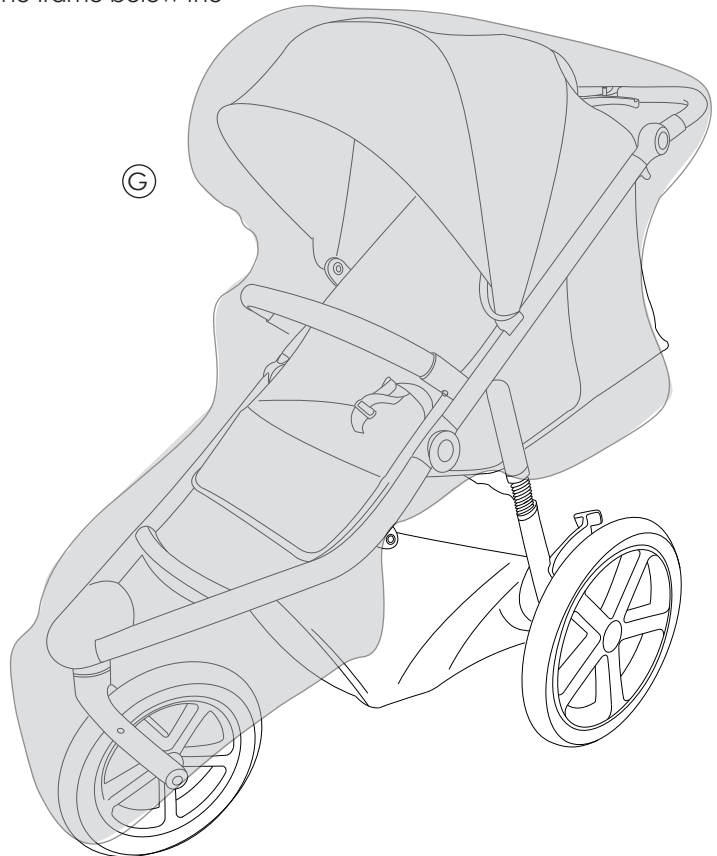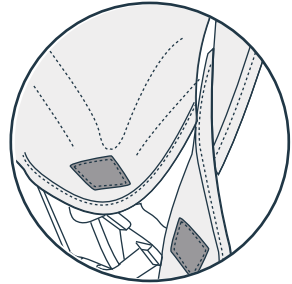


## 18. Install and Remove Car Seat Adaptors


### 18.1. CAR SEAT ADAPTORS (SOLD SEPARATELY)

1. To install the adaptors, remove the bumper bar and attachment. Press the buttons on the sides to remove the bumper bar.
2. Then press the buttons on either side of the remaining bumper bar attachment, that is attached to the Chassis. Lift up and remove.
3. Install the car seat adaptors on both sides by pushing down firmly. Pull both adaptors to ensure that they are securely in place.


To remove the adaptors, press the button and pull up.

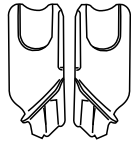


①

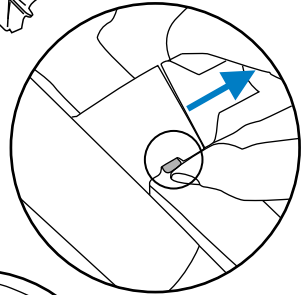

②

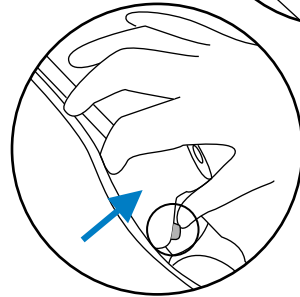

③

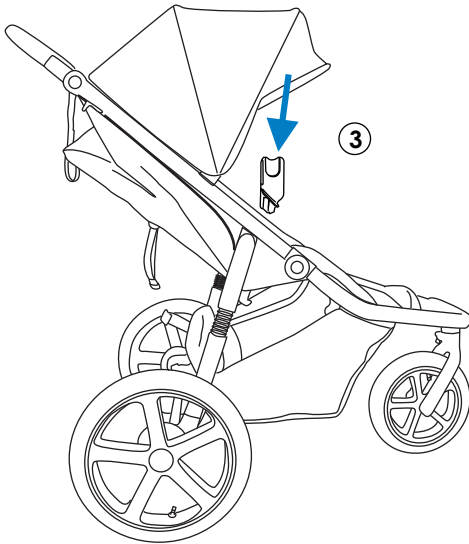

## 19. Install and Remove Car Seat


### 19.1. CAR SEAT (SOLD SEPARATELY)

1. Always install the car seat facing towards the parent. Hold the car seat by the carry handle and lower the car seat onto the jogger so that the bracket on the car seat latches onto the car seat adaptors.


2. Pull up on the car seat to ensure it is secure.

Note: Ensure that the backrest is in the lowest position when fitting the car seat.

**To remove the car seat**, press the release buttons on each side of the car seat and lift up.

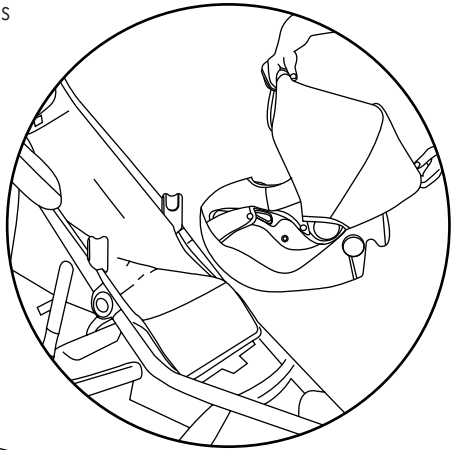

**To remove the car seat adaptors**, press the button and pull adaptor off.

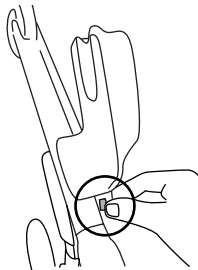



## 20. Care and Maintenance

### 19.1. CLEANING

- Spot or sponge clean fabrics with mild detergent. Use mild soap or upholstery shampoo. NEVER use bleach. Dry in shade thoroughly before reuse and avoid direct heat and sunlight. Do not iron. Do not dry clean. Do not bleach.
- Wipe clean plastics and metals with a damp cloth.
- Never clean any part of the product with abrasive, ammonia based, bleach based or spirit type cleaners.
- Ensure the product is fully dry before use or storage.
- Always ensure the product is stored in a dry place to prevent mold or mildew developing.

### 19.2. MAINTENANCE

- The product requires regular maintenance to ensure correct and safe performance.
- Regularly inspect the wheels, locks, brakes, harness, catches, seat adjusters, joints and fixings to ensure they are clean, operating correctly and in full working order.
- Regularly check and lubricate the wheels.
- Do not use this product if any part is broken, torn or missing and use only spares provided by the manufacturer.
- Always check your pushchair for loose screws, ensure they are tightened properly.
- If parts become stiff or difficult to operate, ensure dirt is not the cause, then try a light application of a silicon lubricant, ensuring it penetrates between the components. Regular lubrication of moving parts will extend the life of your product and make opening and folding easier.
- After exposure to damp conditions, dry off with a soft cloth and leave fully open in a warm environment. Storing damp will encourage mildew to form.
- Store in a dry place.
- Do not leave in sunlight for prolonged periods as some fabrics may fade.





If you have any questions or concerns regarding this product,  
do not hesitate to contact our expert team online  
via [online4baby.com/contact-us](https://online4baby.com/contact-us)

Feeling social?    
[online4baby.com](https://online4baby.com)

Imported by Online4baby Ltd,  
Meadowbank, Tweedale Way, Oldham, OL9 8EH