


## Universal Musical Crib and Cot Bed Night Light


### 1. BATTERY ASSEMBLY

Unscrew battery door on back of the night light unit (D) and insert 3 "AA" batteries, in accordance with the +/- polarity shown. Replace battery door and secure with screw.

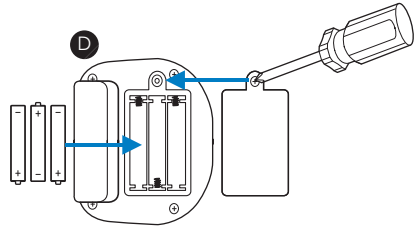

### 2. ASSEMBLING TO CRIB OR COT BED

Attach night light unit onto crib by sliding unit clip over the crib frame.

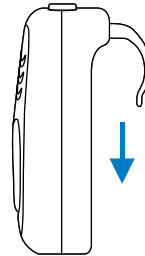

### 3. FUNCTIONS



Press to play Brahms's Lullaby. Press again to turn sound off. Press again to play soothing sound which mimics a swooshing womb sound. Sounds automatically shut off after five minutes.



There are 2 volume levels. Press to adjust volume.



Press the button to turn nightlight on and off.



There are two vibration levels. Press button to turn vibration on and again to change level. Press a third time to turn vibration off.



### WARNING!

The nightlight product is not a toy. Do not allow children to play with the nightlight. Use with proper adult supervision. ALWAYS install the light on the nightlight unit only as instructed. NEVER mix old and new batteries. NEVER mix alkaline, standard, or rechargeable batteries. ALWAYS remove batteries when light is stored for an extended period of time or when batteries are exhausted. Dispose of exhausted batteries properly.

# Battery Safety Instructions

## ATTENTION! BATTERY SAFETY: KEEP FOR FUTURE REFERENCE.

**CAUTION:** To prevent possible battery leakage, be sure to follow the guidelines outlined below:

- Alkaline batteries are recommended for longer battery life.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon zinc) or rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted correctly by matching the + and - polarity markings.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Dispose of exhausted batteries properly.
- Remove batteries when product is stored for long periods of time.
- Use a small cross head screwdriver to open the battery compartment door on the electronic unit.
- Insert the battery as indicated inside the battery door and re-attach the battery compartment door with screw.
- Requires 3 "AA" batteries. Not included.



The crossed bin symbol on the appliance indicates that the product at the end of its life, must be disposed of separately from domestic waste, either by taking it to a separate waste disposal site for electric and electronic appliances or by returning it to your dealer when you buy another similar appliance. The user is responsible for taking the appliance to a special waste disposal site at the end of its life. If the disused appliance is collected correctly as separate waste it can be recycled, treated and disposed of ecologically. This avoids a negative impact on both the environment and health and contributes towards the recycling of the product's materials. For further information regarding the waste disposal services available, contact your local waste disposal agency or the shop where you bought the appliance.

If you have any questions or concerns regarding this product,  
do not hesitate to contact our expert team online  
via [online4baby.com/contact-us](https://online4baby.com/contact-us)

Feeling social?    
[online4baby.com](https://online4baby.com)

Imported by Online4baby Ltd,  
Meadowbank, Tweedale Way, Oldham, OL9 8EH