


PUGGLE

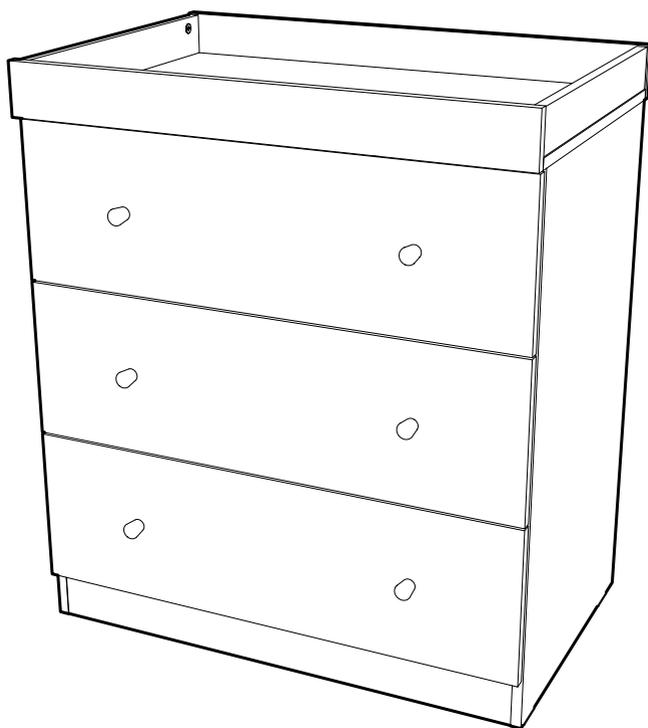

Budworth Dresser

Instruction Manual

Welcome

Thank you for purchasing the **Puggle Budworth Dresser**

Please read these instructions and safety warnings carefully before use to ensure safe and satisfactory operation of this product.

 
 
 
WARNING! Assembly by an adult. Keep away from children until fully assembled. Keep children clear during assembly as pack contains small parts which may present a choking hazard.



Lay out the parts on a soft level surface and compare to the part/fixings checklist. Do not discard any packaging until you are sure that you have all the parts.

We're here to help!

If you have a query with this product or require replacement parts, please contact us at:
support@pugglebaby.co.uk

Parts List


1000806  x 1	1005857  x 26	1005727  x 3
1005367  x 28	1006091  x 28	1005876  x 12
1006012  x 43	1002152  x 3	1005471  x 6
1115207  x 4	1007786  x 2	1000868  x 4
1000893  x 1	2150437  x 6	

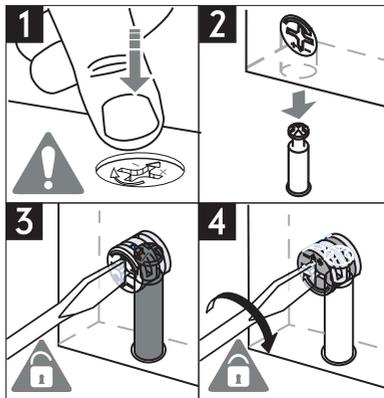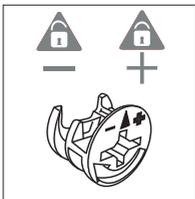

Before Assembly

Main Components


- Unpack all the parts and identify them against the fitting and components list.
- Do not discard any packaging until you have checked that you have all parts as shown below.
- You may find the construction of your dresser easier if you have the help of another person.
- Crosshead screwdriver (not provided).

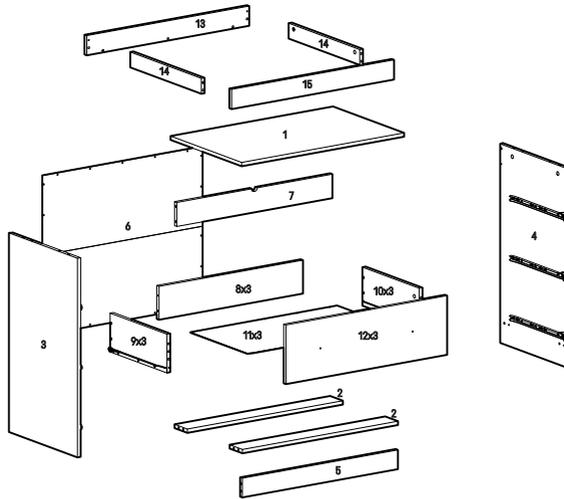


ARTIKELNUMMER ITEM NUMER ARTIKELNUMMER	BOX	4021378	AANTAL QUANTITY ANZAHL	AFTMETINGEN [mm] DIMENSIONS [mm] ABMESSUNGEN [mm]		
1	2/2	2220477	1	800	500	16
2	2/2	2220478	2	766	90	16
3	1/2	2220479	1	828	482	16
4	1/2	2220480	1	828	482	16
5	1/2	2220482	1	766	80	16
6	2/2	2219721	1	788	664	2,5
7	2/2	2220481	1	766	100	16
8	2/2	2220486	3	709	139	16
9	1/2	2220484	3	400	160	16
10	1/2	2220485	3	400	160	16
11	1/2	2220487	3	722	405	2,5
12	2/2	2220483	3	794	246	16
13	1/2	2220489	1	800	82	16
14	2/2	2220490	2	500	64	16
15	1/2	2220488	1	800	82	16


Assembling the Dresser

 1

1005857  x 4	1000868  x 4	1006091  x 6
		1005367  x 4

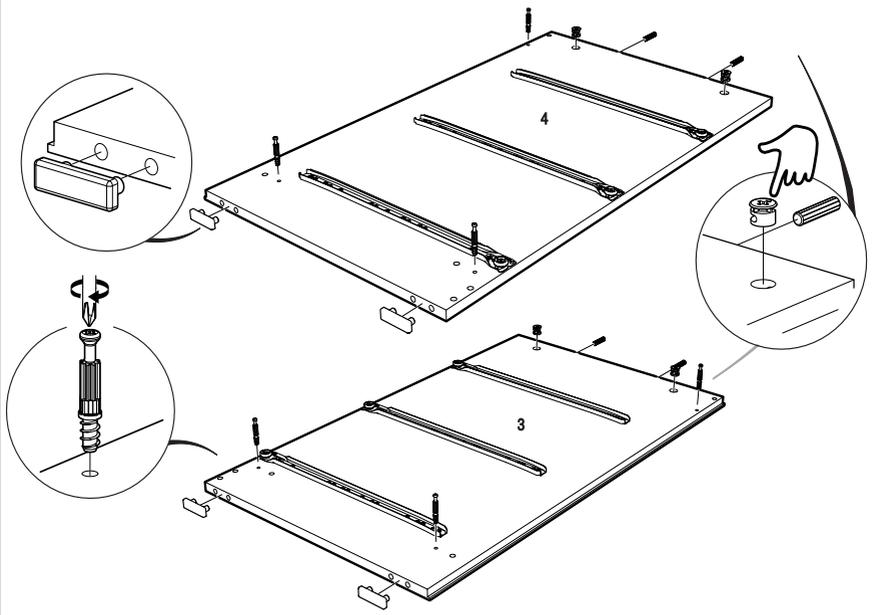

Assembling the Dresser

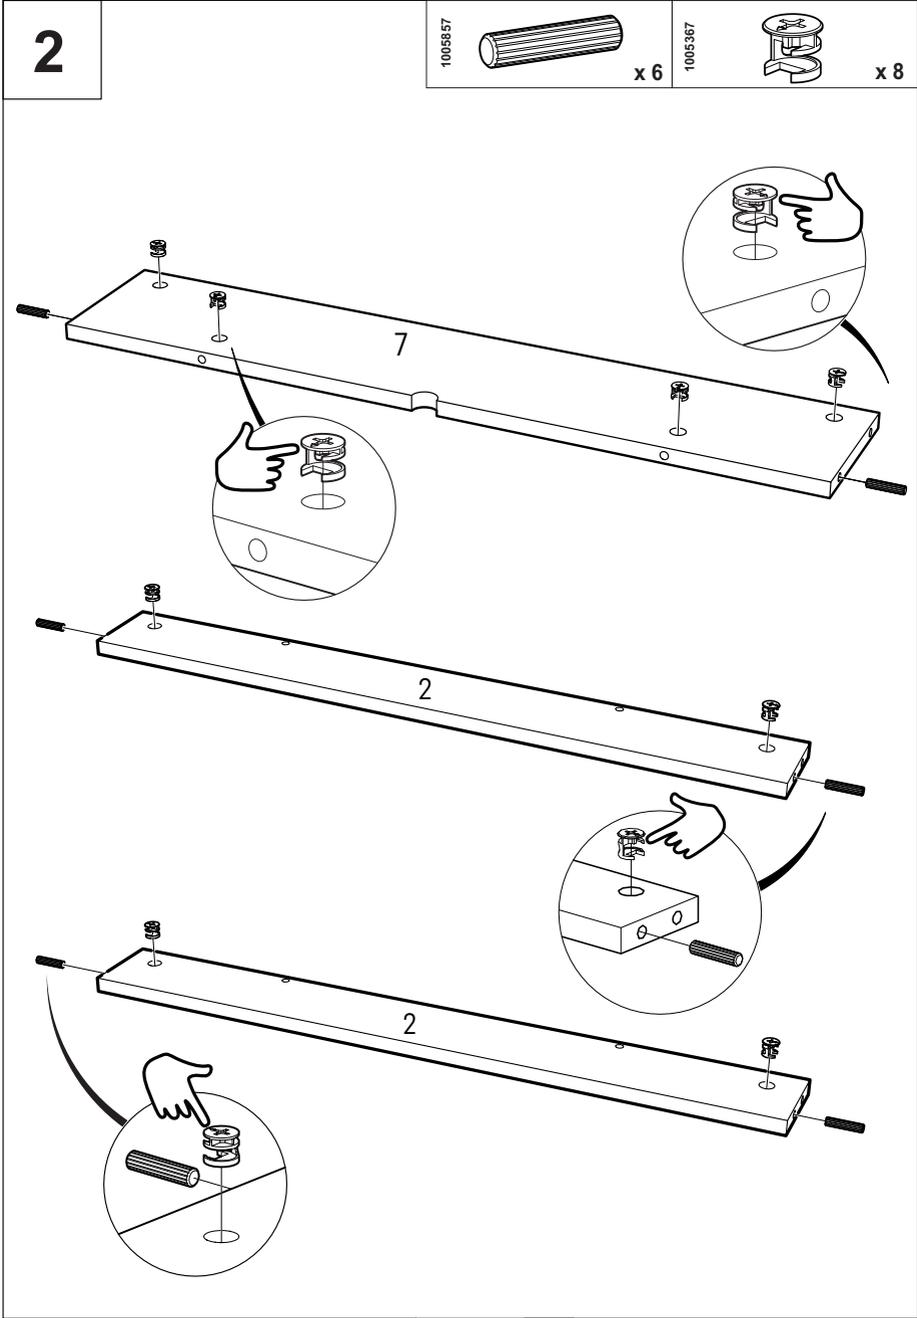


Assembling the Dresser

3


1005657




x 6

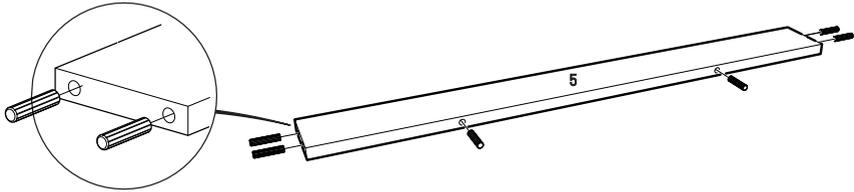


4

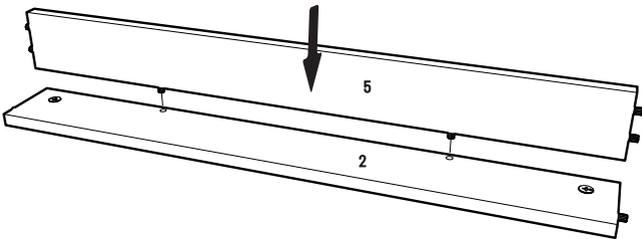

5

 


x2

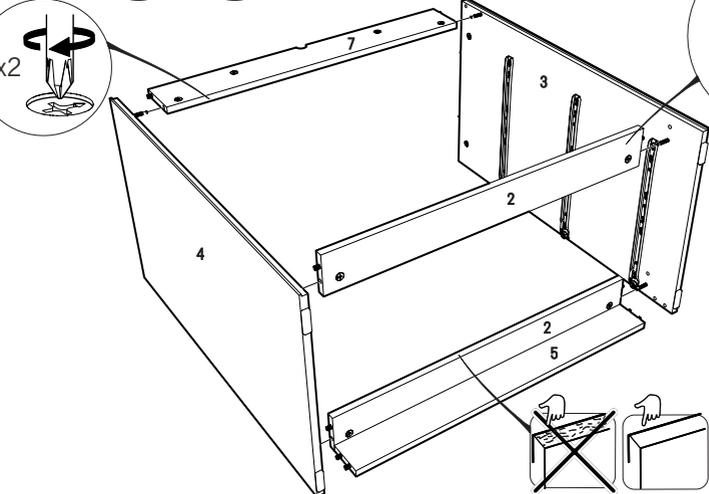

Assembling the Dresser


6

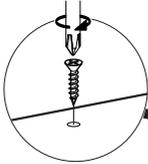



1006012



x 22

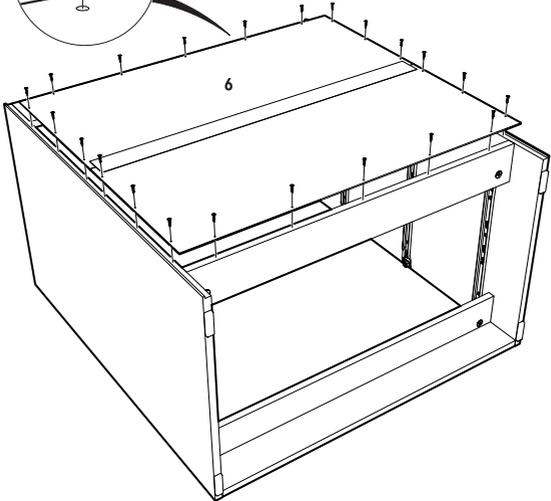

7

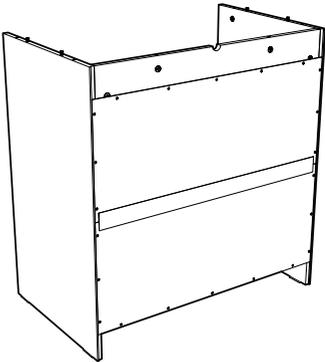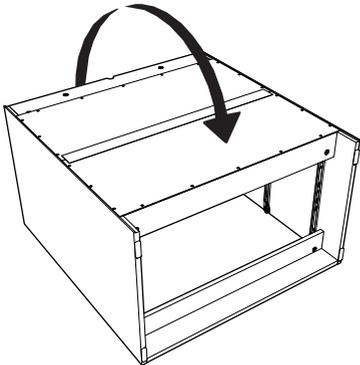

Assembling the Dresser

10

1005857




x 4

1005367



x 4

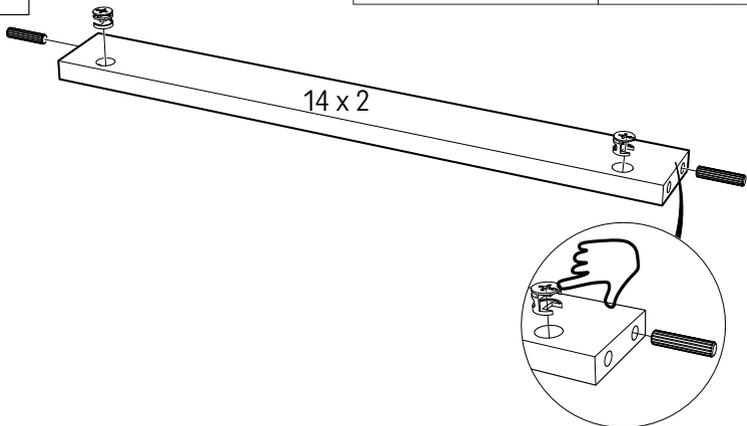


11


1006091




x 4

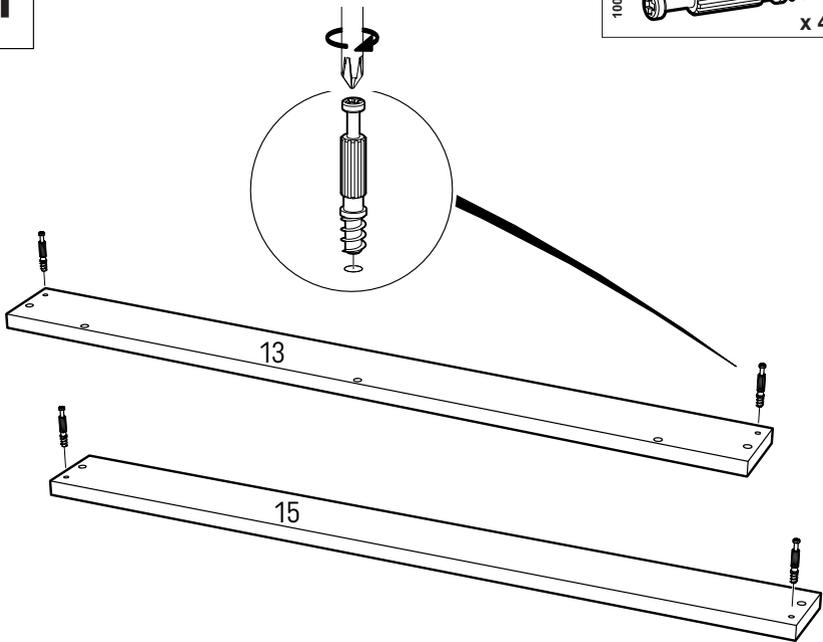

12

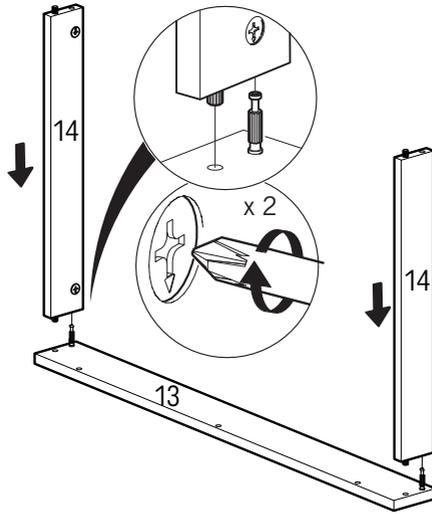


13

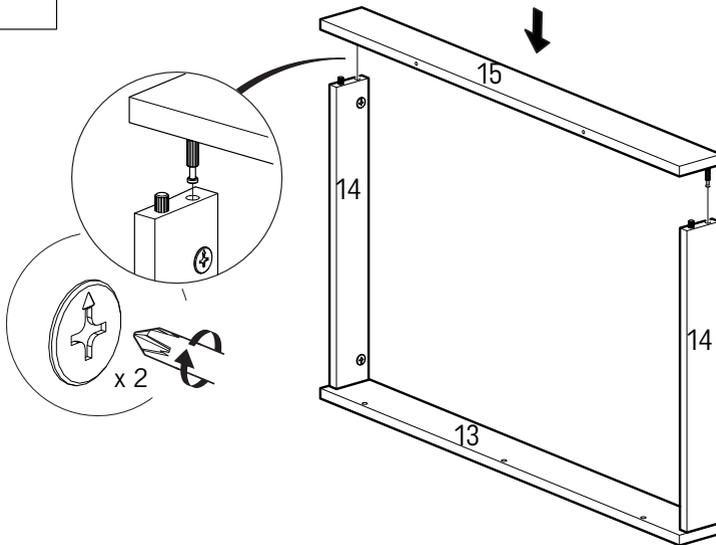

Assembling the Dresser

14

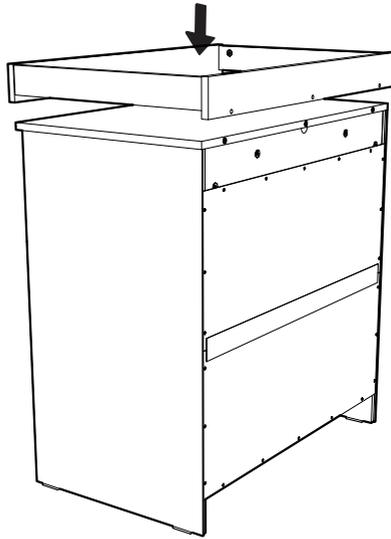


15

1005727



x 3

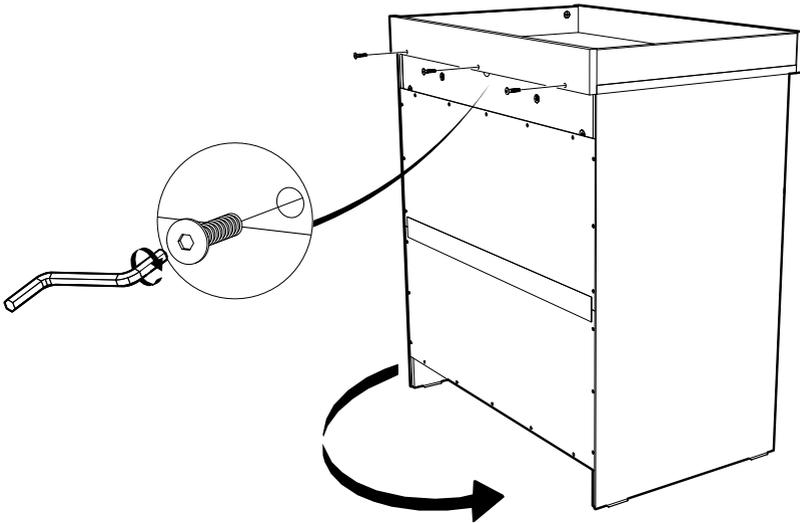

Assembling the Dresser

 
16

1115207




x 4

1001786



x 2

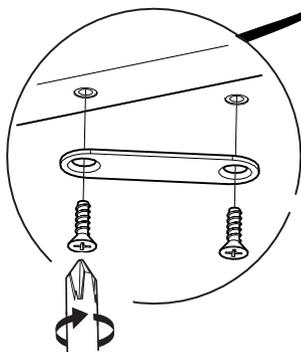


17

1000893




x 1

ATTENTION! Furniture shall be fixed to the wall to prevent it from falling over during the use. Fixing the furniture to the wall shall be carried out in accordance to instruction attached to the fitting

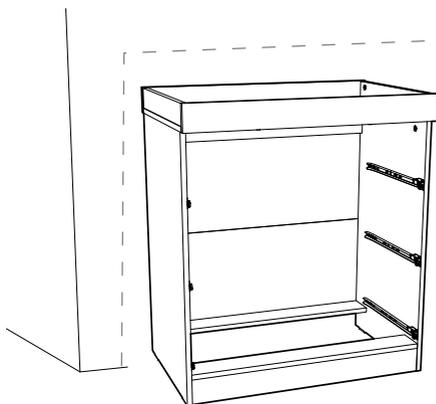


18

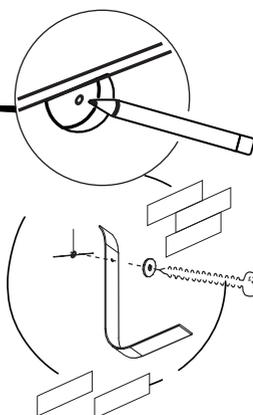

Appropriate fittings shall be chosen for slat assembly depending on wall kind. If you are not sure about the wall kind please consult it with an expert.

19

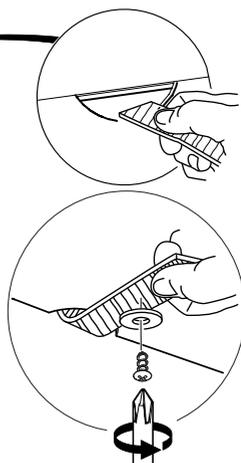

Assembling the Dresser

20

1005857




x 6

1005367




x 12

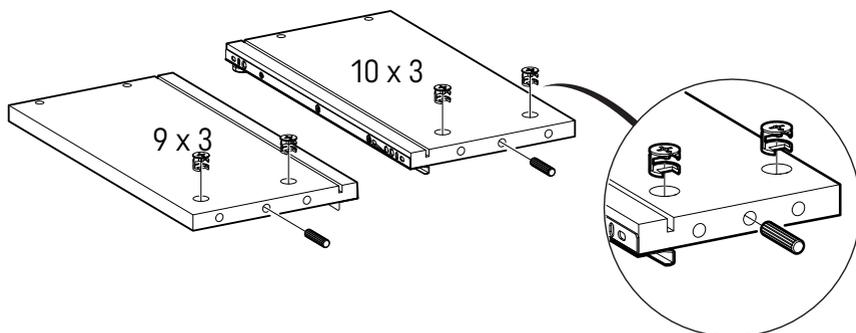


21

 1005876





x 12



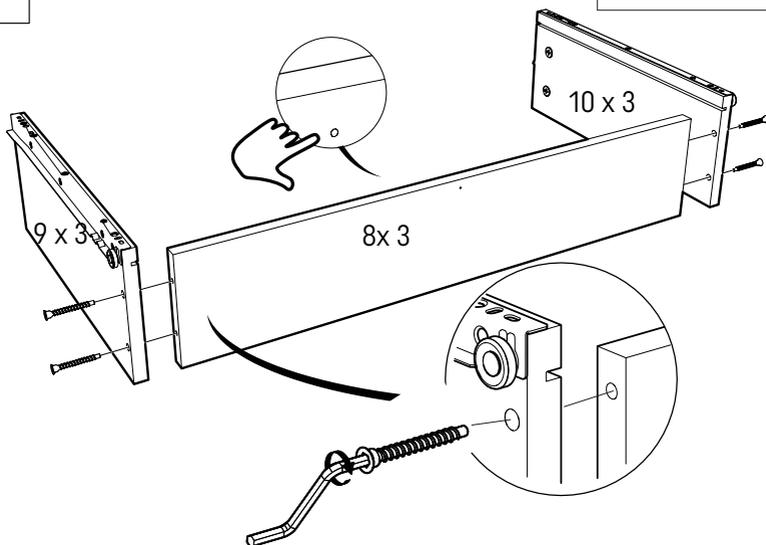


Assembling the Dresser



22

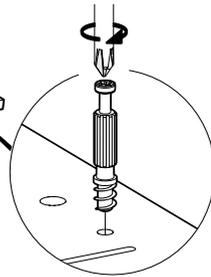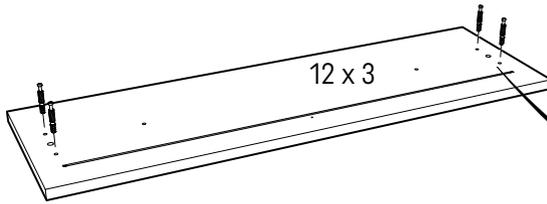

23

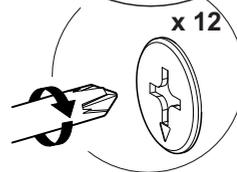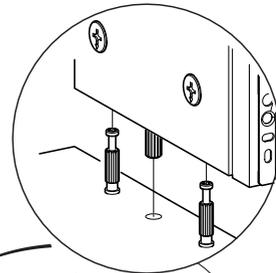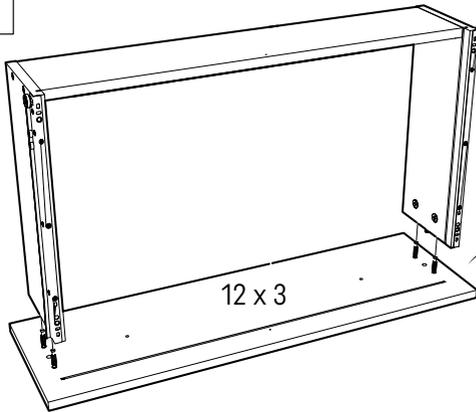

24

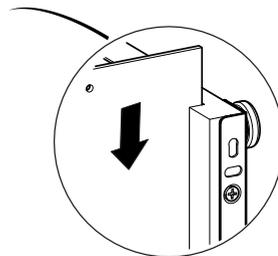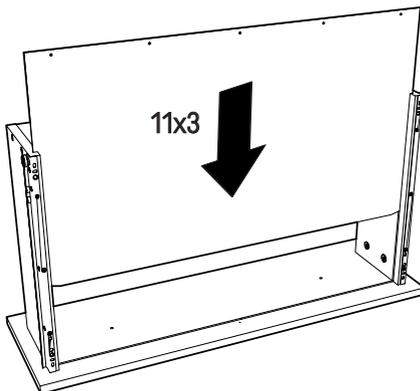


Assembling the Dresser

25

1006012



x 15

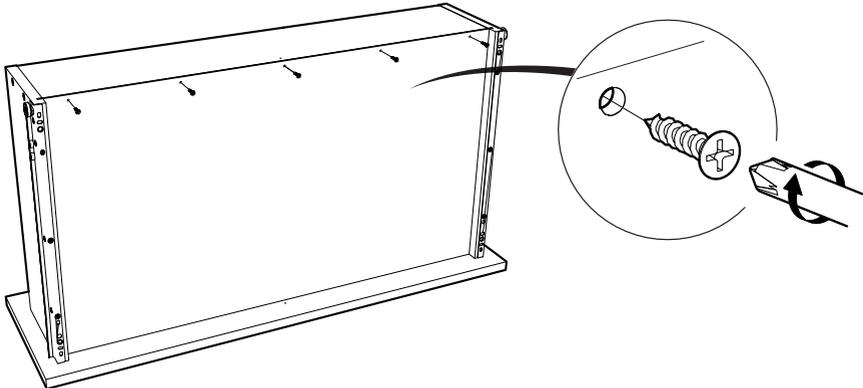

26

1006012




x 6

1002152



x 3

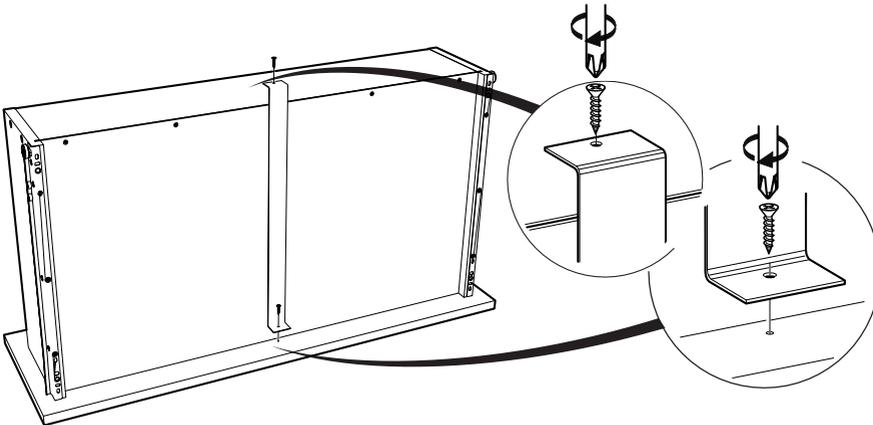

Assembling the Dresser

27

1005471




x 6





2150437




x 6

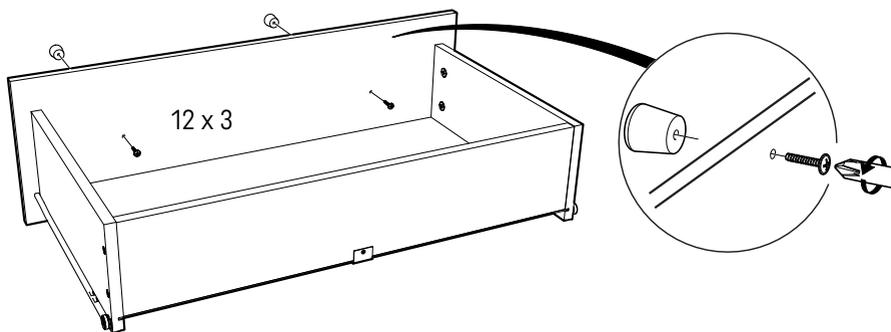


28

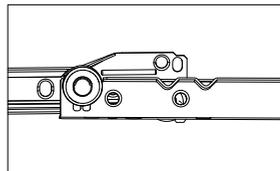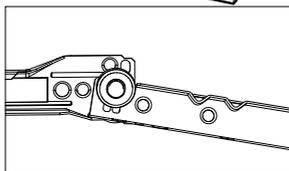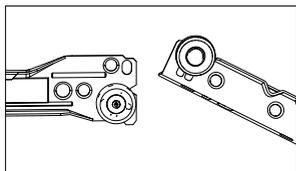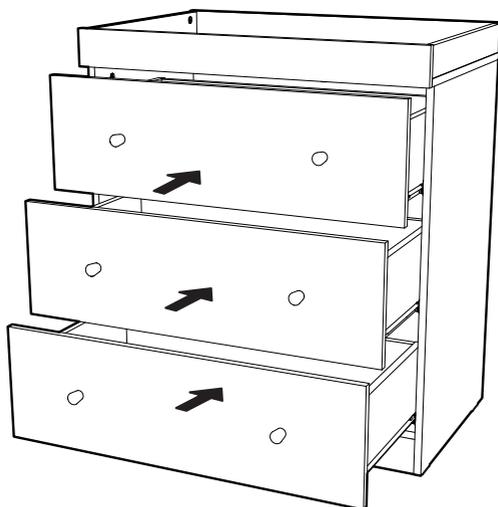


Assembling the Dresser

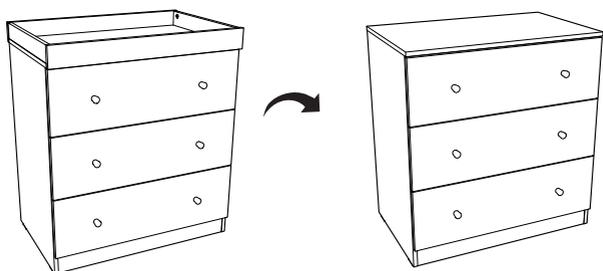

29

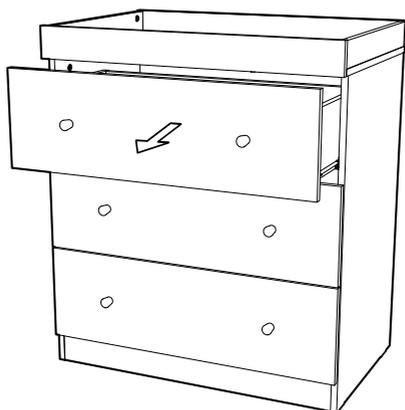


30

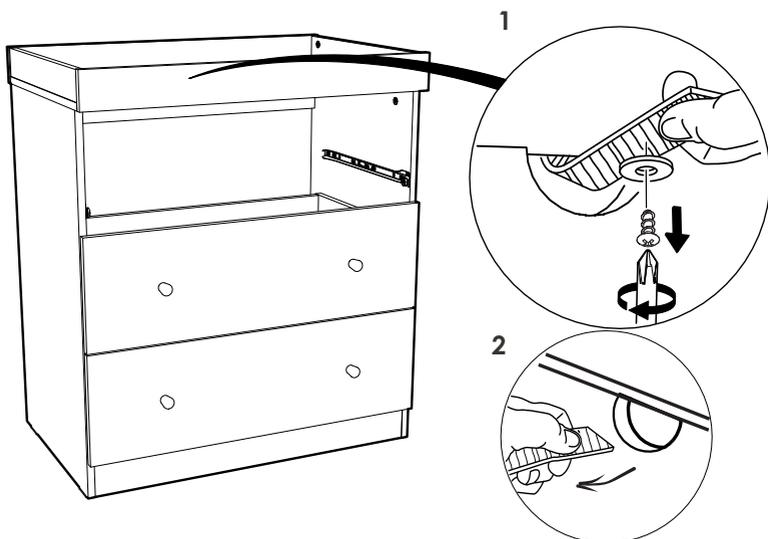


Assembling the Dresser

31

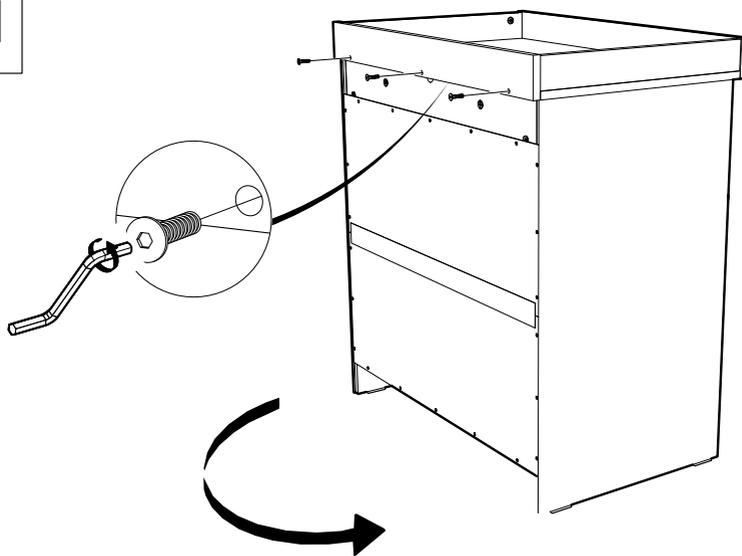


32

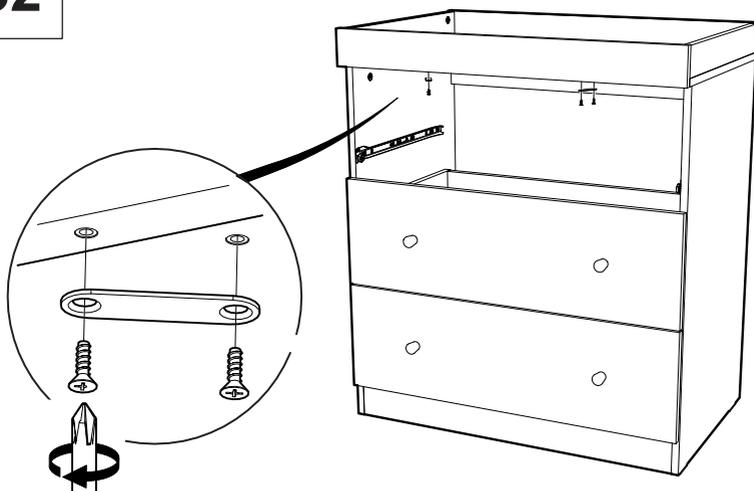


Assembling the Dresser





33

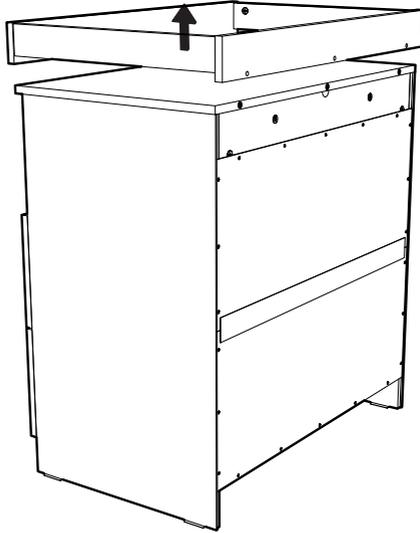

34

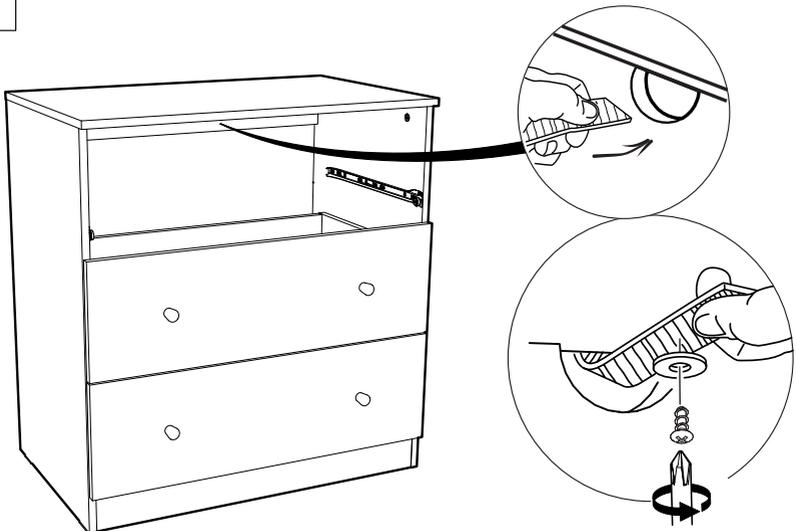

35

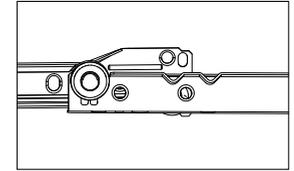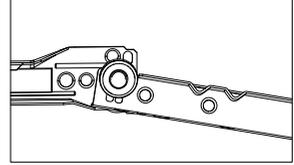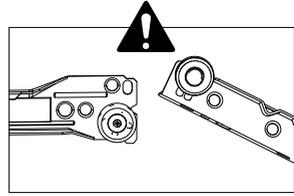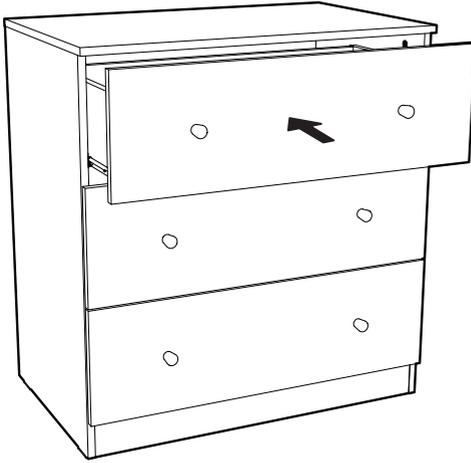

IMPORTANT – Read the instructions carefully before use and keep for future reference.

Warning: Do not leave your child unattended.

Always use the wall attachment strap provided.

All assembly fixings should always be tightened properly. Care should be taken that no screws are loose because a child could trap parts of their body, or clothing (e.g., strings, necklaces, ribbons, dummies, etc.) which could pose a risk of strangulation.

Be aware of the risk of open flames and other such sources of strong heat, such as electric bar fires, gas fires, etc. in the near vicinity of the dresser.

Suitable for use with a changing mat of max size 75 x 50 cm.

The changing area is suitable for use up to 12 months old or 11 kg in weight maximum.

DO NOT use the dresser if any of the parts are broken, torn or missing.

Any additional or replacement parts can only be obtained from the manufacturer or the distributor.

Ensure there are no small parts fittings are left after assembly as these can be a choking hazard.

This product conforms to: EN 12221-1:2008+A1:2013

Warnings

Take care when handling or moving the furniture. Careless handling may cause damage.

Regularly check that all fixings are tightened and that there are no broken or damaged parts.

Cleaning

Your dresser can be cleaned by wiping with a damp cloth and drying with a soft clean cloth.

Do not use abrasives, bleach, alcohol or ammonia-based household polishes.

