


PUGGLE

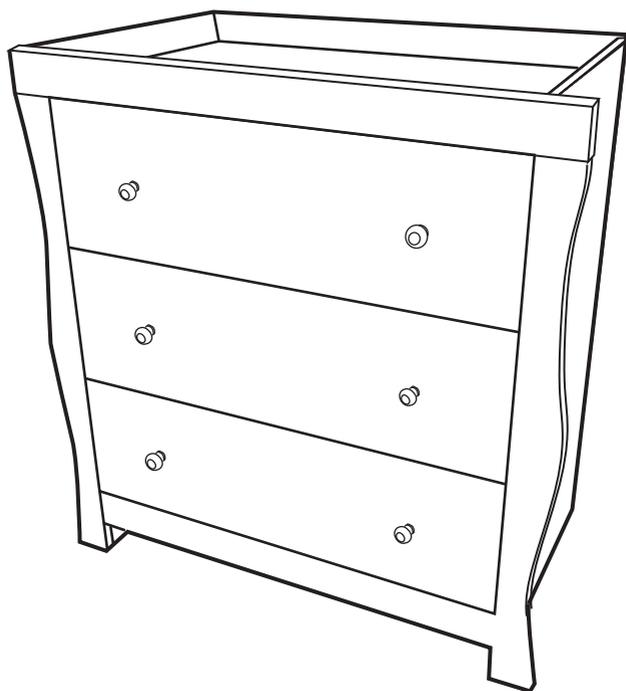

Mayfair Dresser

Instruction Manual

Welcome

Thank you for purchasing the **Puggle Mayfair Dresser**

Please read these instructions and safety warnings carefully before use to ensure safe and satisfactory operation of this product.

WARNING! Assembly by an adult. Keep away from children until fully assembled. Keep children clear during assembly as pack contains small parts which may present a choking hazard.

Lay out the parts on a soft level surface and compare to the part/fixings checklist. Do not discard any packaging until you are sure that you have all the parts.

We're here to help!

If you have a query with this product or require replacement parts, please contact us at:
support@pugglebaby.co.uk

Parts List



 
A x 1



B x 32



C x 3



D x 36



E x 36



F x 14

 


(3 x 16)

G x 41



H x 1




I x 6



(4 x 25)

 J x 6




K x 4


Before Assembly

Main Components



- Unpack all the parts and identify them against the fitting and components list.
- Do not discard any packaging until you have checked that you have all parts as shown below.
- You may find the construction of your dresser easier if you have the help of another person.
- Crosshead screwdriver (not provided).

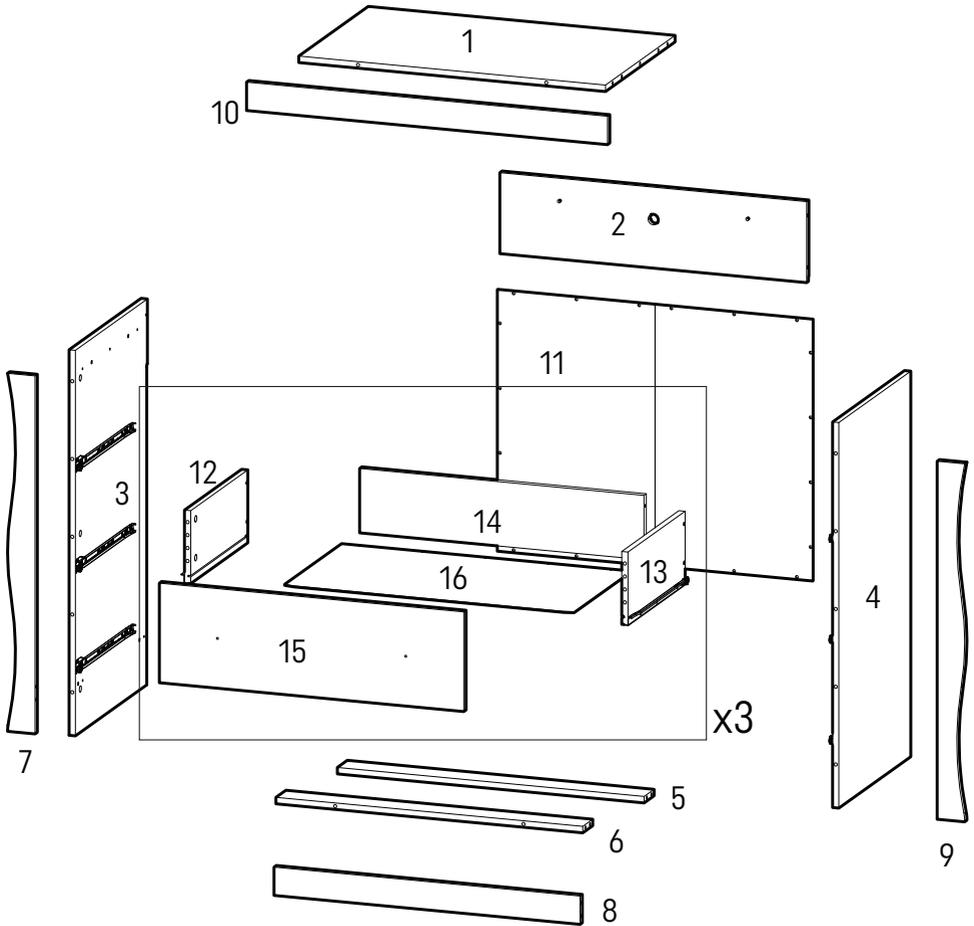



Assembling the Dresser

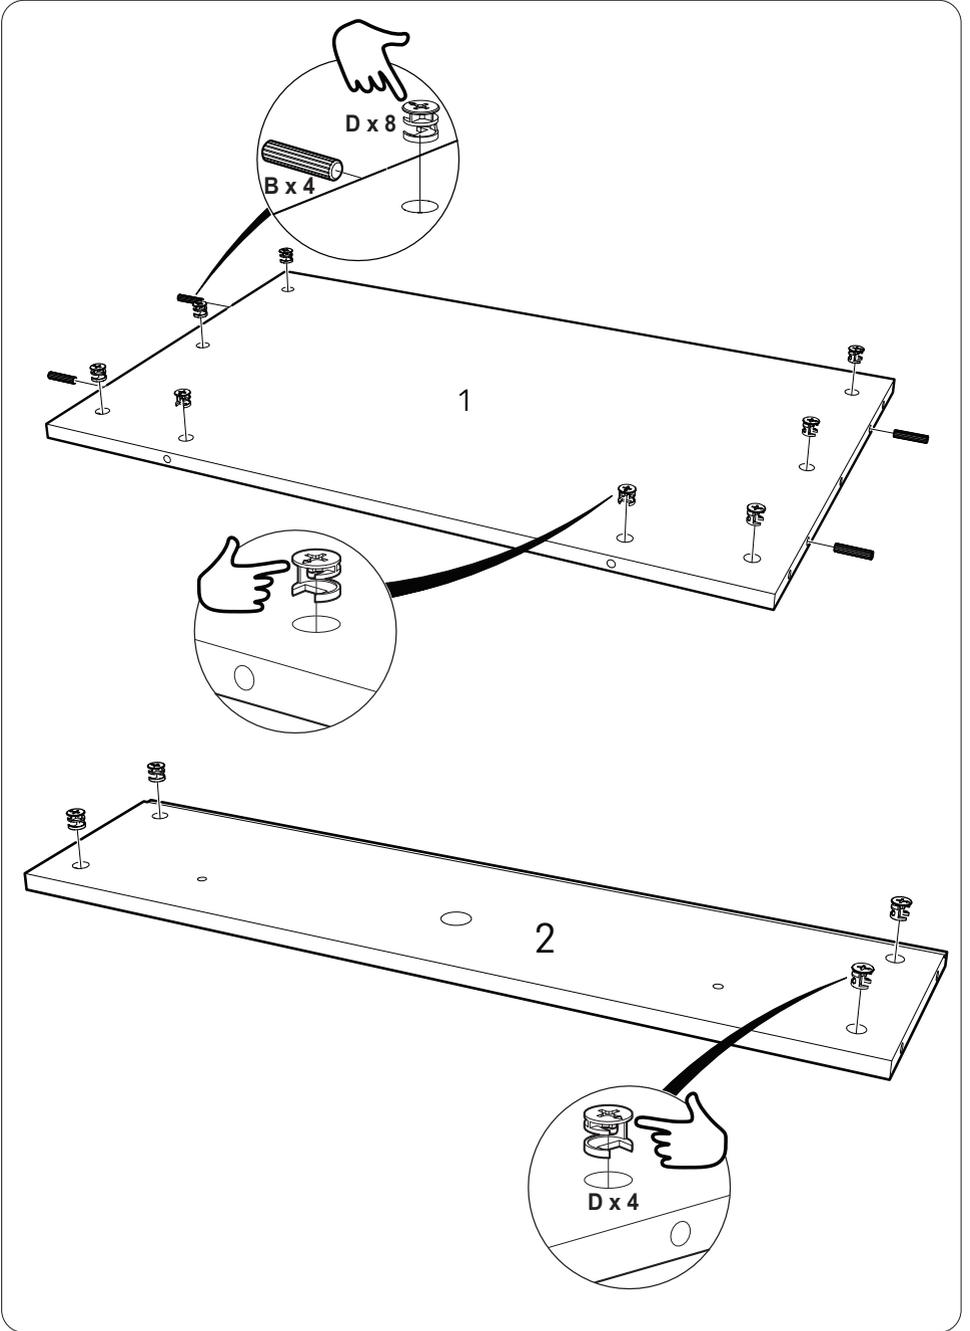



Assembling the Dresser

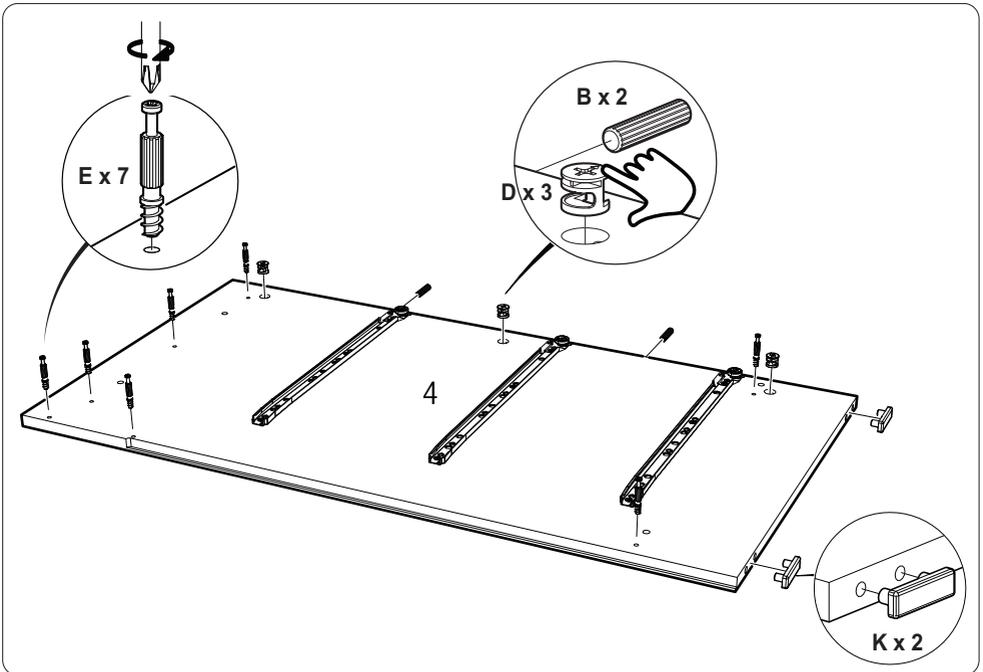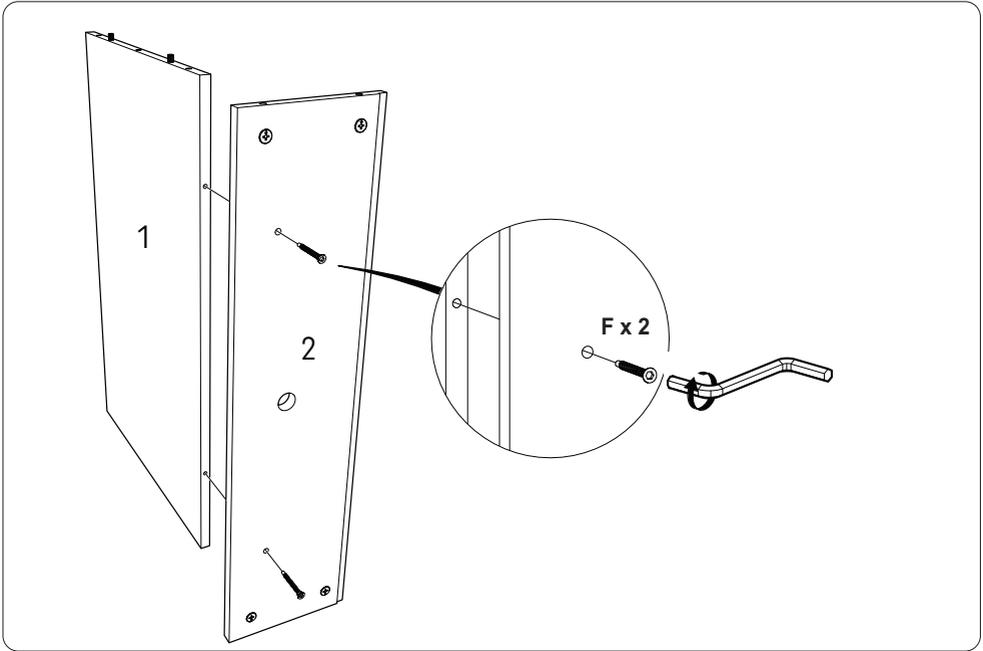



Assembling the Dresser

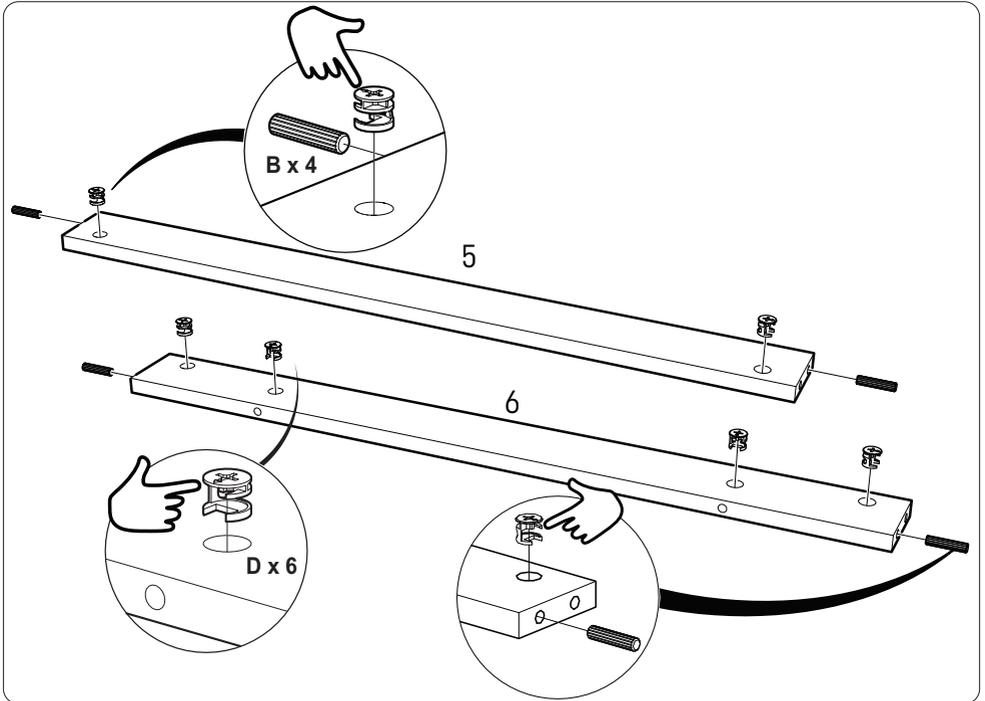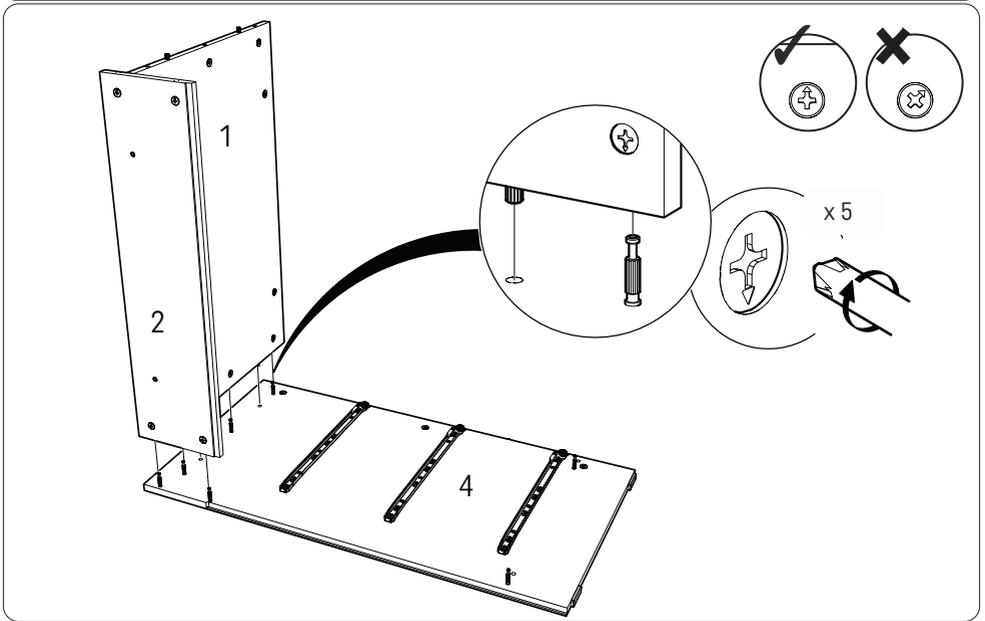



Assembling the Dresser

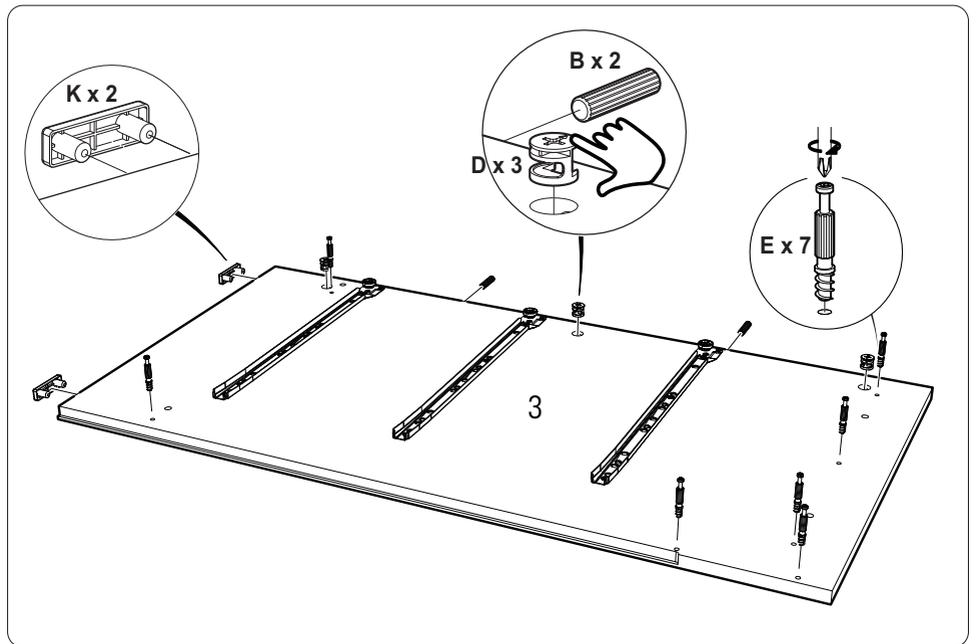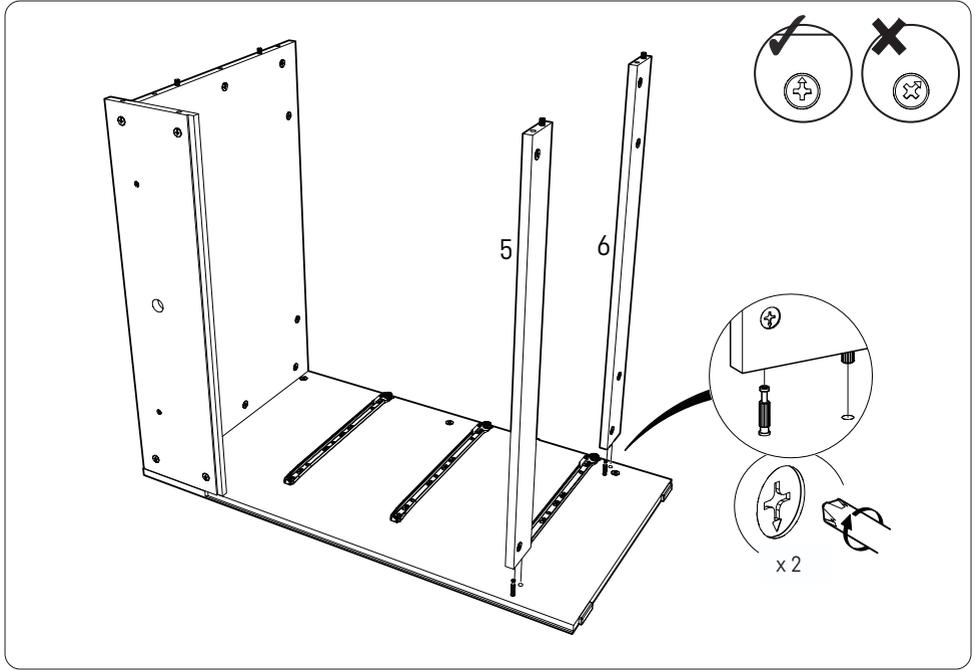



Assembling the Dresser

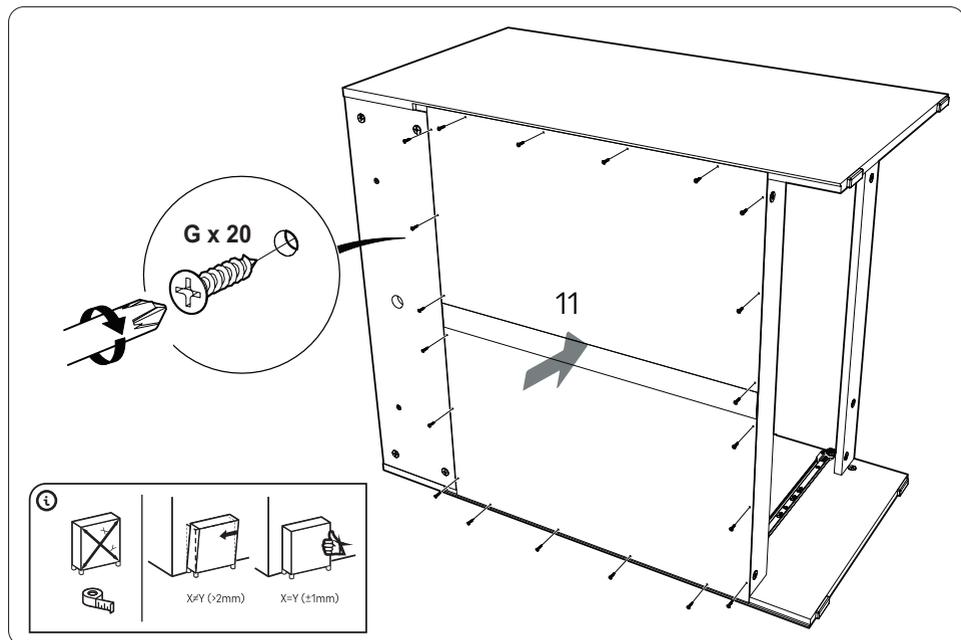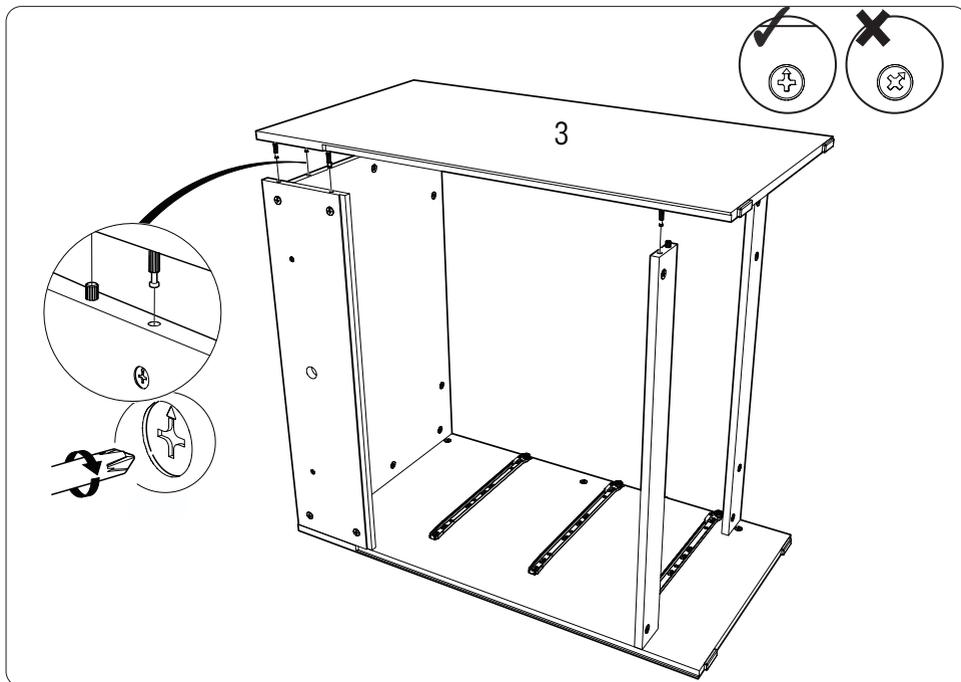



Assembling the Dresser

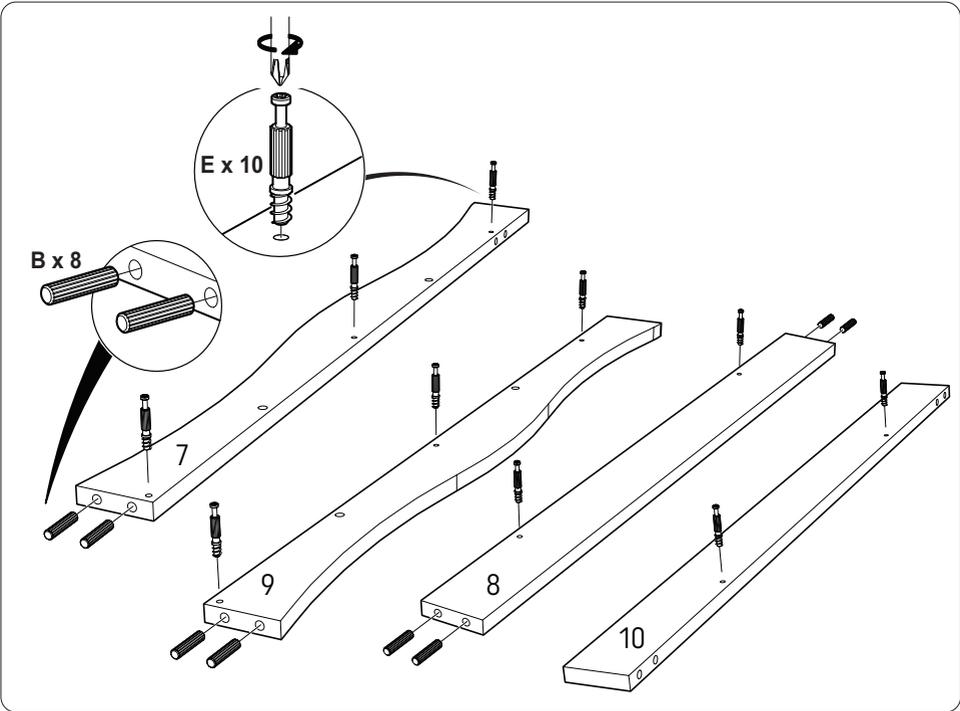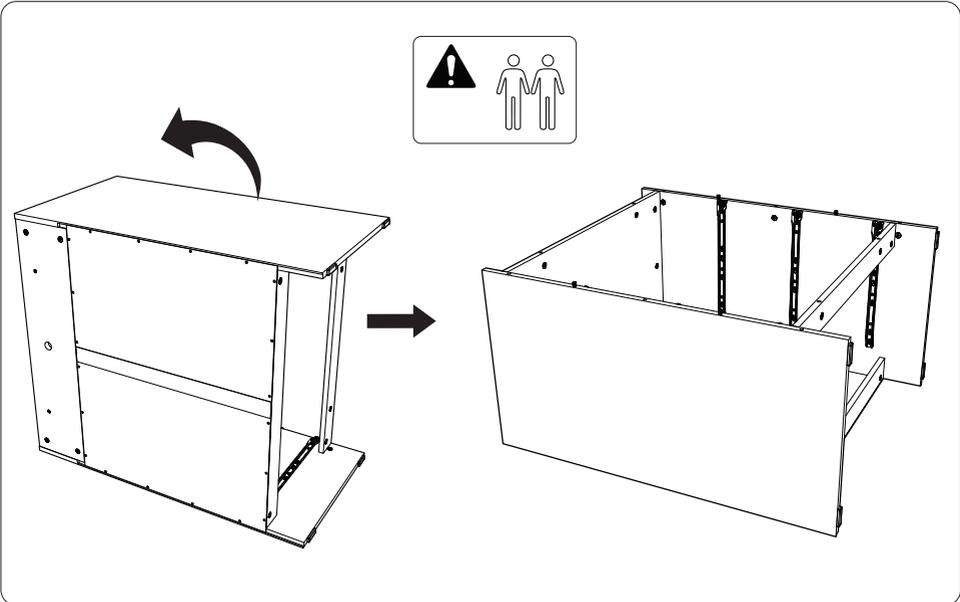



Assembling the Dresser

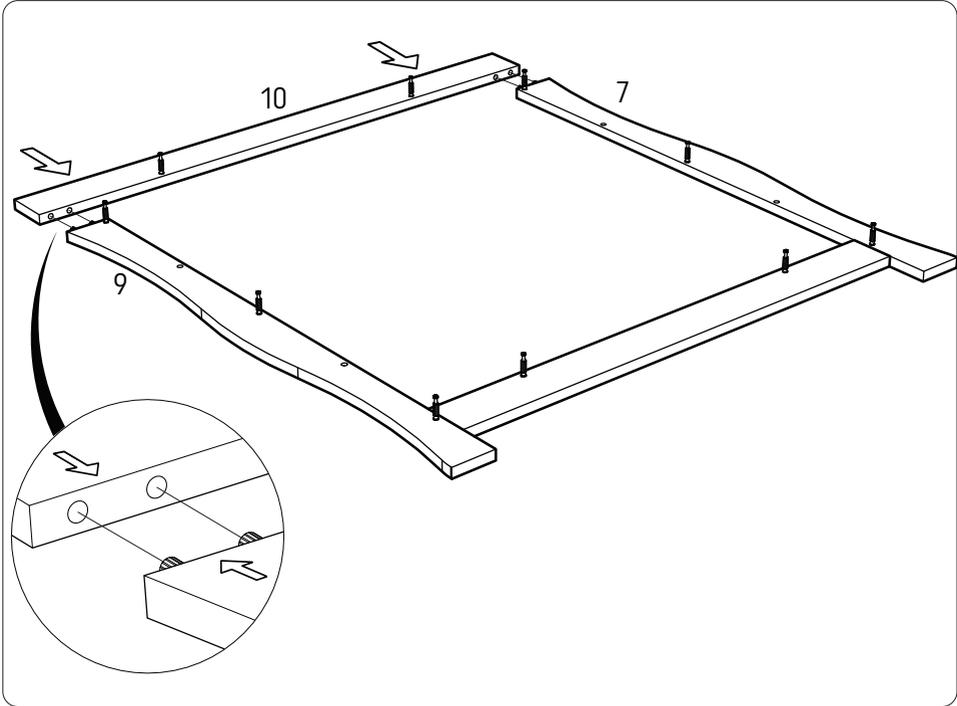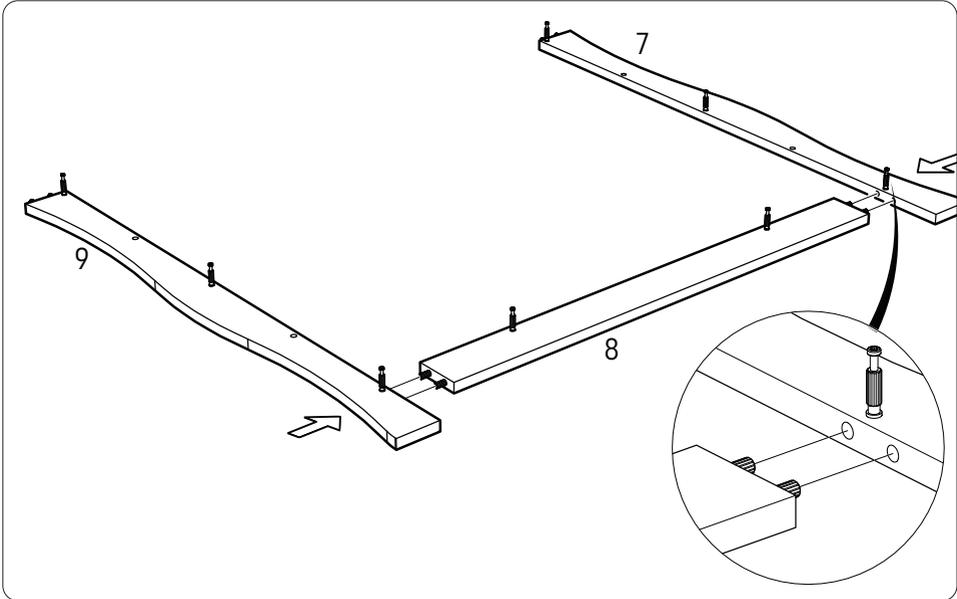



Assembling the Dresser

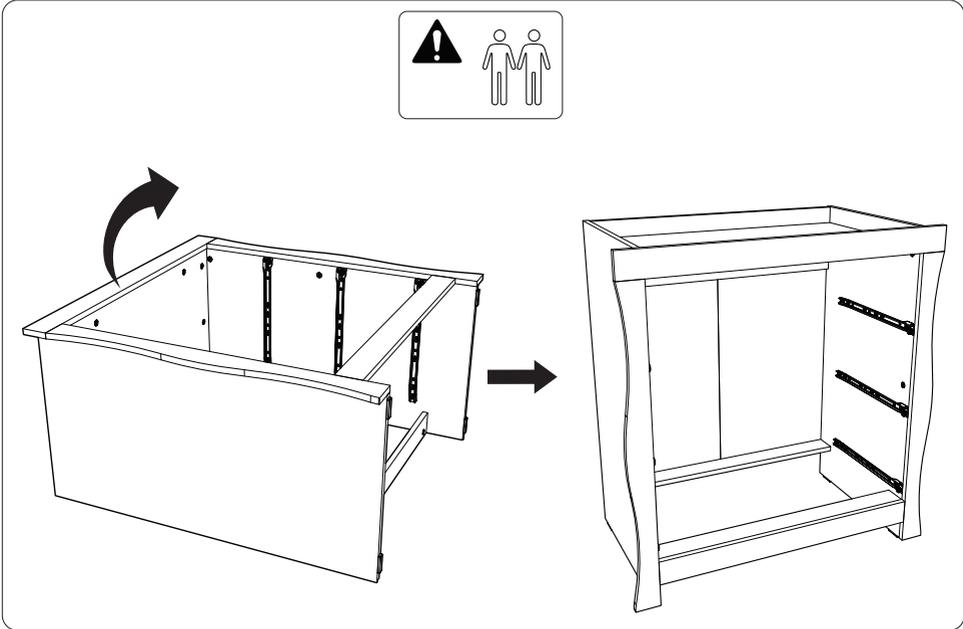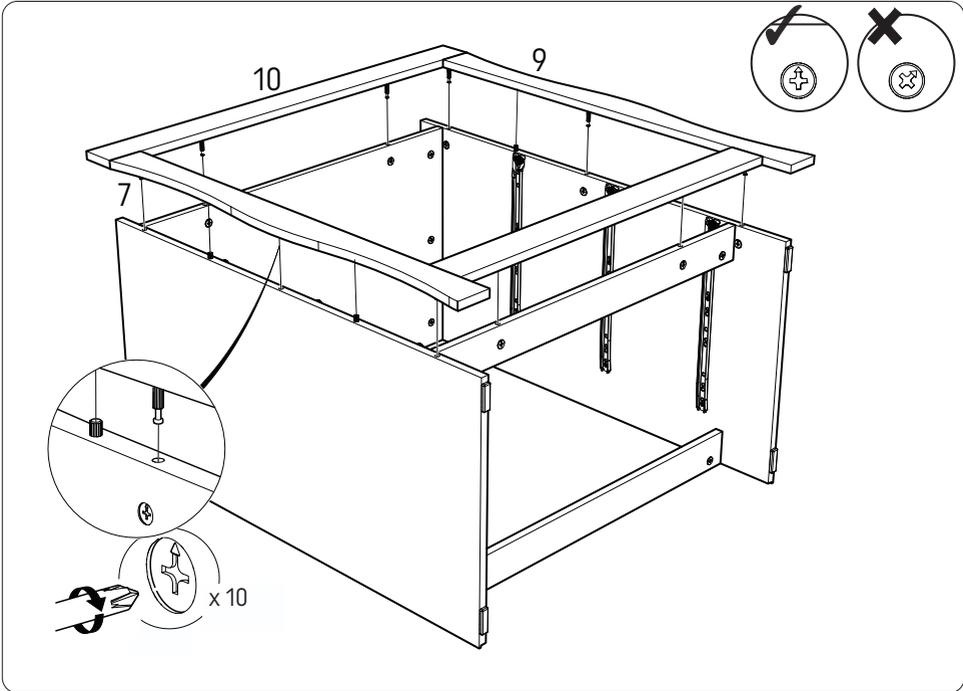



Assembling the Dresser

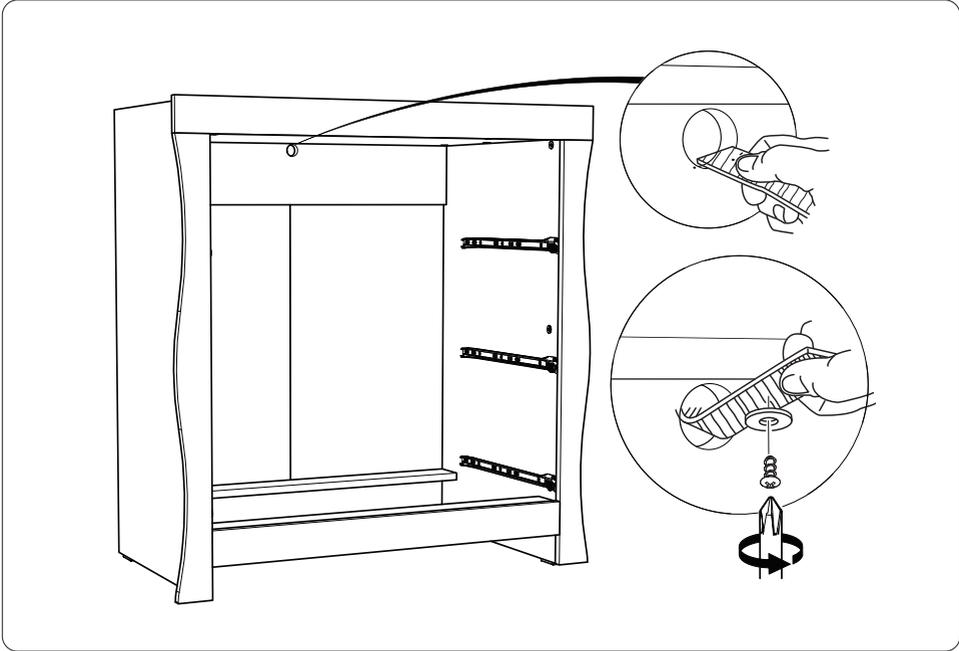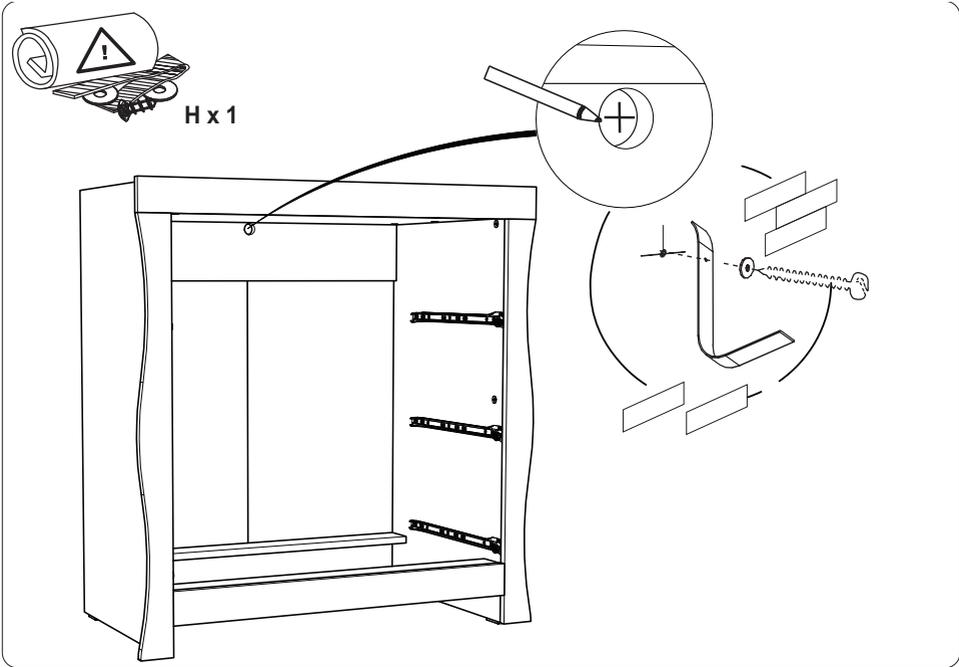



Assembling the Dresser

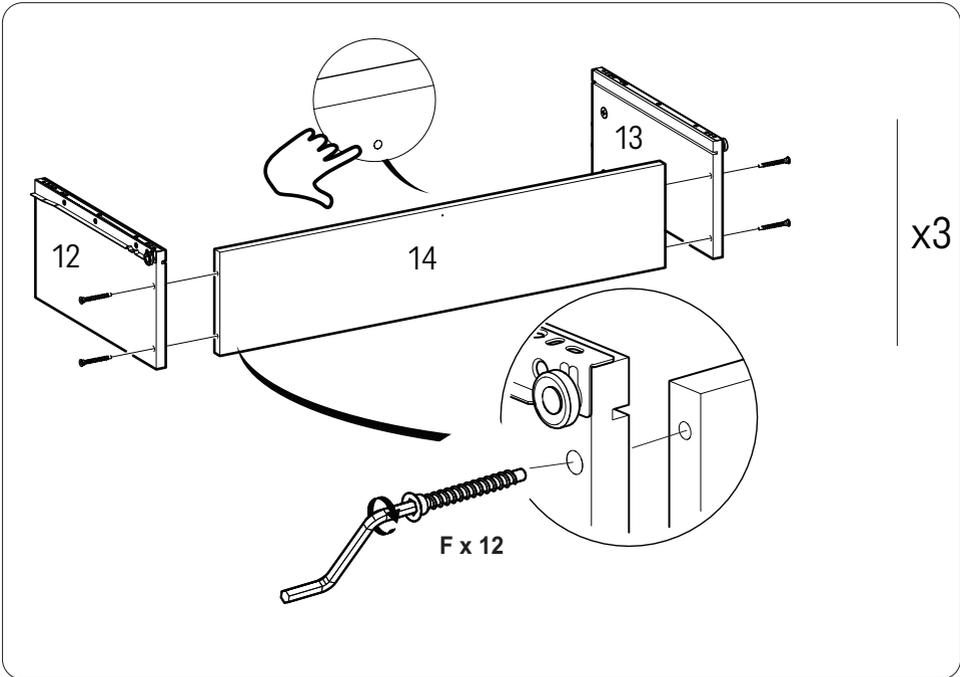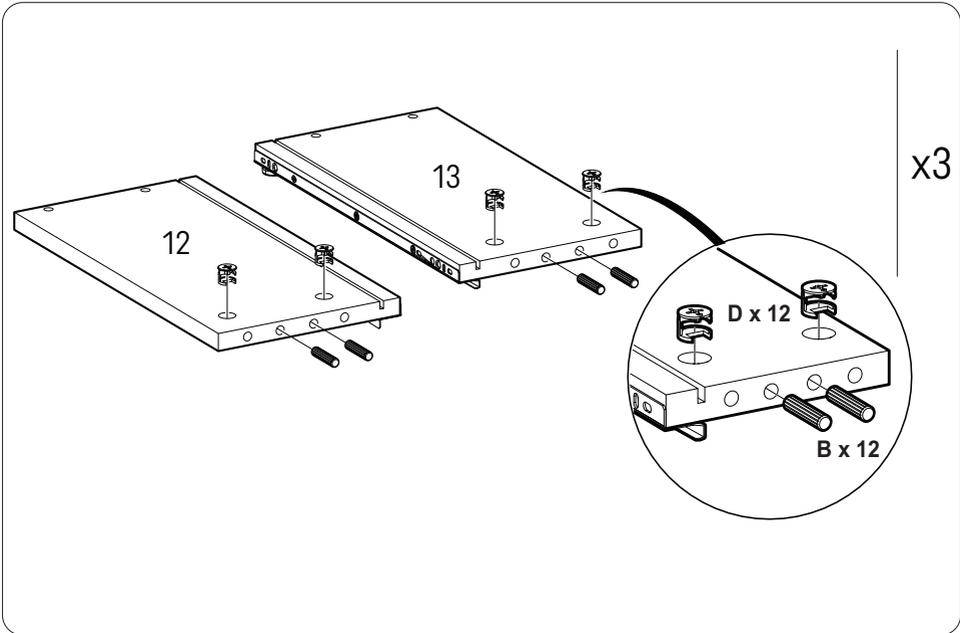



Assembling the Dresser

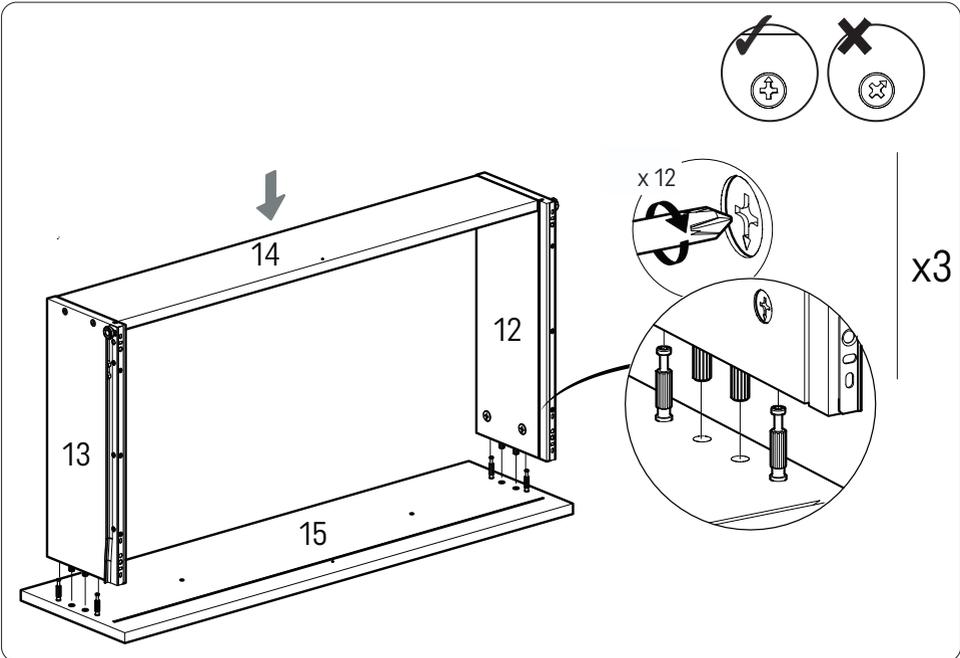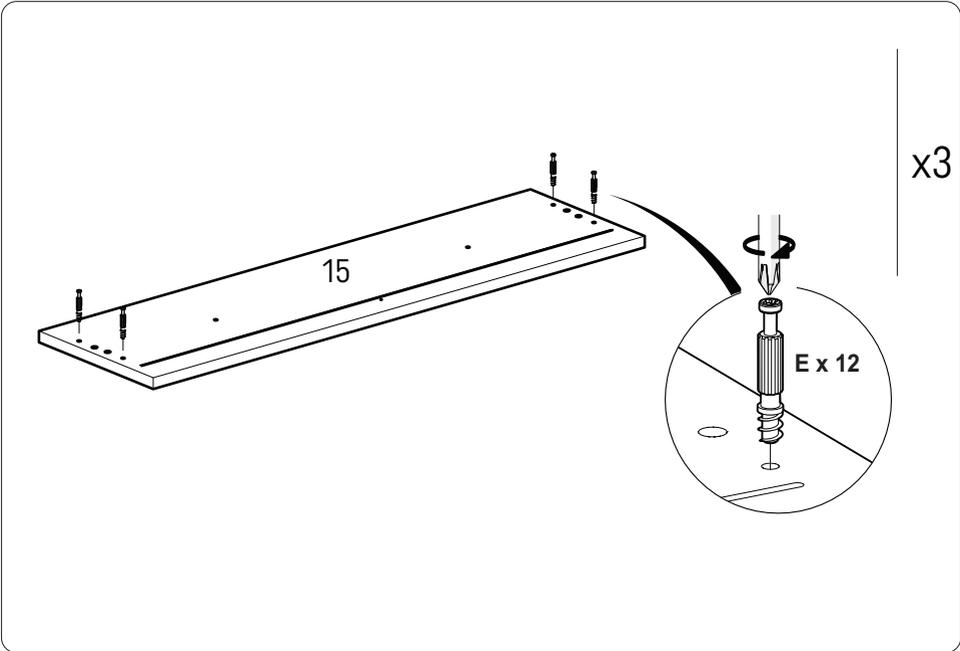





Assembling the Dresser

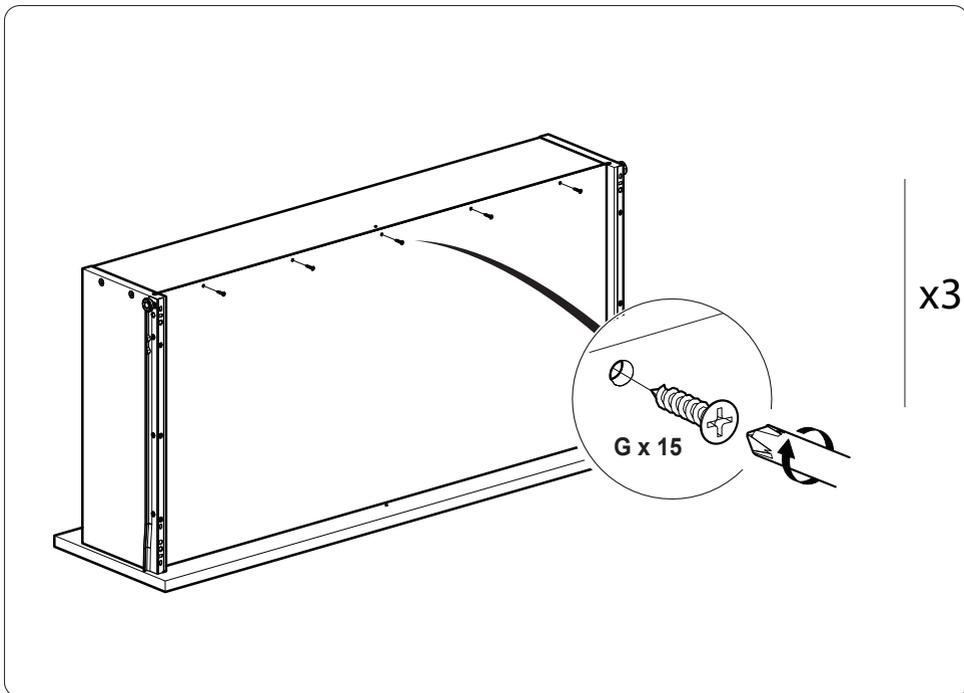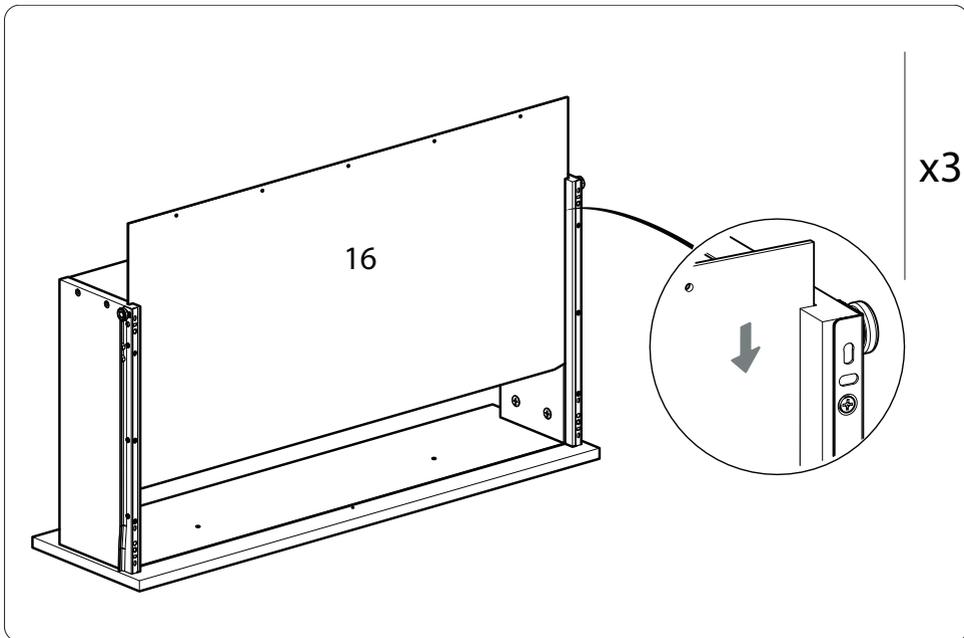

Assembling the Dresser

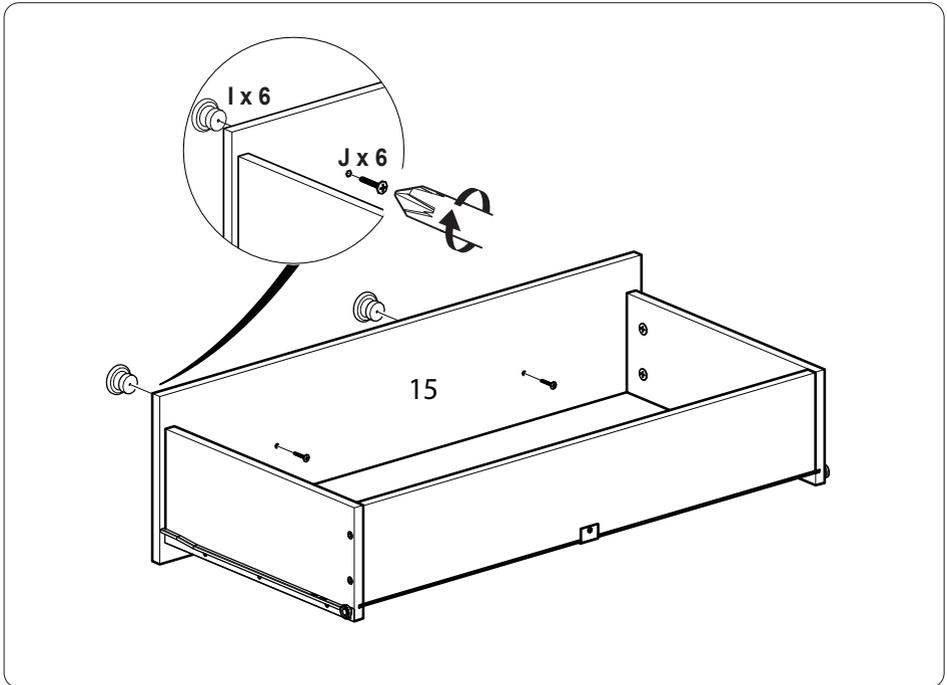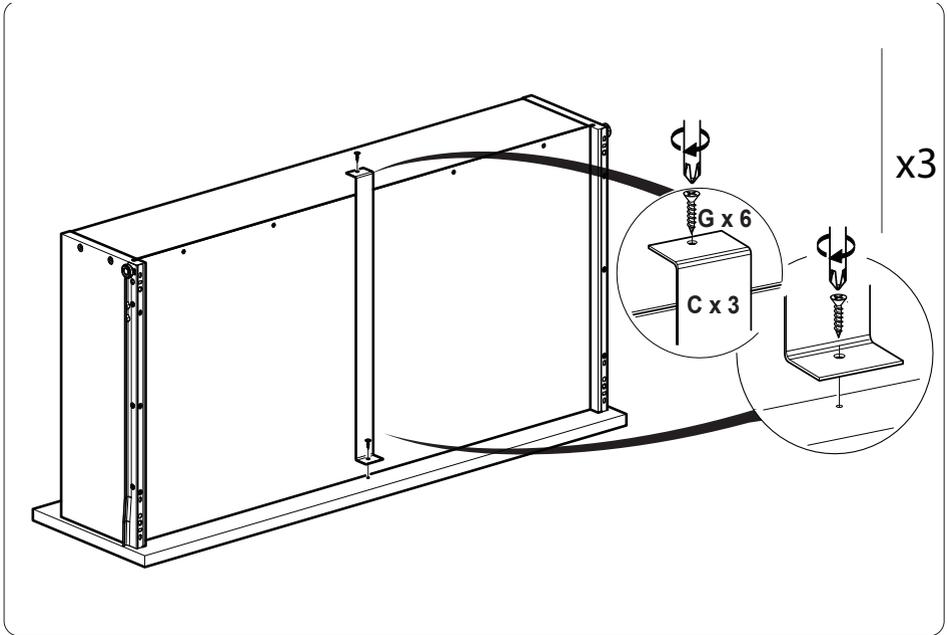

Assembling the Dresser

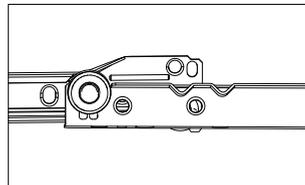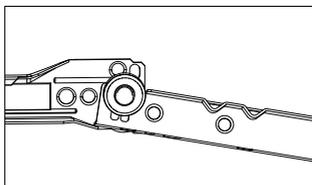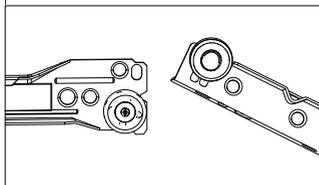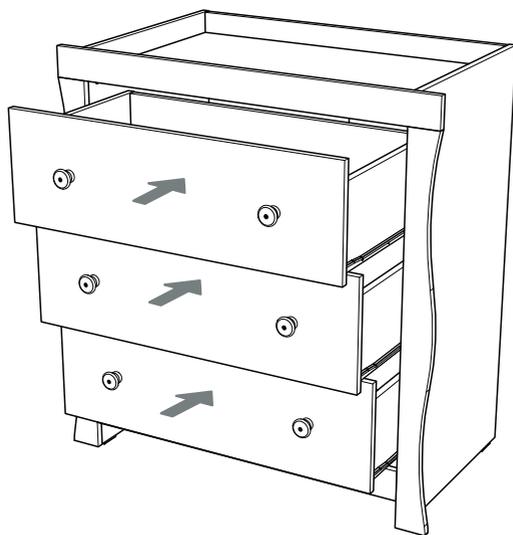

IMPORTANT – Read the instructions carefully before use and keep for future reference.

Warning:

- Do not leave your child unattended.
- Always use the wall attachment strap provided.
- All assembly fixings should always be tightened properly. Care should be taken that no screws are loose because a child could trap parts of their body, or clothing (e.g., strings, necklaces, ribbons, dummies, etc.) which could pose a risk of strangulation.
- Be aware of the risk of open flames and other such sources of strong heat, such as electric bar fires, gas fires, etc. in the near vicinity of the dresser.
- Take care when handling or moving the furniture. Careless handling may cause damage.
- Regularly check that all fixings are tightened and that there are no broken or damaged parts

Suitable for use with a changing mat of max size 75 x 50 cm.

The changing area is suitable for use up to 12 months old or 11 kg in weight maximum.

DO NOT use the dresser if any of the parts are broken, torn or missing.

Any additional or replacement parts can only be obtained from the manufacturer or the distributor.

Ensure there are no small parts fittings are left after assembly as these can be a choking hazard.

This product conforms to: EN 12221-1:2008+A1:2013

Cleaning

Your dresser can be cleaned by wiping with a damp cloth and drying with a soft clean cloth.

Do not use abrasives, bleach, alcohol or ammonia-based household polishes.

A series of 20 horizontal dashed lines spanning the width of the page, intended for handwritten notes or a list.

Imported by Online4baby Ltd.
Meadowbank, Tweedale Way, Oldham, OL9 8EH