

Denver Luxe 3-in-1 Travel System

Instruction manual



IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Warning: A child's safety is your responsibility.

This product is tested and approved to
EN 1888-2:2018 + A1:2022
EN1466:2023

1. Welcome

Thank you for purchasing the Puggle Denver Luxe 3-in-1 Travel System.

Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of your Puggle Denver Luxe 3-in-1 Travel System.

If you have a query with this product or require replacement parts, please contact Online4Baby online at online4baby.com/contact-us.

2. Safety instructions


IMPORTANT! PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY BEFORE INSTALLING THE PRODUCT.

- **WARNING!** Keep for future reference. The child may be hurt if you do not follow these instructions. Adult assembly is required.
- **WARNING!** A child's safety is your responsibility
- **WARNING!** Before using, remove and dispose of any plastic bags and other packaging (e.g. fasteners, fixing ties, etc.) and keep them out of reach of children.
- **WARNING!** This pushchair is suitable for one child from birth and up to a max. weight of 22kg (approx. 3 years). The carrycot is suitable from birth up to max. weight 9kg.
- **WARNING!** Suitable for newborn babies in the most reclined position only.
- **WARNING!** Lowest backrest position suitable for children under 6 months.
- **WARNING!** Follow car seat suitability recommendations given in the separate car seat instruction manual.
- **WARNING!** Never leave the child unattended
- **WARNING!** Ensure all locking devices are engaged before use.
- Always apply the parking brake when the product is stationary.
- Ensure the parking brake is engaged during the loading and unloading of the child.
- Take extra care in windy conditions.
- Be careful when going up or down kerbs.
- **WARNING!** To avoid injury ensure that your child is kept away when unfolding and folding this product.
- **WARNING!** Do not let your child play with this product.
- **WARNING!** ALWAYS USE THE RESTRAINT SYSTEM. Ensure it is correctly fitted at all times
- **WARNING!** Always use the crotch strap in combination with the waist belt section of the harness.
- **WARNING!** Ensure that the pram body and seat unit attachment devices are correctly engaged before use. This applies for both carrycot and car seat.
- **WARNING!** This product is not suitable for running or skating.
- **WARNING!** Do not let other children play or hang on the product.
- **WARNING!** Do not use this product if any part is broken, torn or missing.

2. Safety instructions

- **WARNING!** Do not add an additional mattress to the pushchair, carrycot, or car seat.
- **WARNING!** Do not place the product near an open fire or other source of strong heat.
- Do not use parts or accessories which are not approved by the manufacturer.
- Do not allow your child to climb unassisted into the product.
- Remove your child and fold the product when going up or down steps/escalators.
- If this product is used by someone unfamiliar with it e.g. grandparents, always show them how it works.
- The basket for the carriage can carry a maximum load of 2kg with items evenly distributed.
- Bags and other items should not be hung from the handles as this can affect the stability of the product.
- Infant car seats should not be used in place of a cot or cot bed. Should your child need to sleep, it should be placed in a suitable cot or cot bed.
- Overloading, incorrect folding and the use of non-approved accessories is unsafe and may damage or break this product.
- The max. weight that the parent tray can withstand is 2kg.
- Never leave the raincover, hood or apron on indoors, in a hot atmosphere or near a heat source as your child may overheat.
- To prevent damage, remove the raincover before folding the pushchair.
- Do not place anything on top of the raincover.
- **WARNING!** The carrycot is suitable only for a child who cannot sit up unaided, roll over and cannot push itself up on its hands and knees. Maximum weight of the child: 9kg.
- Do not place the carrycot near an open fire or other source of strong heat.
- The handle and the bottom of the carrycot should be inspected regularly for signs of damage and wear.
- Before carrying or lifting the carrycot, make sure the handle is locked in the correct position of use.
- The head of the child in the carrycot should never be lower than the body of the child.
- Be aware of the hazard of bumping the baby, eg when putting the carrycot on the floor, going through doors. Do not leave anything in the carrycot that could present a danger of suffocation, eg non-rigid toys, pillows. Do not place the carrycot close to another product, which could present a danger of strangulation, eg strings, blind/curtain cords.
- Overheating can endanger the life of your child! Take into account the ambient temperature and the child's clothing and ensure that the child is not too cold or too warm. It is recommended to ask a health professional for advice on baby safe sleeping.

3. Parts List - Part 1 / Stroller

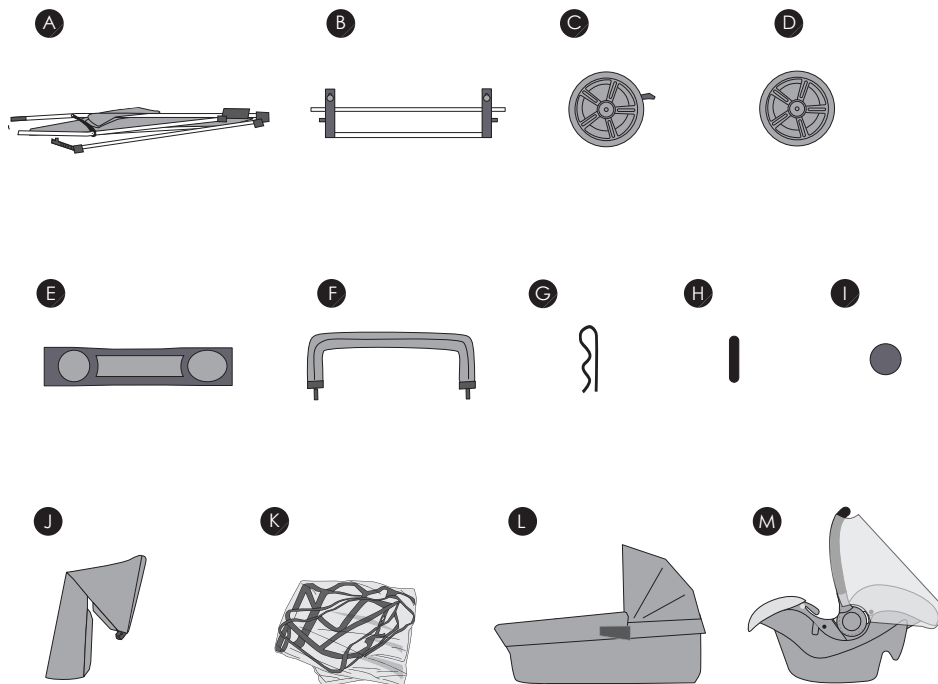


Contained in your carton are:

Nº	Part	Qty
A	Pushchair chassis	1
B	Rear wheel axle	1
C	Rear wheels	2
D	Front wheels	2
E	Parent tray	1
F	Bumper bar	1
G	Cotter pin	2 (installed on Part B)
H	Washer	4 (installed on Part B)
I	Plastic cap	2
J	Canopy	1
K	Raincover	1
L	Carry cot	1
M	Car seat	1

4. Assembly


4.1. CHASSIS ASSEMBLY

Release the pushchair chassis (A) from the locked position by lifting the locking catch from over the locking rivet on the pushchair frame.

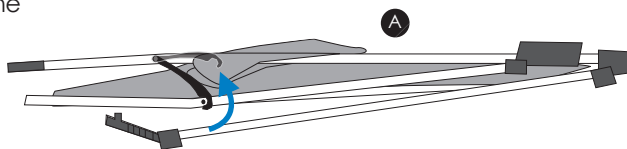


Note. You may have to squeeze the legs and handles together first so as to release the tension on the rivet.

Standing behind the pushchair and holding it by the handle, lift the handle upwards to unfold the frame.

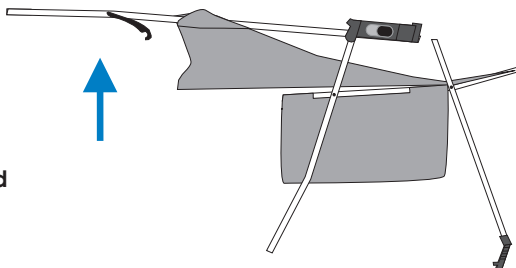

WARNING!

Ensure the opened chassis is locked in place before you use it.

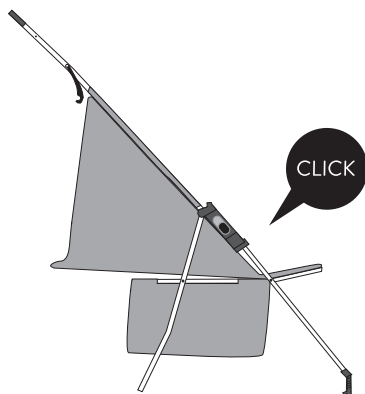


4. Assembly

4.2. REAR WHEEL ASSEMBLY


The cotter pins (G) and washers (H) are installed on the rear wheel axle (B).

Remove the cotter pins as shown.

Remove one washer either side of the rear wheel axle.

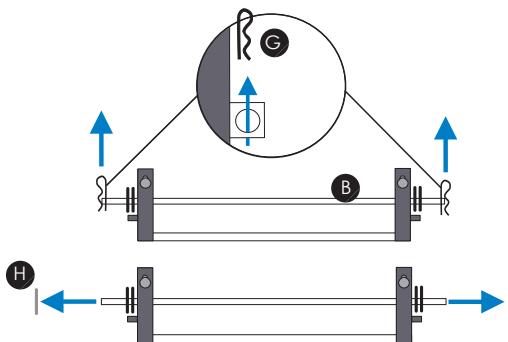


Place one wheel (C) followed by the washers that were just removed, one each side onto the rear wheel axle. Next, re-insert the cotter pins and finally attach the plastic caps (I). Push to secure.

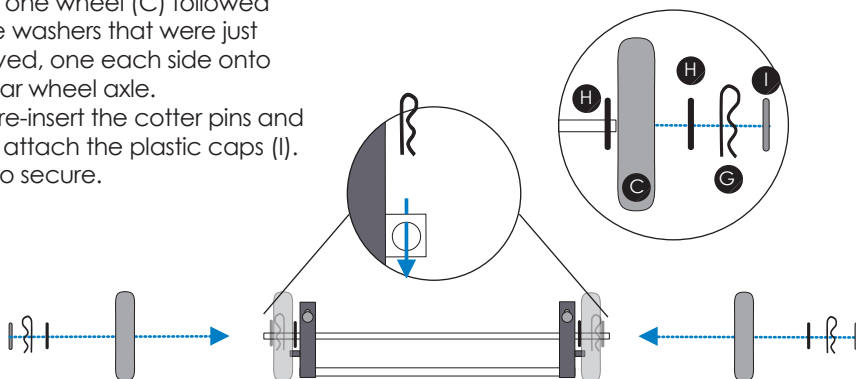

Fit the assembled rear wheel axle to the pushchair. Insert the ends of the tubing into allocated space on the rear wheel axle.

Push upwards until you hear it lock and 'click' into position.

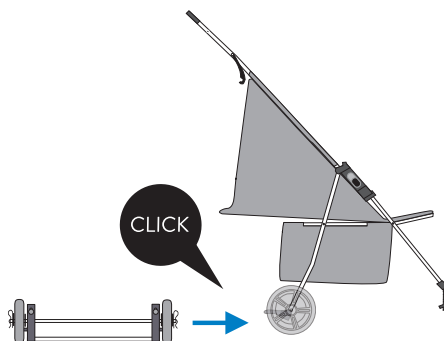


4. Assembly

4.3. FRONT WHEEL ASSEMBLY


Attach the front wheels (D) by aligning the wheel into the allocated area on the front wheel.

Listen for the 'click' to ensure that they are secure.

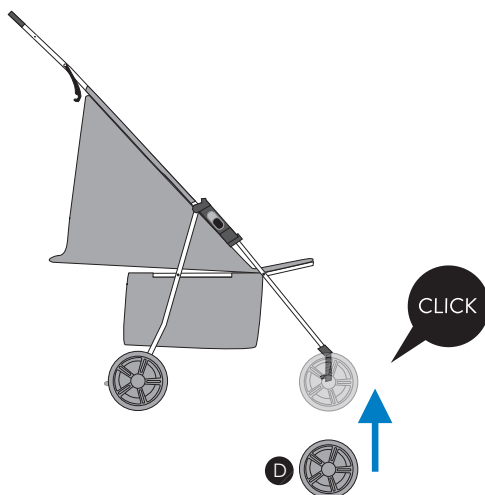

4.4. PARENT TRAY

Align the parent tray (E) with the spring pin and attach it. Repeat for the other side.

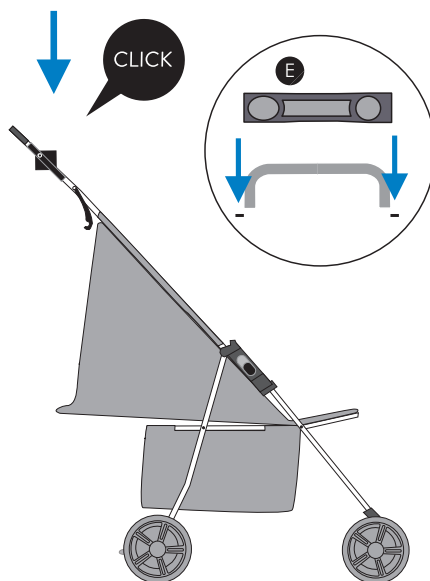


4. Assembly

4.5. BUMPER BAR

Attach the bumper bar (F) to the pushchair chassis. Align the posts and push down to secure.

Wrap the crotch pad around the bumper bar and secure with press stud.

To remove the bumper bar, press the buttons on the sides of the connection posts.

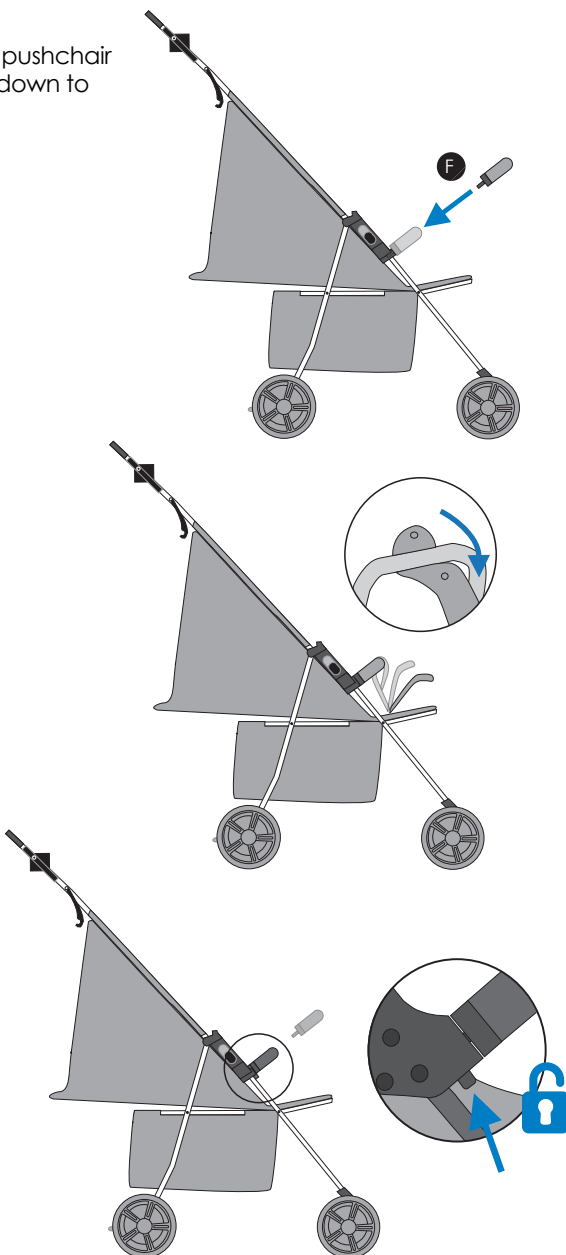


4. Assembly


4.6. CANOPY

Align the canopy (J) connectors with the connection posts on the pushchair chassis.

Ensure the hole on the connector aligns with the notch on the chassis tubing. Push to secure.

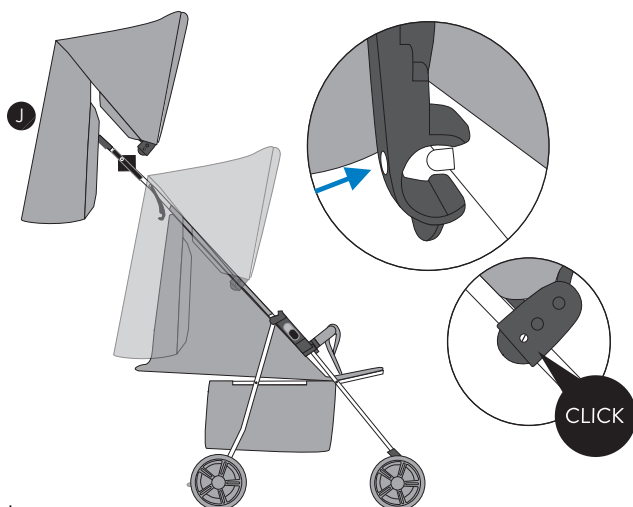





To remove, pull the connector out, away from the chassis tubing.

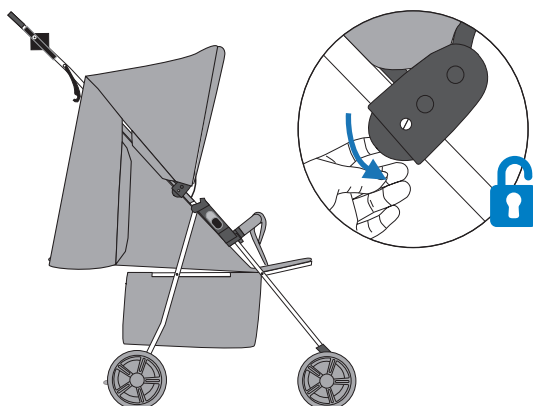


4. Assembly

4.7. CARRYCOT

To erect the carrycot (L), pull the support tubes outward until they connect into their holders.

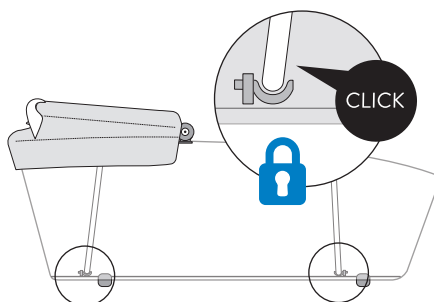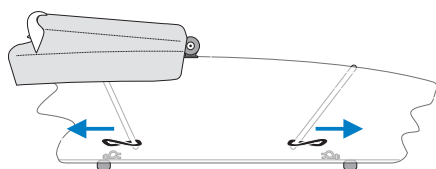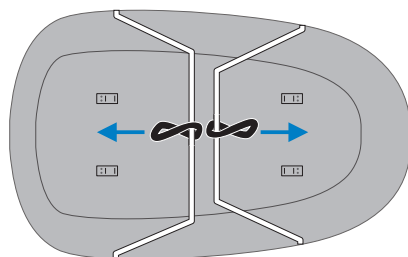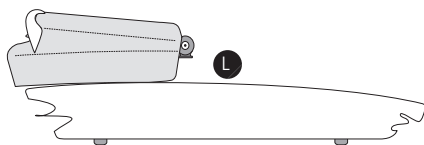


Open the canopy. Insert the mattress and attach the apron.

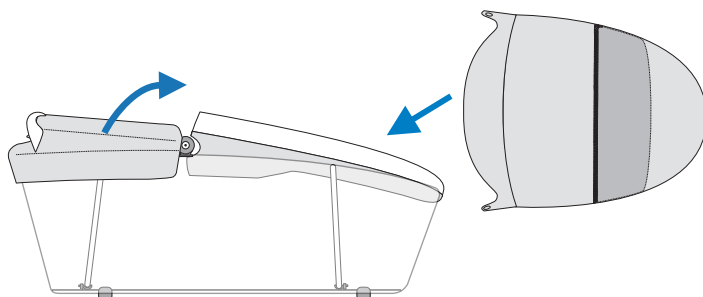

5. In Use


5.1. PUSHCHAIR CANOPY ADJUSTMENT

The canopy can be opened or closed by pulling or pushing on the canopy rim.

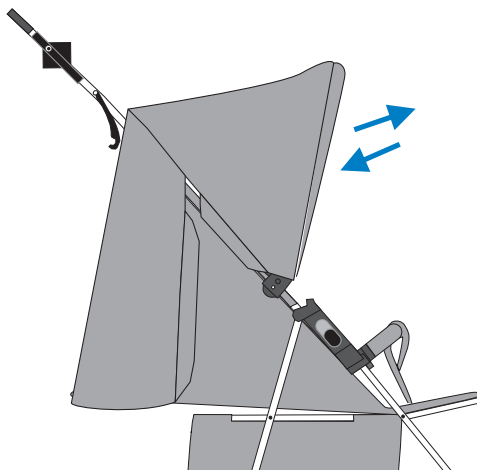

5.2. FOOTREST ADJUSTMENT

Alter the footrest by pressing on each adjuster in turn while simultaneously pressing down or pulling up lightly on the footrest.

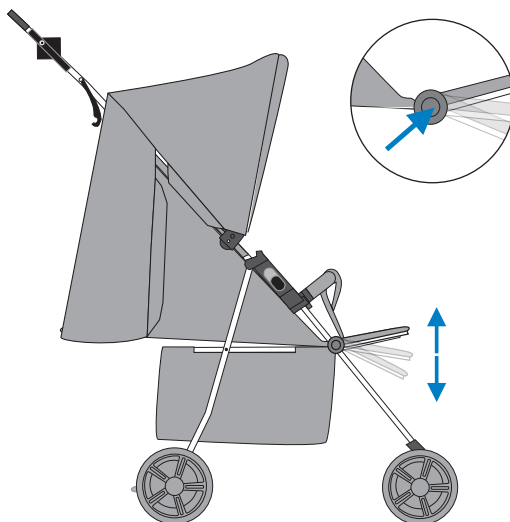

5. In Use

5.3. BRAKES

To engage the brake, push down the brake locking pedal. Listen for the 'click'. Lift up pedal to release brake.



WARNING!

Always apply the parking brake when the pushchair is not moving.




WARNING!

Always apply the brake when you are placing and removing the child.



WARNING!



Always apply the brake when you are making adjustments to the pushchair.

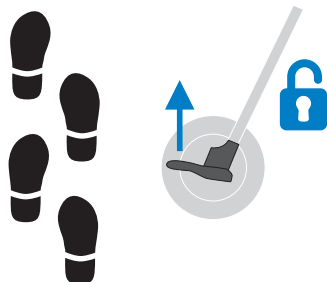

5.4. SWIVEL WHEELS

The pushchair has lockable front swivel wheels.

To lock swivel wheels press the pedal down. Repeat on both wheels. Push up to release and engage swivel wheel.

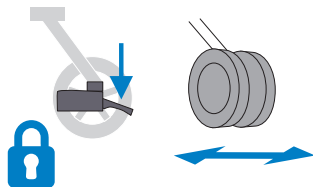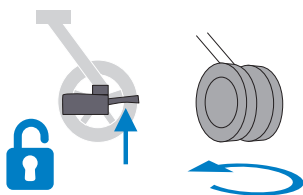




5. In Use

5.5. BACKREST ADJUSTMENT

The backrest adjustment is at the rear of the seat.

Squeeze the button and gently lower the backrest to the desired height.

Alternatively, squeeze the button and gently lift up the backrest.

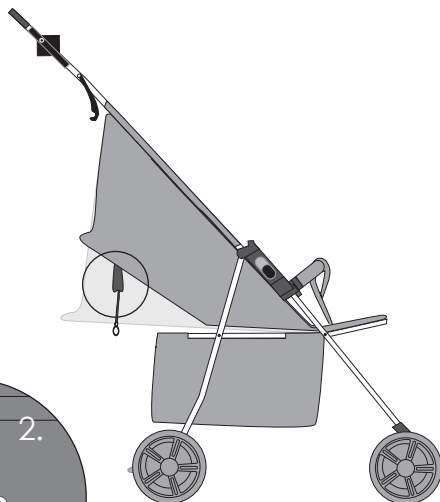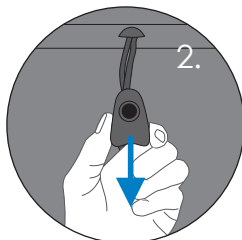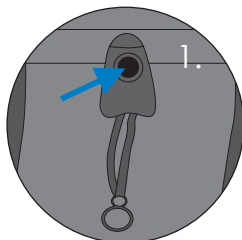

WARNING!

Suitable for newborn babies
in the most reclined position only.





5. In Use

5.6. HARNESS OPERATION


A five-point safety harness is provided to restrain your child and should always be worn.

There are 2 shoulder height positions. The shoulder position should be at the lowest position for a newborn baby.

Thread harness through loops as shown.

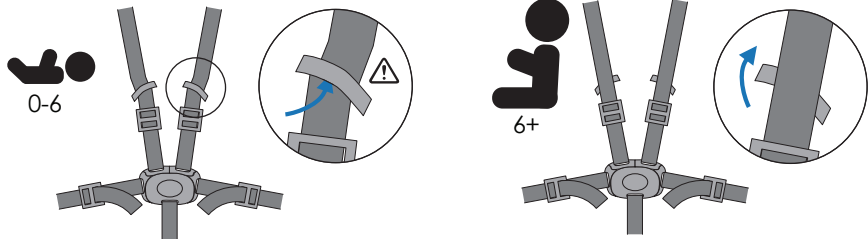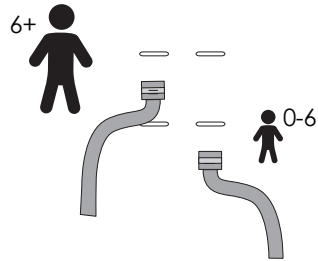


To secure the child in the harness, slide two buckles A onto buckle B. Then push the A and B buckles into C buckle holder.

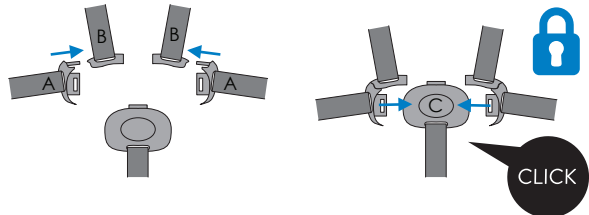

To release the buckle, press the button in the centre.


Adjust the length of each strap to ensure it fits nice and snug.

Carefully adjust the harness by pulling the slider until the desired fit is achieved.

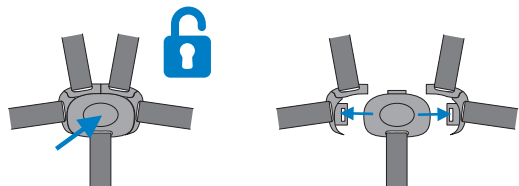

WARNING!

Always adjust the harness to your child correctly for their comfort and safety. A loose fitting harness can be very dangerous.

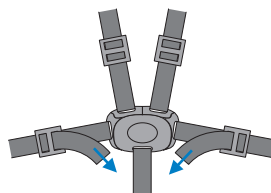


5. In Use

5.7. REMOVING THE COVERS


The seat covers can be removed from the pushchair chassis for attaching the carrycot and car seat.

Detach the fabric over the bumper bar and remove the bumper bar (refer to Page 8, Step 4.5.)

IMPORTANT. The bumper needs to be assembled to fit the car seat to the chassis.

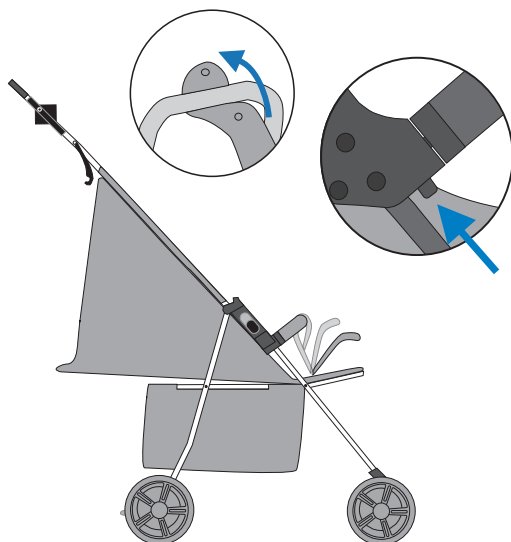



Unhook the fabric, both sides at the top of the chassis near the handle and fold it into the seat.

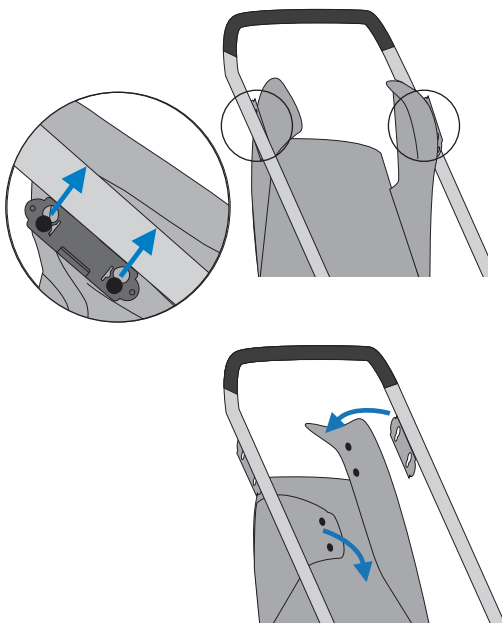


5. In Use

5.7. REMOVING THE COVERS

Next, unhook the fabric at the seat base and undo the strap around the footrest.

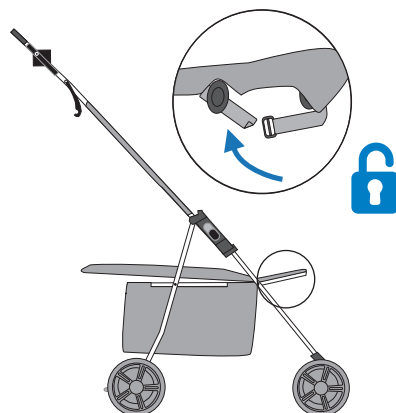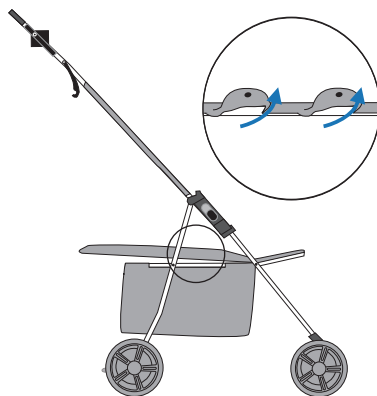

Lift the seat covers away from the pushchair chassis.

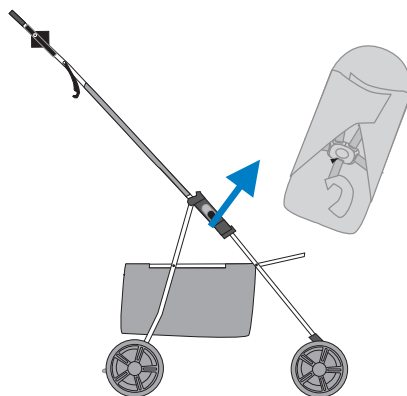


5. In Use

5.8. ATTACHING AND DETACHING THE CARRYCOT

The carrycot (L) can be fitted to the pushchair chassis.

Ensure the seat covers, canopy and bumper bar are removed before trying to fit the carrycot.

Adjust clips to the upright position.

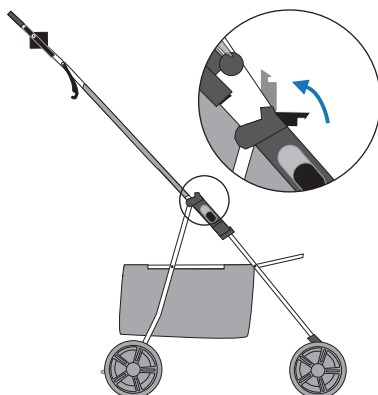


Lower the carrycot onto the chassis ensuring to attach the connectors located both sides. Lift the carrycot gently by the handle to check it has locked into place.



To detach the carrycot, press the button located on both sides of the carrycot. Lift it away from the chassis and fold the clips down.

WARNING!

Ensure the carrycot is attached to the frame correctly before use.

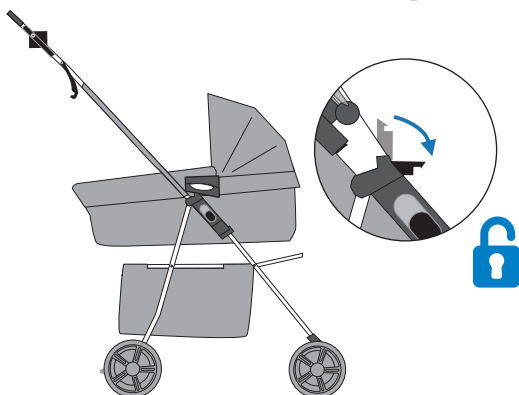

5. In Use

5.9. ATTACHING AND DETACHING THE CAR SEAT

The car seat (M) can be fitted to the pushchair chassis to create a travel system.

The car seat can be attached to the pushchair chassis with the covers installed or with the covers removed.

Note. the bumper bar must be assembled to fit the car seat.



Adjust clips to the upright position.



WARNING!

Never attach the car seat without the bumper bar fitted to the chassis.

Lower the car seat onto the chassis ensuring to attach the connectors located both sides. The car seat back should rest comfortably on the bumper bar.

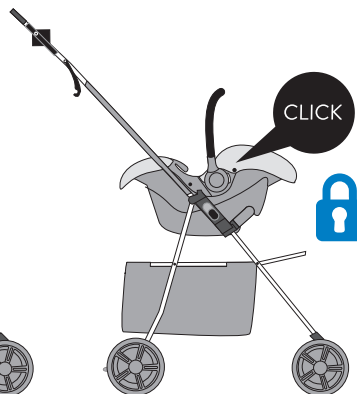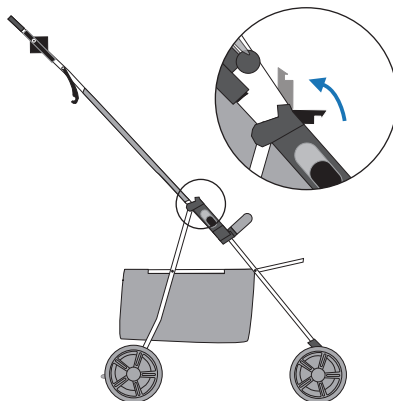


To detach the car seat, press the button located on both sides of the car seat. Lift it away from the chassis and fold the clips down.



WARNING!

Refer to the car seat instruction manual.

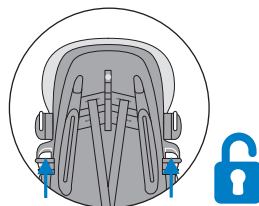


5. In Use

5.10. RAINCOVER

Locate the raincover (K).

Pull the raincover down over the stroller starting at the top of the canopy and pulling down towards the footrest.

NOTE. The raincover will fit the seat unit, carrycot and car seat.

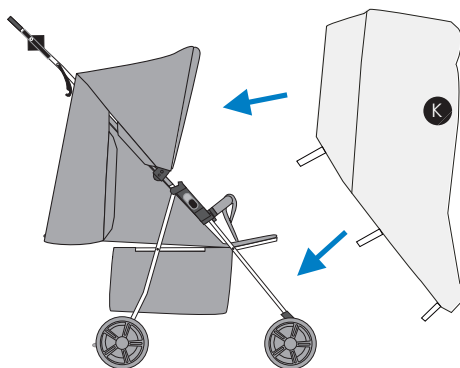

6. Folding


6.1. FOLDING THE CHASSIS

NOTE. Remove all items from the basket before attempting to fold.


NOTE. If using with car seat or carry cot, ensure it has been removed before folding

NOTE. Ensure the backrest is in the lowest position before folding.


Lock swivel wheels,
fold the canopy and
engage the brakes.

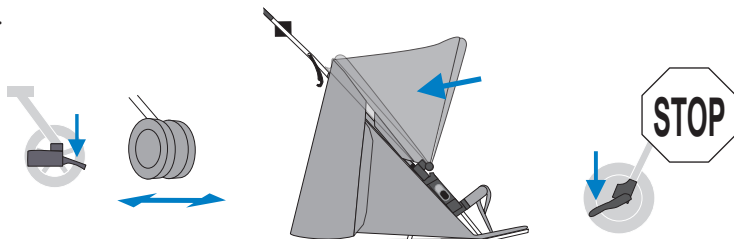

Slide up the folding locks
on the side of the chassis
and push the handle
downwards.

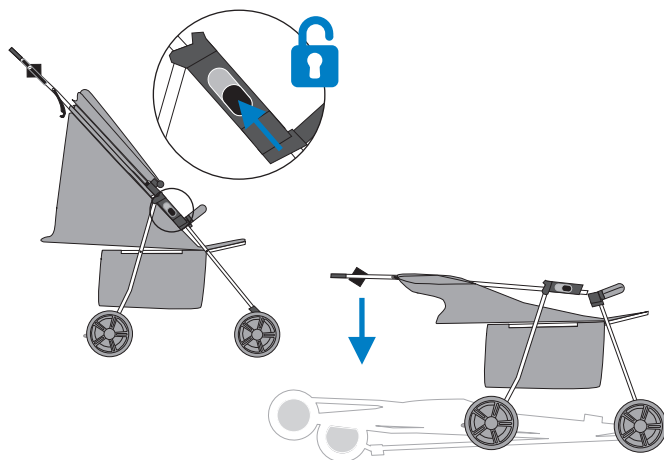

Engage the locking catch.

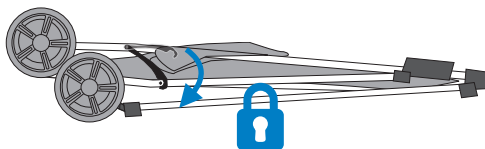

7. Care and Maintenance

7.1. CLEANING

- Spot or sponge clean fabrics with mild detergent. Use mild soap or upholstery shampoo. NEVER use bleach. Dry in shade thoroughly before reuse and avoid direct heat and sunlight. Do not iron. Do not dry clean.
- Wipe clean plastics and metals with a damp cloth.
- Never clean any part of the product with abrasive, ammonia based, bleach based or spirit type cleaners.
- Ensure the product is fully dry before use or storage.
- Always ensure the product is stored in a dry place to prevent mold or mildew developing.

7.2. MAINTENANCE

- The product requires regular maintenance to ensure correct and safe performance.
- Regularly inspect the wheels, locks, brakes, harness, catches, seat adjusters, joints and fixings to ensure they are clean, operating correctly and in full working order.
- Replace tyres if they are excessively worn.
- Do not use this product if any part is broken, torn or missing and use only spares provided by the manufacturer.
- If parts become stiff or difficult to operate, ensure dirt is not the cause, then try a light application of a silicon lubricant, ensuring it penetrates between the components. Regular lubrication of moving parts will extend the life of your product and make opening and folding easier.
- After exposure to damp conditions, dry off with a soft cloth and leave fully open in a warm environment. Storing damp will encourage mildew to form.
- Store in a dry place.
- Do not leave in sunlight for prolonged periods as some fabrics may fade.



If you have any questions or concerns regarding this product,
do not hesitate to contact our expert team online
via online4baby.com/contact-us

Feeling social?  
online4baby.com

Imported by Online4baby Ltd,
Meadowbank, Tweedale Way, Oldham, OL9 8EH