


PUGGLE

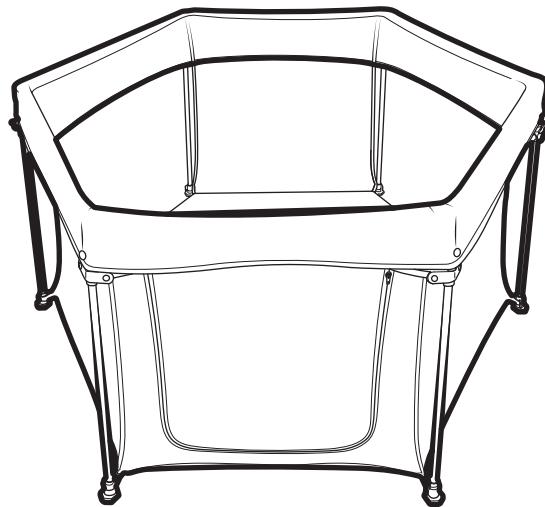

Fun & Play Lite Compact Folding Playpen with Tunnel

Instruction manual

Welcome

Thank you for purchasing the Puggle Fun & Play Lite Compact Folding Playpen with Tunnel.

Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product.

Your child's safety is your responsibility. If you have a query with this product or require replacement parts, please contact us at support@pugglebaby.co.uk

Safety Instructions

IMPORTANT! KEEP FOR FUTURE REFERENCE


WARNING:

- This playpen is suitable for a child aged from 6 months up to a maximum weight of 15kgs (or 3 Years, whichever comes first).
- Do not place the playpen close to an open fire or other heat source.
- Ensure that the playpen is fully erected and all the locking mechanisms engaged before placing your child in this playpen.
- Do not leave anything in the playpen or place the playpen close to another product, which could provide a foothold or present a danger of suffocation or strangulation e.g. strings, blind/curtain cords.
- All assembly fittings should always be tightened properly and fittings should be checked regularly and re-tightened as necessary.
- Do not use the playpen if any part is broken, torn or missing and use only spare parts approved by the manufacturer.
- Do not use accessories which have not been approved by the manufacturer.
- Do not move the playpen while the child is inside.
- Never sit or lean on the top rails.
- Once the child is able to climb out of the playpen, discontinue use or use with the zipper door open.
- This Product conforms to EN 12227:2010

Parts Checklist

Lay out the parts on a soft level surface and compare to the part/fixings checklist. Do not discard any packaging until you are sure that you have all the parts.

Contained in your carton are:

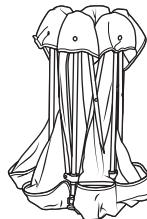


1



2

Nº	Part	Qty
1	Playpen	1
2	Carrycase	1


Unfolding the Playpen

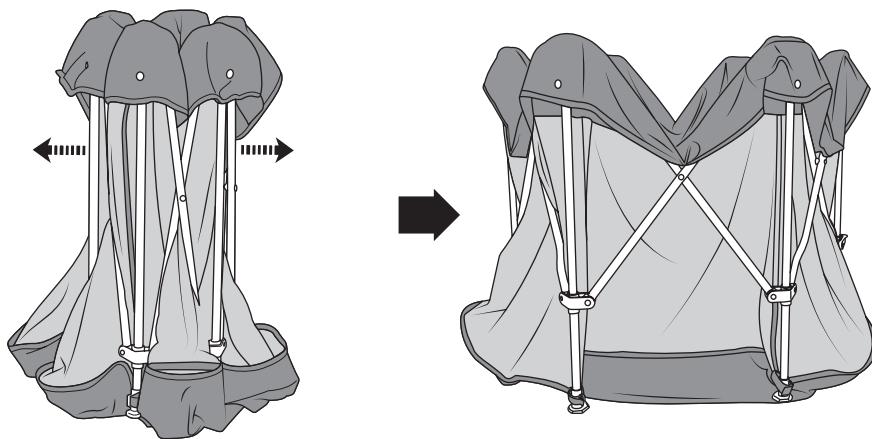


1. Remove the playpen from the carry bag.

Using both hands hold an upright tube on each side of the playpen and pull the playpen partially open.

Unfolding the Playpen

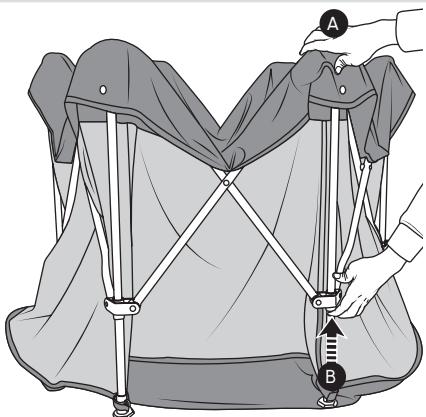

2. Once the playpen has opened as far as it will go, place a hand on top corner (A) and pull up on plastic joint (B) until it becomes difficult to pull up any further and then move to step 3.

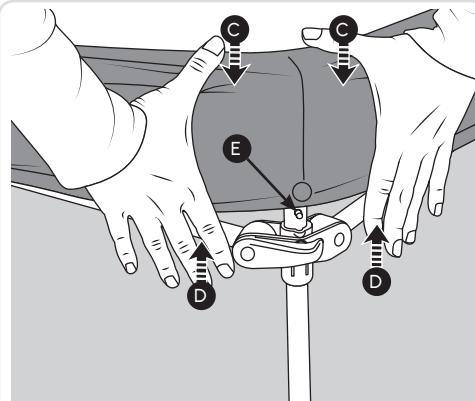


3. Locate one of the two locking mechanisms and using two hands grab the top of the playpen (C) and the cross-bars(D) next to the locking mechanism. Pull cross-bar (D) upwards until the locking mechanism locks on to the metal pin (E). Repeat for the remaining locking mechanism.

WARNING! The Playpen is ready to use ONLY when the two locking mechanisms are securely locked into position and all press studs are correctly fastened.



Using the Playpen

1. The door, when open, can be rolled up and secured using the velcro tabs (A).

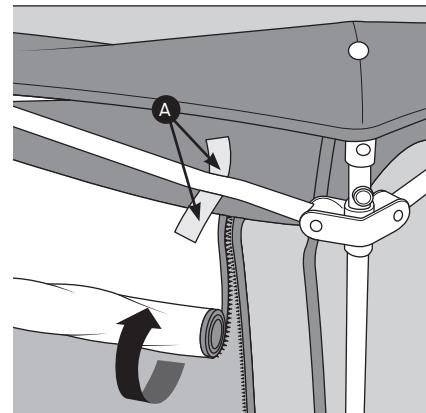

Folding the Playpen

IMPORTANT! Remove ALL items from inside the playpen before folding the playpen.
DO NOT attempt to begin folding with a child still inside the playpen.

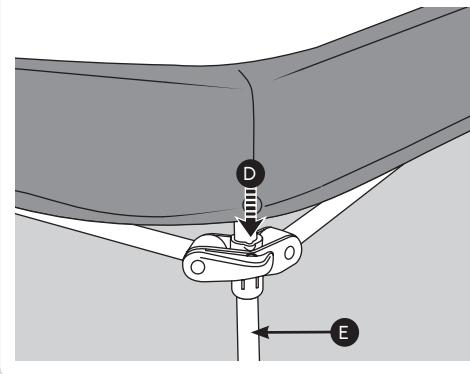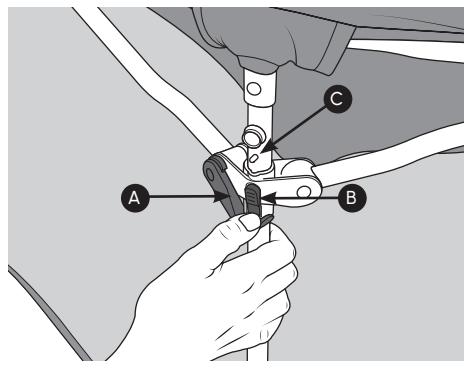


1. Working on one locking mechanism at a time, pull down lever (A) and press button (B) to release the lockpin (C). Repeat for the remaining locking mechanism.


IMPORTANT! Both locking mechanisms MUST be released before progressing to step 2

2. Push the locking mechanism down the leg (E) towards the floor whilst lifting the leg slightly off the ground.

NOTE! Lifting the leg will allow the parts to move.

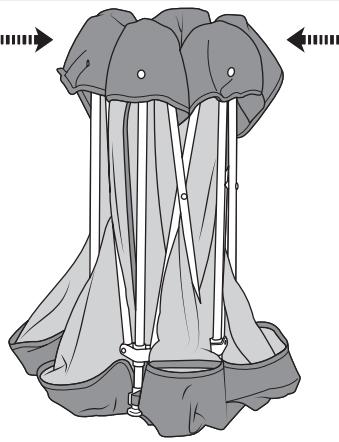


3. After a while you will be able close the playpen by pulling the top corners towards the centre.

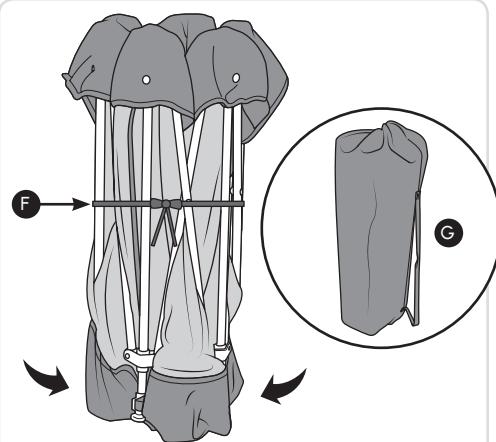

4. Tuck any loose fabric in around the playpen's feet, tie the playpen shut using the tie band (F) and place in the carrybag (G).

Removing the Fabric from the Frame

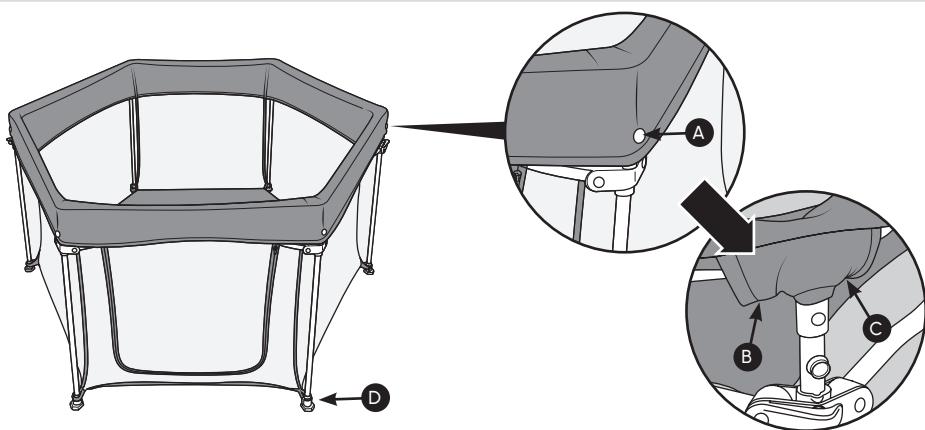

The playpen fabric can be removed from the frame for ease of cleaning. To do this, release press studs (A) at each corner, raise the fabric up then release a further two press studs found under the fabric on each corner (B), (C). Finally unfasten the velcro strips on each foot (D). Reverse these steps to re-attach the fabric.

Care and Maintenance

- Fabric covers and trims can be cleaned with a sponge using a mild detergent and warm water.
- Plastic and metal parts can be cleaned with soapy water.
- DO NOT use bleach, ammonia based solvents or harsh cleaning agents.
- DO NOT tumble dry.
- DO NOT iron.
- Dry in the open position in a well ventilated area.
- Regularly inspect for loose, damaged or missing parts.
- Ensure cot is thoroughly dry before using or storing.
- DO NOT store in a damp or hot environment.
- Never leave in sunlight for prolonged periods as some fabrics may fade.



Imported by Online4baby Ltd.

Meadowbank, Tweedale Way, Oldham, OL9 8EH