
puggle

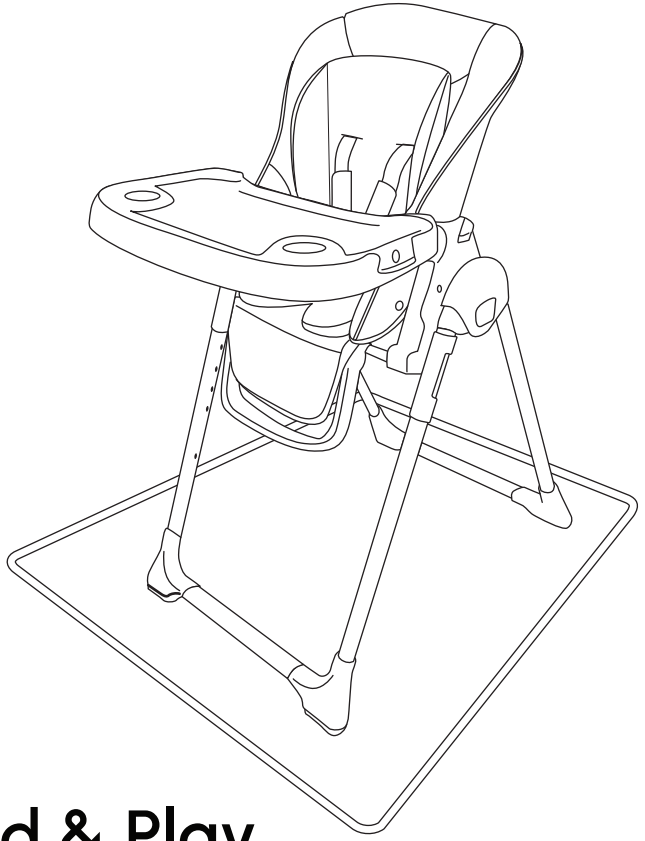


Feed & Play Highchair (0-3yrs)

Everything you need to know

IMPORTANT. READ THESE INSTRUCTIONS AND SAFETY WARNINGS CAREFULLY BEFORE USE, AND KEEP FOR FUTURE REFERENCE.

CAUTION: There are many small components used in the construction of this highchair. These items should be kept out of reach of young children whilst assembling the unit.

This Puggle Feed & Play Luxe Highchair is tested to comply with EN 14988:2017+A2:2024, EN 12790-1:2023, EN 12790-2:2023

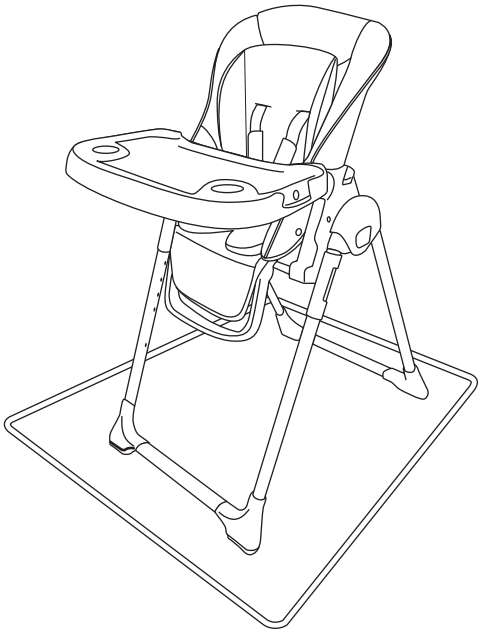

Thank you for purchasing the Puggle Feed & Play Luxe Highchair, we hope you love it as much as we do!

Getting started:

Lay out the parts on a soft, level surface and compare to the part/ fixings checklist.

Do not discard any packaging until you are sure that you have all the parts.

We're here to help!


If you have a query with this product or require replacement parts, please contact us at **support@pugglebaby.co.uk**.

Learn more

Scan the QR code to view our step-by-step assembly video.


www.thenurserystore.co.uk

Parts

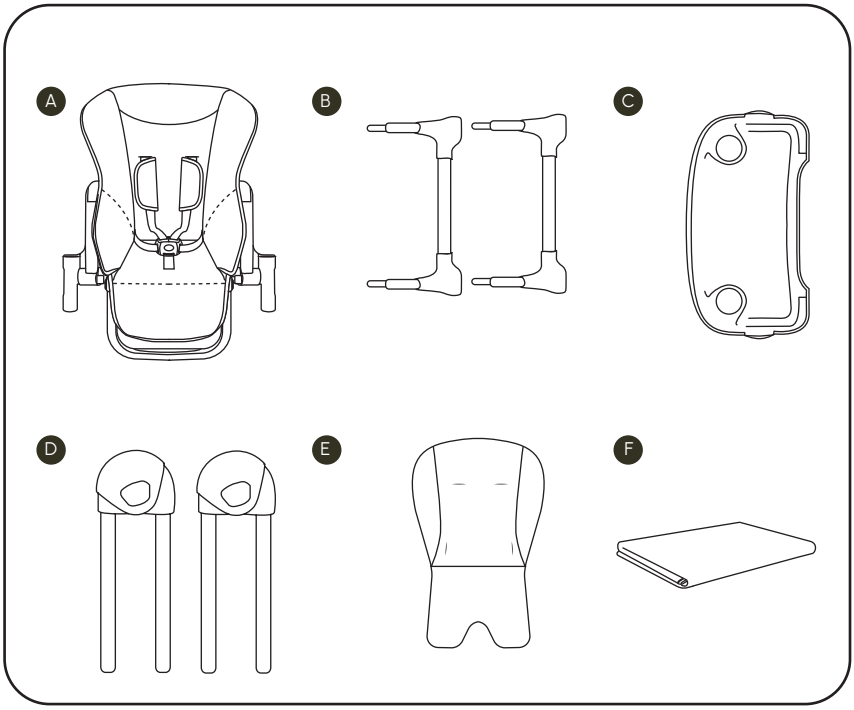


- A Highchair
- B Feet
- C Tray
- D Legs
- E Seat Insert Cushion
- F Messy Mat

Parts

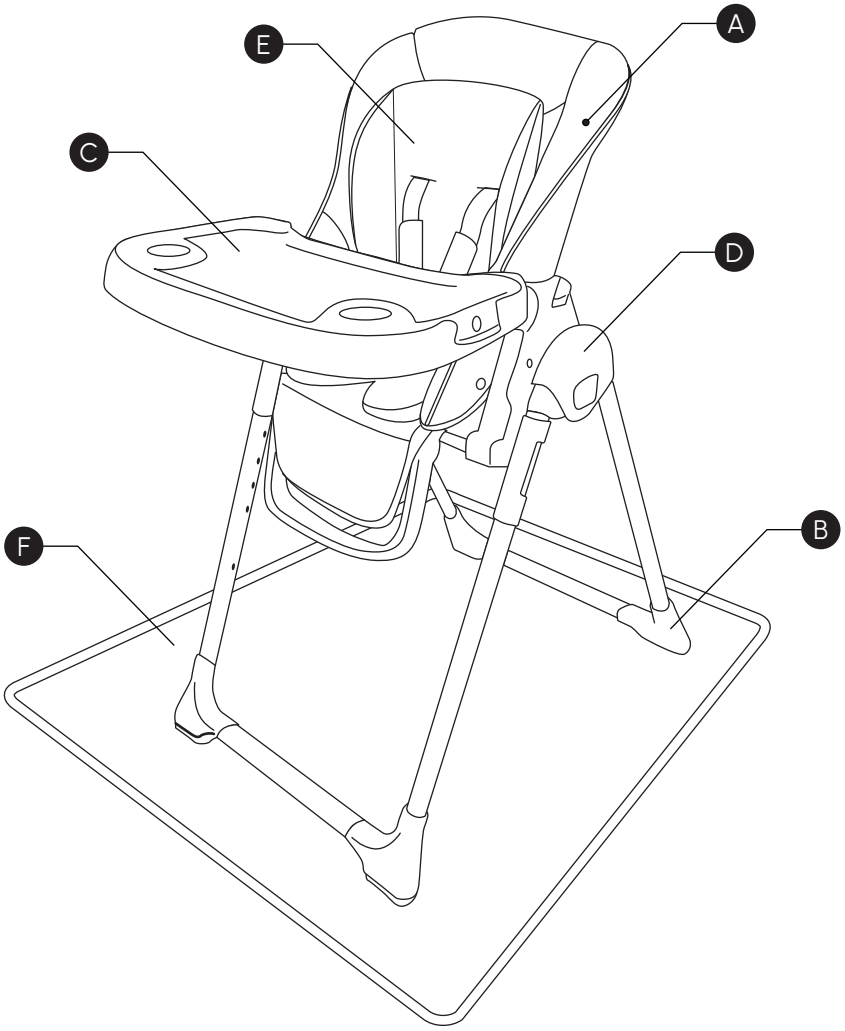


Assembly

1

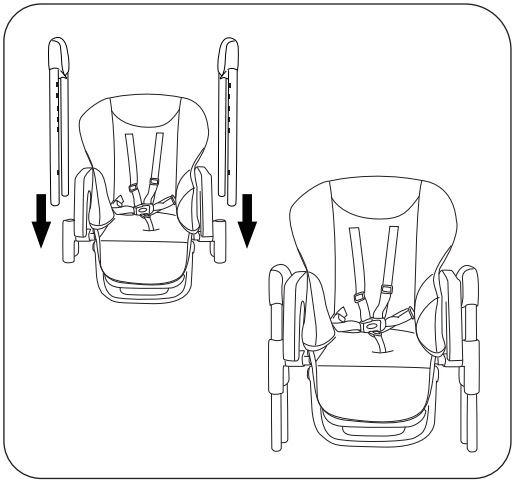

Slide the legs into the leg housing slots on either side of the highchair seat unit.


2

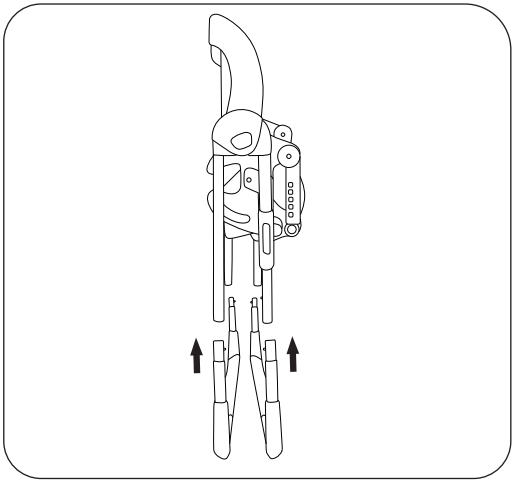

Attach the feet to the base of the legs, you will hear a click into place with the feet pins pop through theleg holes.


Unfolding

3

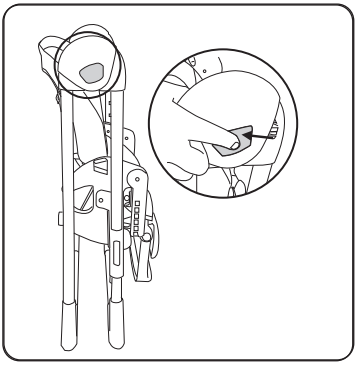


Press and hold the the buttons on the side frame.

4

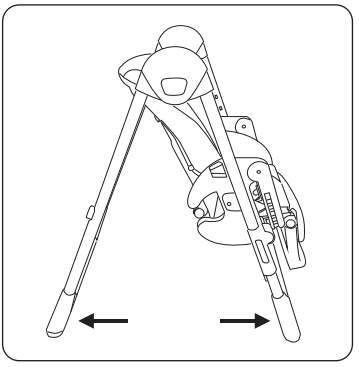


Pull out the highchair legs.

5

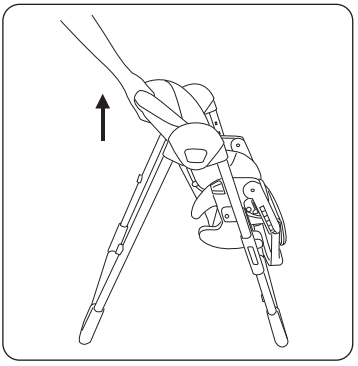

Pull up the seat to the highest position.


6

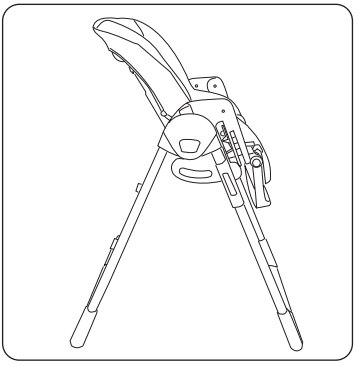

WARNING! When unfolding the highchair always check to ensure legs are fully open and the lock is engaged before use.


Tray

7

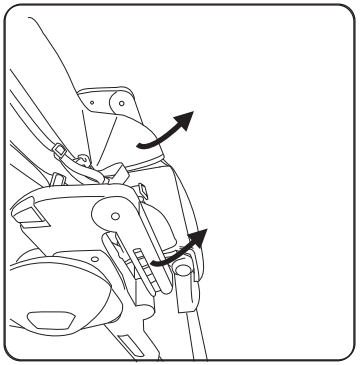


Lift the highchair seat arms up.

8

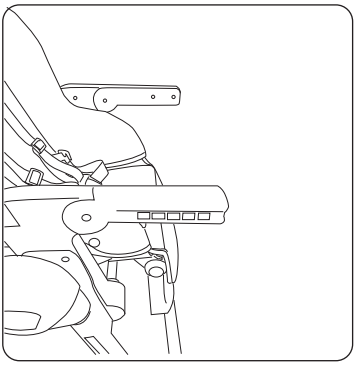


They will automatically lock in place.

9

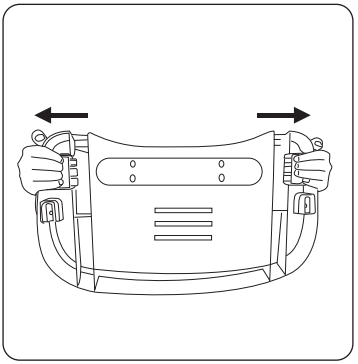

Pull outward on the levers found on the underside of the tray and slide the tray into position.


10

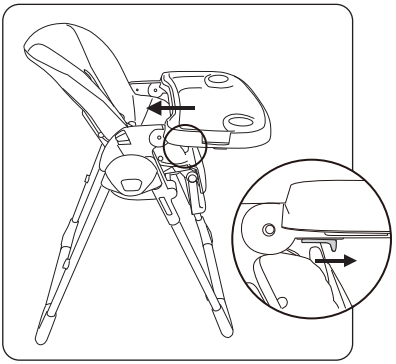

Release the levers to lock the tray in place.
To remove, pull outward on the levers to remove the tray.


Tray

11

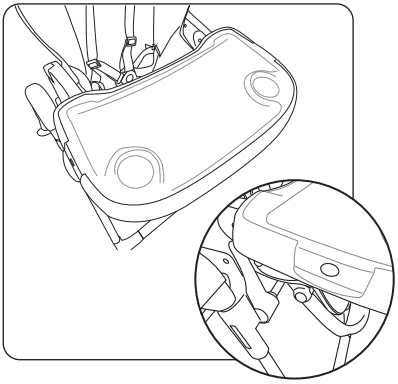


The tray has an inner tray. Pull up at the sides to remove outer snack tray.
To reattach, align the trays and push down on the snack tray to fix both trays together.

12

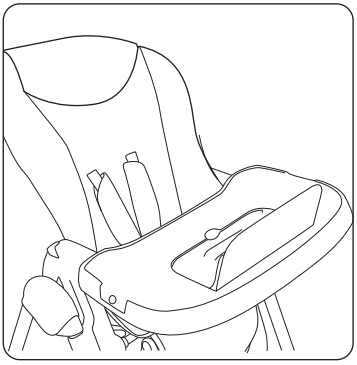

The tray has a built-in screen stand in the inner tray. Fold up the backrest to hold a tablet or phone.


13

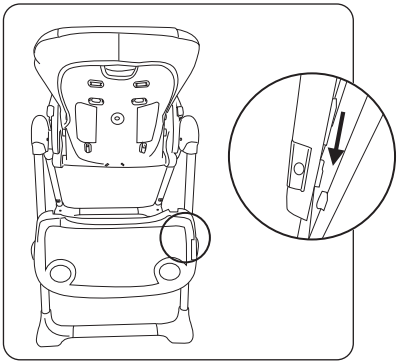

The tray can be stored on the rear of the highchair. Slide the tray connectors onto rear leg pegs and push down.


Seat Height Adjustment

14

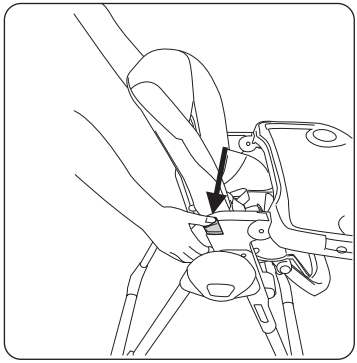


Press and hold both of the height adjustment buttons to raise or lower the seat. Release both buttons at the required height.

15

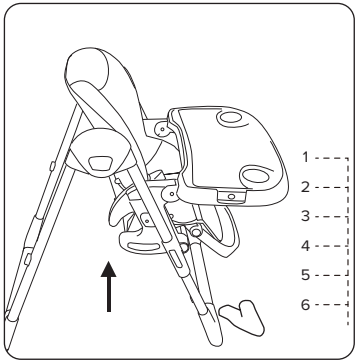

The highchair has 6 seat height positions.


16

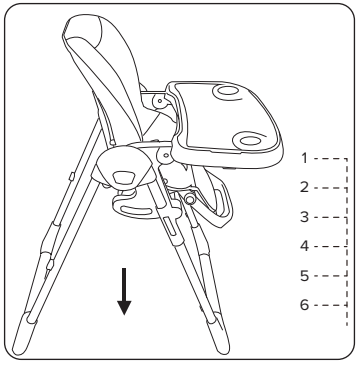

WARNING! Do not adjust the seat height when the child is in the highchair.


Seat Recline Adjustment

17

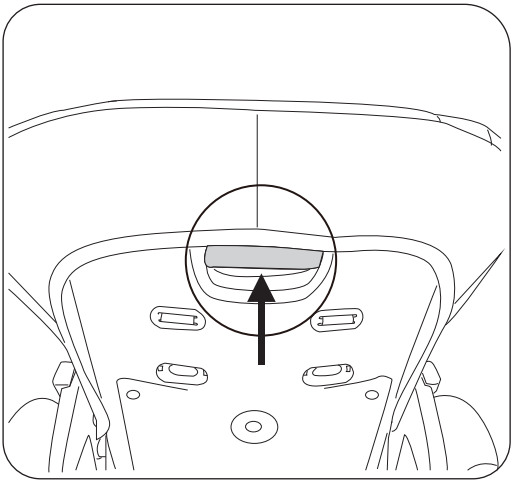


The highchair seat has 4 recline positions. Push in and hold the button on the back of the seat unit and position the backrest as required. Release the mechanism to secure into place.

18

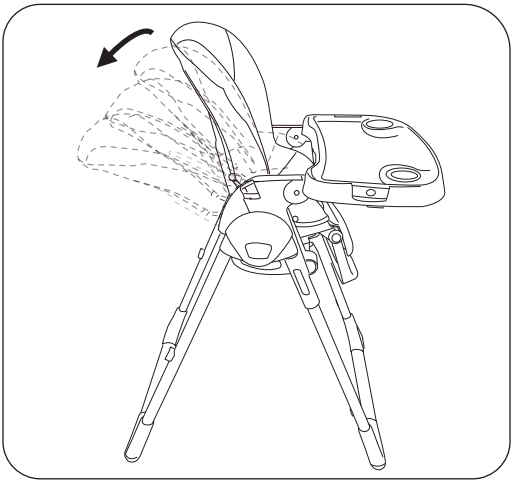


Footrest Adjustment

19

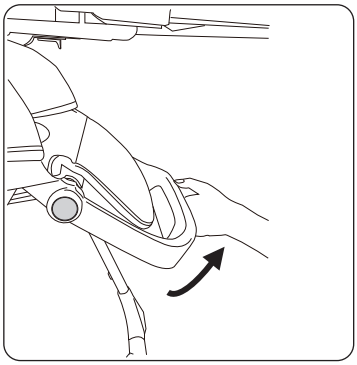


To raise the footrest pull it upwards with one hand.

20

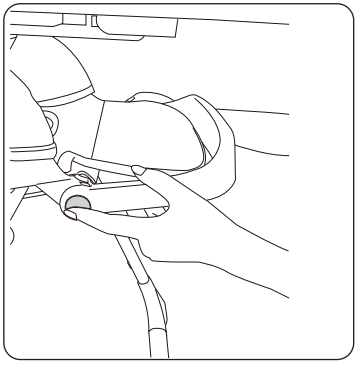

The highchair has 3 footrest positions.


21

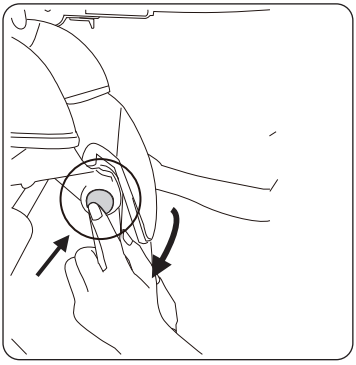

Press and hold the buttons found on both sides to adjust the footrest downwards.


Harness Adjustment

22

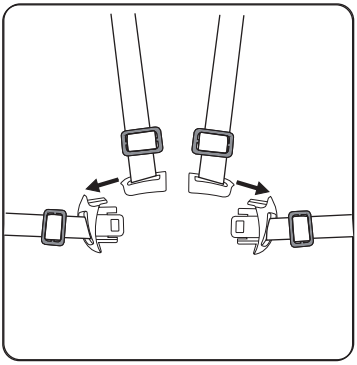


To lock: Slide the shoulder strap clips on the waist strap clips.

23

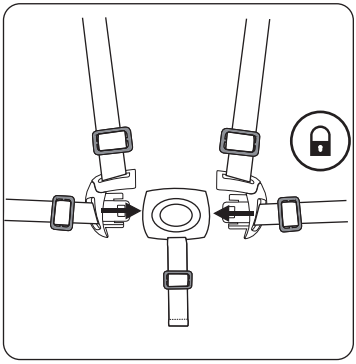


Push the assembled side clips into the centre buckle. Listen for the "click".

24

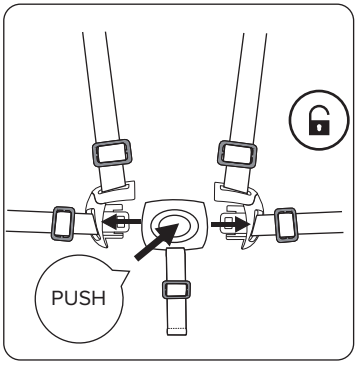

To unlock: Push the centre button and remove clips from buckle.


25

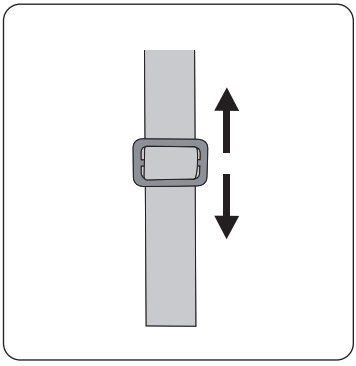


WARNING! Always use the harness and ensure it is correctly fitted securely while child is in the highchair.

Harness Adjustment

26

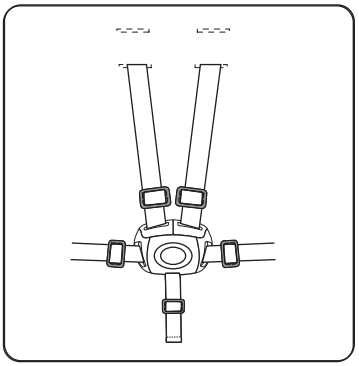


27

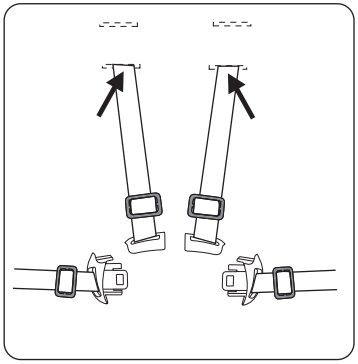


To adjust the shoulder height: Pass the plastic ends of the harness through the horizontal slots in the backrest and back out through the front of the seat at desired height.

28

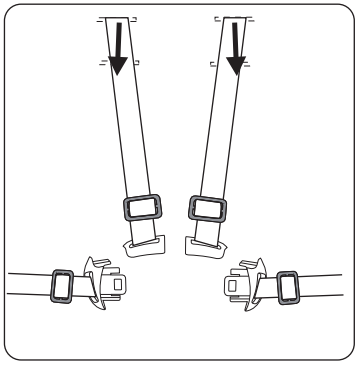


29

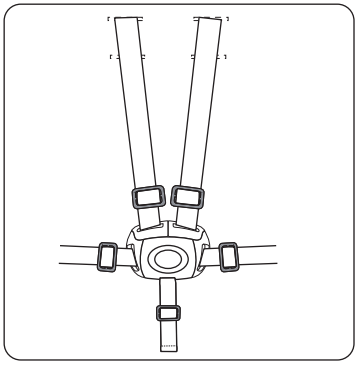


Folding

30

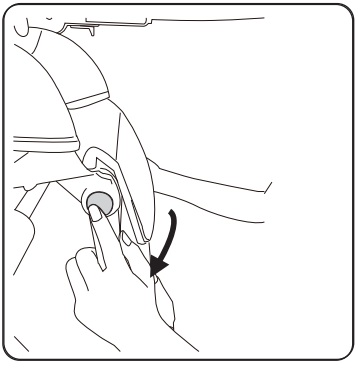


Fold down the footrest.

31

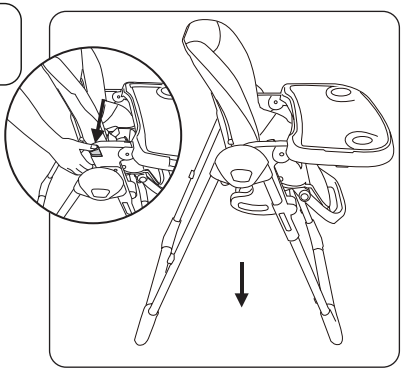


Lower the seat height.

32

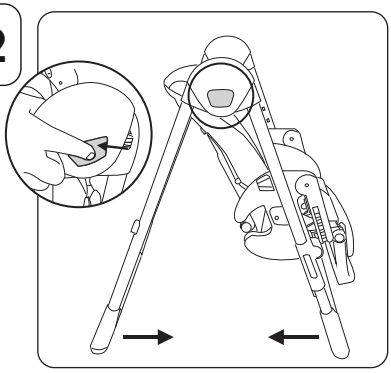

Press and hold the the buttons on the side frame and push in the highchair legs.

33

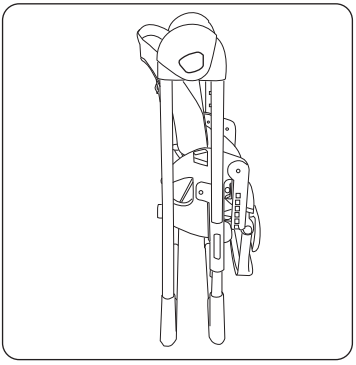

Store the tray on the back of the highchair for a more compact fold.

Warnings

WARNING: IMPORTANT: READ CAREFULLY AND KEEP FOR FUTURE REFERENCE
WARNING! Read these instructions carefully before assembly and use and keep for future reference. The child may be hurt if you do not follow these instructions.
WARNING! This product in upright position is intended for children able to sit up unaided and up to 3 years or a maximum weight of 15kg.
WARNING! This product is suitable from birth in reclined position only.
WARNING! Never let the child sleep in this product.This product does not replace a cot or cot bed, Should your child need to sleep, then it should be placed in a suitable cot or cot bed.
WARNING! Follow the manufacturer's instructions.
WARNING! Never leave the child unattended.



WARNING! Always keep child in view while in the highchair.
WARNING! The harness must always be used and correctly fitted. Most injuries from highchairs are caused by falls.
WARNING! Falling hazard: Prevent your child from climbing on the product.
WARNING! Position the highchair away from solid structures and benches to avoid injuries caused by falls and by access to dangerous items.
WARNING! Be aware of the risk of tilting when your child can push its feet against a table or any other structure.
WARNING! To avoid injury ensure that your child is kept away when unfolding and folding this product.
WARNING! Do not use the highchair unless all components are correctly fitted and adjusted.
WARNING! Be aware of the risk of open and other sources of strong heat, such as electric bar fires, gas fires etc. in the vicinity of the highchair.
WARNING! Do not move or lift this product with the child inside it.

Warnings

· Do not use the highchair in upright position until the child can sit up
· unaided. This is usually around 6 months of age.
· Stop using the product in fully reclined position when the child starts to
· stand up.
· Always use the restraint system.
· Position the highchair on a flat, even and horizontal floor and do not
· elevate the highchair on any structure or table.
· Be aware of the risk of tilting when your child can push its feet against a
· table or any other structure.
· DO NOT allow anyone to climb or stand on or inside of this highchair.
· To reduce the risk of injury, position the highchair away from furniture,
· walls, hot surfaces and liquids, window covering cords and electrical cords
· and position the highchair away from furniture when the child is not being
· used at a table with the tray removed.
· Do not use the highchair if any part is broken, torn or missing. If any part
· of the highchair is not working correctly, repairs are recommended.
· Regularly check all connections to ensure they are tight.
· Do not use accessories or replacement parts other than those approved
· by the manufacturer.
· Keep the plastic packaging away from children to avoid danger of
· suffocation.
· This product complies with EN 14988:2017+A2:2024, EN 12790-1:2023,
· EN 12790-2:2023

Care & Maintenance

Maintenance

- The correct use and maintenance of this highchair is essential.
- This product requires regular maintenance to keep it in good working order.
- Moving parts may be lubricated with a light silicone oil.
- Regularly check all parts of the product to ensure that they are operating correctly and for signs of wear or damage.
- Do not use this product if any part is broken, torn or missing and use only spares provided by the manufacturer.

Cleaning

- Clean by wiping with warm water and a mild detergent. A mild disinfectant may be used. Stubborn marks may be removed with a non-abrasive cream cleaner.
- Sponge clean the harness with a mild soap and water solution.
- Rinse and wipe dry.
- Never clean any part of highchair with abrasive, ammonia based, bleach based or spirit type cleaners.
- Ensure the product is fully dry before use or storage.
- Always ensure the highchair is stored in a dry place to prevent mold or mildew developing.

Troubleshooting

Issue	Solution
Missing parts	The fittings for this product are supplied inside a box within the main carton and are labelled as fittings. Check all the packaging thoroughly to ensure that you have not overlooked them before you throw it away. If necessary, contact our customer service team at **support@pugglebaby.co.uk.**
Harness buckle is not fastening or feels stiff	Dirt, food or foreign objects in the harness can fall into buckle mechanism. Routinely check the buckle area for crumbs, dirt, or foreign objects. Vacuum the seat regularly.

For any and all other product issues not covered in the above please contact our dedicated customer services team
Contact: **support@pugglebaby.co.uk**

Recycling the Packaging

When you have unpacked your product and ensured that all parts are present, please discard the packaging components in accordance with your local authority guidelines. For further information, please check the material and your postcode at

https://www.recyclenow.com/recycle-an-item.

Notes

Notes

Notes

www.thenurserystore.co.uk

Imported by Online4baby Ltd.
Meadowbank, Tweedale Way, Oldham, OL9 8EH