puggle

R129/04

Grow Stages Comfort R129 40-150cm Car Seat

Everything you need to know

IMPORTANT. READ THESE INSTRUCTIONS AND SAFETY WARNINGS CAREFULLY BEFORE USE, AND KEEP FOR FUTURE REFERENCE.

This Puggle Grow Stages Comfort R129 40-150cm Car Seat is tested to comply with R129/04.

Welcome

Thank you for purchasing the Puggle Grow Stages Comfort R129 40-150cm Car Seat, we hope you love it as much as we do!

Getting started:

Lay out the parts on a soft, level surface and compare to the part/ fixings checklist.

Do not discard any packaging until you are sure that you have all the parts.

We're here to help!

If you have a query with this product or require replacement parts, please contact us at support@pugglebaby.co.uk.

Learn more

Scan the QR code to view our step-by-step demonstration video.

www.thenurserystore.co.uk

Notice

This is Universal Belted Enhanced Child Restraint System. It is approved according to UN Regulation No. 129, for use primarily in "Universal seating positions" as indicated by vehicle manufacturers in the vehicle user's manual. If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer.

This is an i-Size booster seat Enhanced Child Restraint System . It is approved according to UN Regulation No . 129 , for use primarily in "i-Size seating positions" as indicated by vehicle manufacturers in the vehicle user's manual. If in doubt , consult either the Enhanced Child Restraint System manufacturer or the retailer.

The instruction manual should be kept safely with the child restraint system for its life period.

IMPORTANT: DO NOT use in forward facing mode before the child exceeds a height of 76cm, approx. 15 months of age. This car seat can be used in rearward facing mode up until the child is of a height of 105cm, approx. 4 years.

The car seat must not be used in the position where an airbag has been activated (airbags can be fatal to children). Please read the instructions carefully to use the child car seat properly.

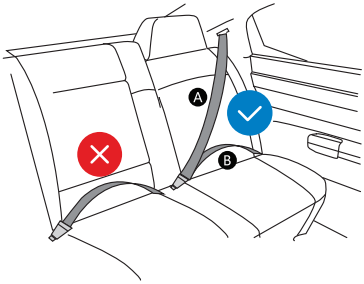

- 3-point belt
- 2-point belt
- A Diagonal belt
- B Lap belt

This child restraint system is suitable for seat belt models equipped with a 3-point retractor that complies with ECE R16. It is not suitable for cars only equipped with 2-point seat belts.

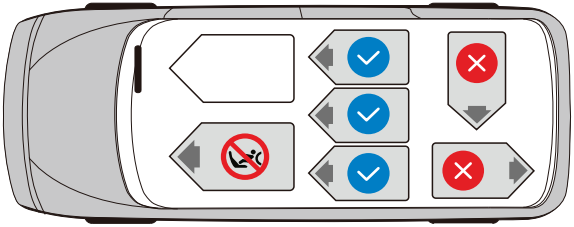

WARNING!

DO NOT place rearward facing child seat on front seat with active airbag. DEATH OR SERIOUS INJURY can occur. IMPORTANT! DO NOT USE FORWARD FACING BEFORE THE CHILD'S AGE EXCEEDS 15 MONTHS (refer to instructions).

40-105cm ≤22kg

Facing backwards
(against the direction of travel)

76-150cm older than 15 months

Facing forwards
(in the direction of travel)

Parts List

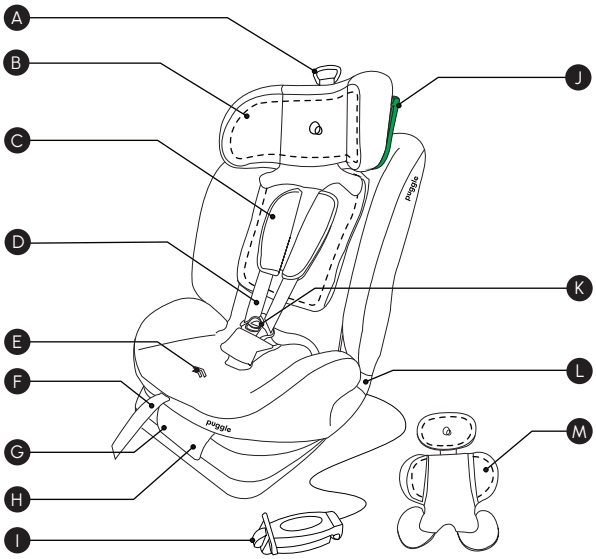

- A Headrest height adjuster
- B Headrest
- C Shoulder pad
- D Shoulder strap
- E Centre adjuster
- F Adjuster strap
- G Recline lever
- H Manual storage compartment
- I Lock-off device (optional)
- J Belt holder
- K Buckle
- L Lower belt guide
- M Infant cushion (≤ 75cm)

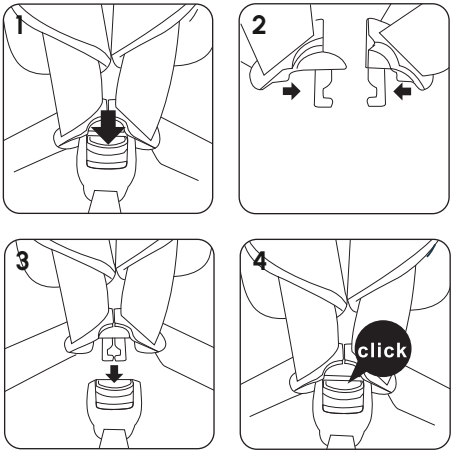

Adjusting the buckle

Open buckle: Press red button until buckle latches are released from the buckle (fig. 1).

Lock buckle: Guide the two buckle latches together (fig. 2), putting them into the harness buckle house (fig. 3). A "click" will signal when locked.

Note. The buckle will not lock with one latch only.

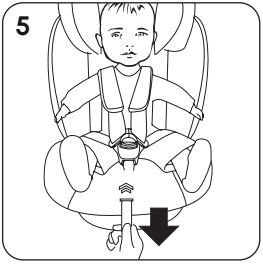

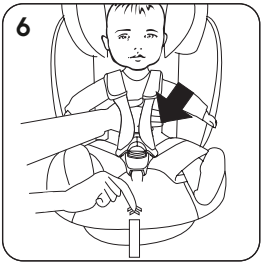

Adjusting the harness

Tighten harness: Pull the adjuster strap until the harness lies flat and close against your child's body (fig. 5). Note. The harness should allow 1 finger width, approx. 1cm at the top of the shoulders for ideal fit.

WARNING! Do not add additional items such as blankets or padded clothing. Bulky items can lead to incorrect harness tightening. In an accident the child can slip out of the restraint if not properly tightened.

Loosen harness: Press the centre adjuster and at the same time pull both shoulder belts forwards (fig. 6) DO NOT pull on the shoulder pads.

WARNING! Routinely check the buckle and harness area for crumbs, dirt, or foreign objects. Shake out loose debris from the seat regularly, especially after snacks and outdoor play. The presense of debris inside the buckle/mechanism can affect harnesses performance. Shake out loose debris from the seat regularly, especially after snacks and outdoor play. The presense of debris inside the buckle/mechanism can affect harnesses performance.

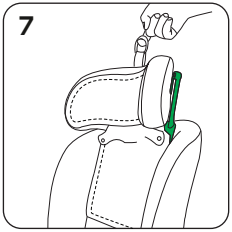

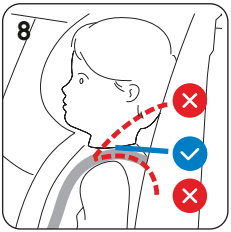

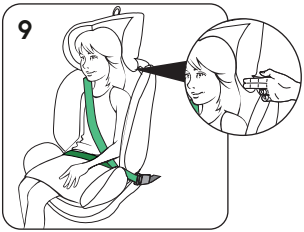

Adjusting the headrest

Loosen the harness to allow full movement of the headrest. Pull the headrest height adjuster, lifting the headrest up/down to the desired position (fig. 7).

IMPORTANT! correctly adjusted headrest ensures optimal protection for your child in the safety seat.

When installed by 5-point harness, the headrest must be adjusted so that the shoulder belts are at the same level as your child's shoulders (fig. 8).

When installed by 3-point vehicle belt, the headrest must be adjusted so that there is a space two fingers wide between the headrest and your child's shoulders. Make sure the diagonal seat belt section is on your child's shoulder but not on the neck (fig. 9)

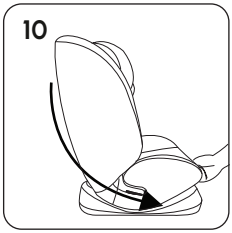

Adjusting recline positions

Pull the recline lever and at the same time incline seat to desired position (fig. 10). Seat has four (1,2,3,4) recline positions for forward facing, and one (5) position for rearward facing.

CAUTION! Adjust to most reclined position when installed rearward facing.

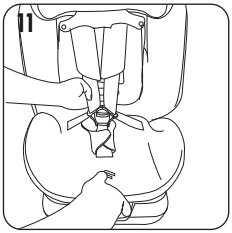

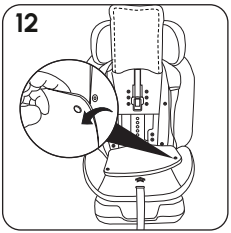

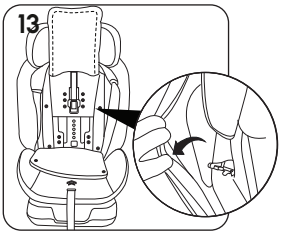

Storing the 5-point harness

1. Loosen the 5-point harness on the child seat as far as possible. Then open the buckle (fig. 11).

2. Open the press studs on the backrest and fold the upper half of the cover up and the lower half down (fig. 12).

3. Insert the buckle tongues in the recess provided on the inside of the backrest (fig. 13).

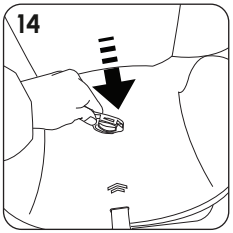

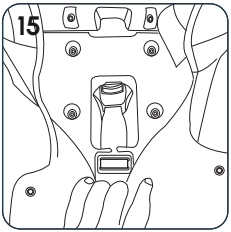

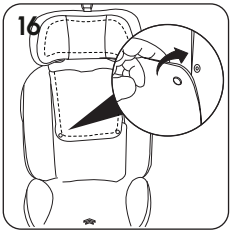

Storing the 5-point harness

4. Open the seat cover and fold the cover forwards. Pull the harness buckle out of the cover (fig. 14).

5. Stow the harness buckle in the recess provided (fig. 15).

6. Close the two press studs and recover the seat (fig. 16).

7. To re-fit the harness: Follow the steps in the opposite order. Make sure the belt is not twisted.

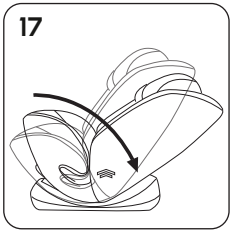

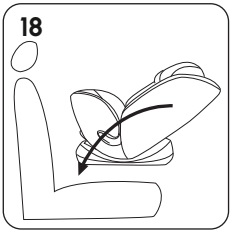

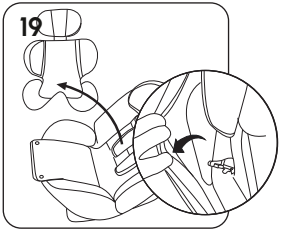

40 – 105cm Rear facing
From birth to approx. 4 years ≤ 22 kg)

IMPORTANT! The Infant cushion protects your child. It MUST to be used from 40cm up to 75cm. Remove it when your child reaches 76cm in height.

WARNING! Never use in front passenger seats equipped with active airbag, DEATH OR SERIOUS INJURY can occur.

1. Adjust the seat to the most reclined position '5' (fig. 17).

2. Place the car seat in rearward facing position on the vehicle seat (fig. 18).

3. Remove the infant cushion. Unclip the press studs of the lower backrest and fold the lower half down (fig. 19).

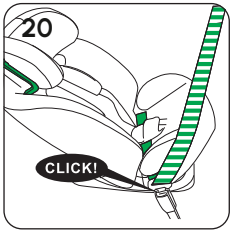

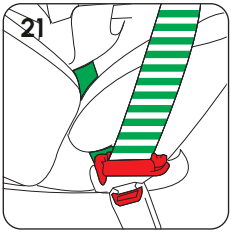

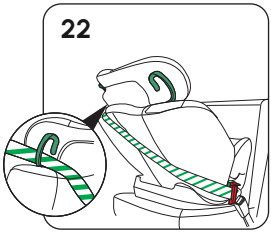

40 – 105cm Rear facing
From birth to approx. 4 years ≤ 22 kg)

4. Guide the vehicle lap belt through both lower belt guides. Engage the buckle tongue into the vehicle seat buckle (fig. 20).

5. 'Lock-off device' is optional. It helps to tighten the vehicle seat belt. Pull the diagonal belt strongly to tighten and clamp the lock-off device on the diagonal belt as close to the vehicle seat belt buckle as possible (fig. 21).

6. Guide the diagonal belt around the car seat back then through the belt holder on the same side of the vehicle seat belt retractor (fig. 22).

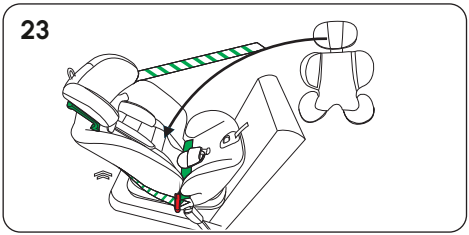

40 – 105cm Rear facing
From birth to approx. 4 years ≤ 22 kg)

7. Give the car seat a firm shake to ensure it is securely fastened. Fold up the lower backrest and close press studs. Replace the infant cushion (fig. 23).

8. Place the child in the car seat and adjust as necessary as detailed on pages 7- 8.

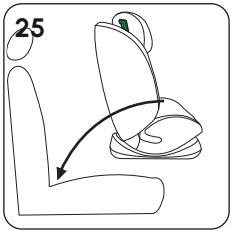

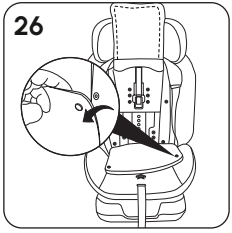

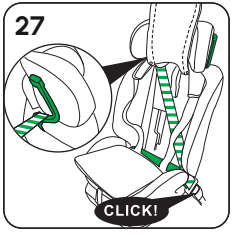

76 – 105cm Forward facing
15 months to approx. 4 years ≤ 22 kg

IMPORTANT! Do not use forward facing before the child's age exceeds 15 months.

The Infant cushion should not be used for child ≥ 76cm in height.

1. Place car seat in forward facing direction (fig. 25).

2. Unclip the press studs on the backrest. Fold up the upper half of the cover and fold down the lower half (fig. 26).

3. Pull the vehicle belt out and guide the diagonal seat belt through the belt holder.

4. Guide the vehicle lap belt through both lower belt guides. Engage the buckle tongue into the vehicle seat buckle. Ensure the seat belt is not twisted (fig. 27).

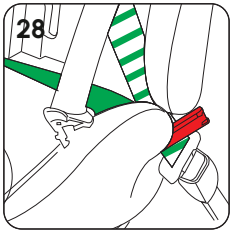

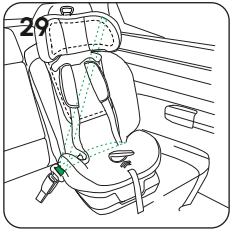

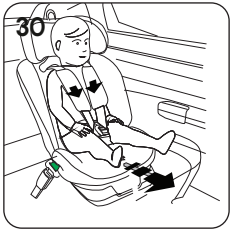

76 – 105cm Forward facing
15 months to approx. 4 years ≤ 22 kg

5. 'Lock-off device' is optional. It helps to tighten the vehicle seat belt. Pull the diagonal belt strongly to tighten and clamp the lock-off device on the diagonal belt as close to the vehicle seat belt buckle as possible (fig. 28).

6. Give the car seat a firm shake to ensure it is securely fastened. Fold up the seat cover and close the press studs (fig. 29)

7. Place the child in the car seat and adjust as necessary as detailed on page 7- 8.

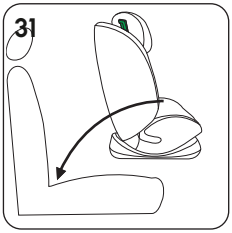

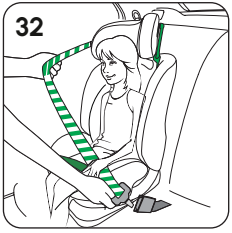

100 – 150cm Forward facing
Approx. 3 years up to 12 years

IMPORTANT! Remove the 5-point harness when using for child stature 100-150cm (follow instructions on page 9).

1. Place car seat in forward facing direction (fig. 31).

2. Place the child in the car seat, adjust headrest (refer to Page 8).

3. Pull the vehicle belt out and guide it in front of your child. Insert the seat belt buckle in the vehicle buckle house (fig. 32).

4. Place both the diagonal belt and lap belt in the lower belt guide on the same side as the vehicle seat belt buckle (fig. 33).

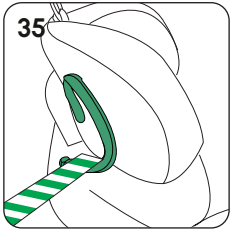

76 – 105cm Forward facing
15 months to approx. 4 years ≤ 22 kg

5. Place the lap belt on the other side of the child seat in the lower belt guide (fig. 34).

6. Guide the diagonal seat belt into the belt holder and ensure it is not twisted (fig. 35)..

Warnings

WARNING: The rigid items and plastic parts of an Enhanced Child Restraint System shall be located and installed so that they are not liable to be come trapped by a movable seat or in a door of the vehicle during everyday use of the vehicle.
WARNING: Any straps holding the restraint to the vehicle should be tight. Any straps restraining the child should be adjusted to the child's body, and straps should not be twisted.
WARNING: Ensure that any lap strap is worn low down, so that the pelvis is firmly engaged.
WARNING: The device should be replaced when it has been subject to violent stresses in an accident.
WARNING: It is dangerous of making any alterations or additions to the device without the approval of the Type Approval Authority, and a danger of not following closely the installation instructions provided by the child restraint manufacturer.
WARNING: When the chair is not provided with a textile cover, the chairs should be kept away from sunlight, otherwise it may be too hot for the child's skin.
WARNING: Children are not to be left in their Enhanced Child Restraint System unattended.

Warnings

WARNING: Any luggage or other objects liable to cause injuries in the event of a collision shall be properly secured.
WARNING: The Enhanced Child Restraint System shall not be used without the cover.
WARNING: The Enhanced Child Restraint System cover should not be replaced with any, other than the one recommended by the manufacturer, because the cover constitutes an integral part of the restraint performance.
WARNING: Retain the instructions on the child restraint for its life period.
WARNING: DO NOT leave this car seat unsecured in your vehicle because an unsecured car seat can be thrown around and may injure occupants in a sharp turn, sudden stop, or collision. Remove it if not in regular use.
WARNING: NEVER use a second-hand car seat or a car seat whose history you do not know because they may have structural damage that endangers your child's safety.
WARNING: DO NOT place other items on top of the car seat if it is in the car boot to prevent damage.

Warnings

WARNING: DO NOT continue to use this car seat after it has suffered any violent crash. Replace immediately as there may be invisible structural damage from the crash.
WARNING: Remove this car seat from the vehicle seat when it is not in use.
WARNING: To avoid suffocation, remove plastic bag and packaging materials before using this product.
WARNING: The plastic bag and packaging materials should then be kept away from babies and children.
WARNING: Frequently check the ISOFIX attachments for dirt and clear them if necessary. Reliability can be affected by ingress of dirt, dust, food particles etc.
WARNING: DO NOT install this car seat under the following conditions: vehicle seats facing sideways or rearward with respect to the running direction of the vehicle. Vehicle seats movable during installation.
WARNING: This is a universal booster cushion. It is approved to Regulation ECE R129, compatible all type of vehicles. Please refer to the vehicle manufacturer's website or consult your dealer if there is anything unclear.
WARNING: In case of emergency or accidents, it is most important to have your child taken care of with first aid and medical treatment immediately.

Care for the harness buckle

It is vital for the safety of the child that the harness buckle works correctly. Malfunctions of the harness buckle are usually caused by accumulations of dirt or foreign bodies.

Malfunctions are as follows:
· The buckle latches are ejected before the red release button is pressed.
· The bucke latches will no longer lock home (i.e. they are ejected again if you try lock them in.)
· The buckle latches engage without an audible "click".
· The buckle latches are difficult to insert (you feel resistance).
· The buckle only opens if extreme force is applied.

Solution:
Clean out the harness buckle so that it functions properly once again.
1. Follow instructions on page 9 to remove the harness buckle.
2. Soak the harness buckle in warm water with washing-up liquid or at least an hour. Then rinse and dry it thoroughly.

Care for the centre adjuster mechanism

Malfunction of the harness central adjuster could be caused by accumulations of dirt and foreign bodies. To prevent this, regularly check that the central webbing strap is clean, to prevent debris being pulled into the mechanism and that there are no objects in the plastic harness slot.

Care for the centre adjuster mechanism

Mud, food, drink etc can be cleaned from the webbing harness with a damp cloth. Stubborn debris can be removed with a soft brush.

After cleaning the central webbing, tighten and loosen the central adjuster several times to check there are not particles or foreign objects preventing the correct operation.

If you suspect there may be a foreign object inside the mechanism, or have concerns that the harness is not operating as it should, stop using the product and contact our customer service team.

Cleaning the cover

The cover can be removed and cleaned according to the instructions provided on the care label.

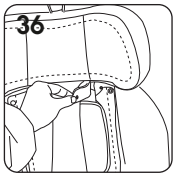

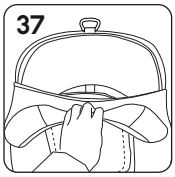

1. First remove the harness (refer to instructions on page 9).

2. Undo the press studs at the back of the headrest and remove the cover (fig. 36, 37).

3. Undo the press studs at the back of the seat cover (fig 38).

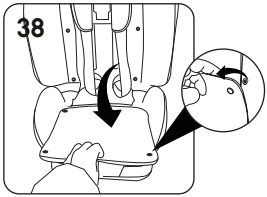

Cleaning the cover

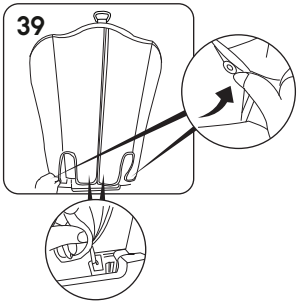

4. Undo the press studs at the side and unhook two elastic bands at the back of the seat (fig 39).

5. Pull off the lower section of the cover first, then remove whole seat cover (fig 40).

6. When re-fitting, simply follow the steps in reverse.

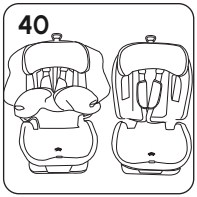

Note. when washing belts and plastic parts, use neutral detergent and warm water. Ensure that soap does not enter inside the buckle or metal pieces. Do not use chemical products or bleach on any part of the child seat. Clean the harness release mechanism by removing any dirt or debris build up with a soft bristled brush. Apply a lubricant to ensure that the spring and all mechanism functions.

Maintenance

It is important to only use the original upholstery as this is an essential part of the functionality.
Please remove the car seat seat from the vehicle seat if not in use.
Put the car seat in a cool, dry place where your child cannot access it.

Troubleshooting

Issue	Solution
Harness buckle is not fastening or feels stiff	Dirt, food or foreign objects in the harness can fall into buckle mechanism. Routinely check the buckle area for crumbs, dirt, or foreign objects. Vacuum the seat regularly.
The 5-point harness does not adjust easily	Dirt/food or foreign objects on straps can fall into buckle mechanism/ locking mechanism. Regularly check that the harness release button is free from debris especially before travel. Shake out loose debris from the seat regularly, especially after snacks or travel.
Fabrics are dirty	Shake out loose debris from the seat regularly, especially after snacks or travel. Vacuum the seat regularly. Covers can be hand washed in cool water.

For any and all other product issues not covered in the above please contact our dedicated customer services team
Contact: support@pugglebaby.co.uk

Recycling the Packaging

When you have unpacked your product and ensured that all parts are present, please discard the packaging components in accordance with your local
authority guidelines. For further information, please check the material and your postcode at

https://www.recyclenow.com/recycle-an-item.

Notes

Notes

www.thenurserystore.co.uk

Imported by Online4baby Ltd.
Meadowbank, Tweedale Way, Oldham, OL9 8EH