puggle



Vienna 8 Piece 3-in-1 Safe Fit Travel System with Footmuff & Organisor

Everything you need to know

IMPORTANT. READ THESE INSTRUCTIONS AND SAFETY WARNINGS CAREFULLY BEFORE USE, AND KEEP FOR FUTURE REFERENCE.

CAUTION: There are many small components used in the construction of this travel system. These items should be kept out of reach of young children whilst assembling the unit.

This Vienna 8 Piece 3-in-1 Safe Fit Travel System with Footmuff & Organisor is tested to comply with EN 1888-2:2018+A1:2022 and EN 1466:2023.



Thank you for purchasing the Vienna 8 Piece 3-in-1 Safe Fit Travel System with Footmuff & Organisor, we hope you love it as much as we do!

Getting started:

Lay out the parts on a soft, level surface and compare to the part/ fixings checklist.

Do not discard any packaging until you are sure that you have all the parts.

We're here to help!


If you have a query with this product or require replacement parts, please contact us at supp**ort@pugglebaby.co.uk**.

Learn more

Scan the QR code to view our step-by-step demonstration video.

www.thenurserystore.co.uk

Parts List

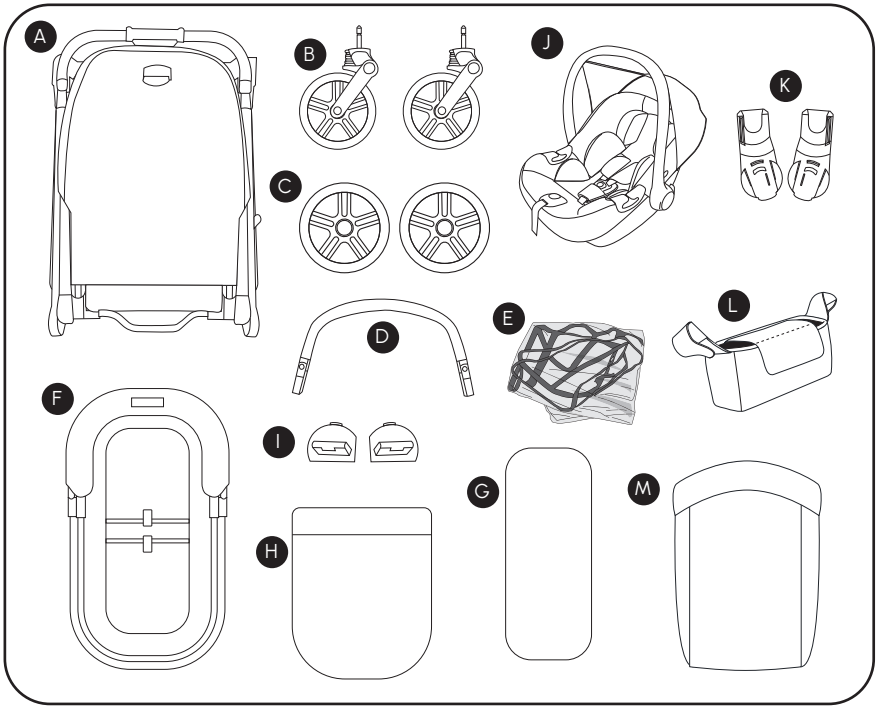


- A Seat unit and chassis
- B Front wheels
- C Rear wheels
- D Bumper bar
- E Raincover
- F Carrycot body
- G Carrycot mattress
- H Carrycot apron
- I Carrycot adaptors
- J Infant car seat*
- K Infant car seat adaptors
- L Organiser
- M Footmuff

*Consult the infant car seat manual for full instructions on how to use and install the infant car seat

Parts List




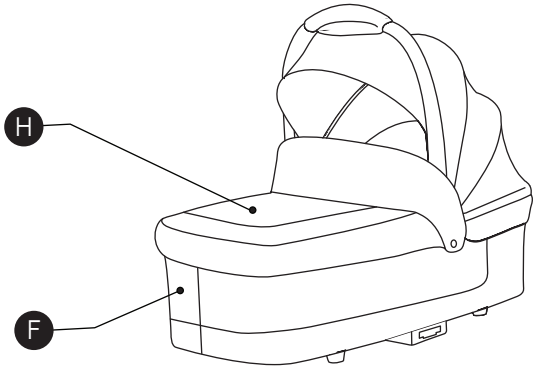

*parts not visible on this diagram have not been labelled


Assembly

1

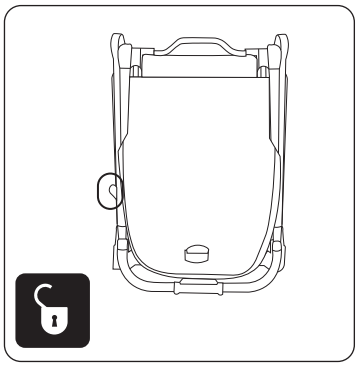

Undo the locking catch.


2

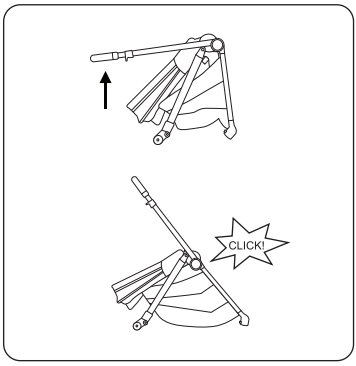

Lift the handle to open the chassis.


When the chassis is completely open, you will hear a "click" indicating it is locked into place.

3

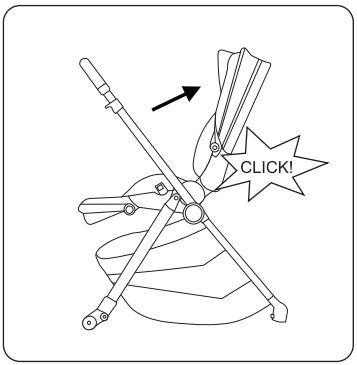

Open the seat unit.


4

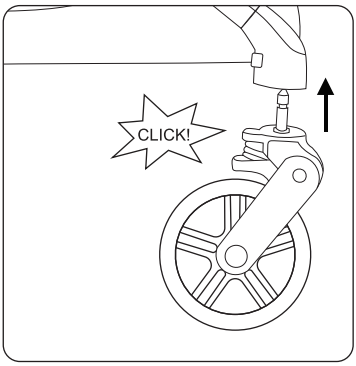

Insert the front wheel pins into the socket until you hear a "click".

Give each wheel a firm tug to ensure they're securely attached.


5

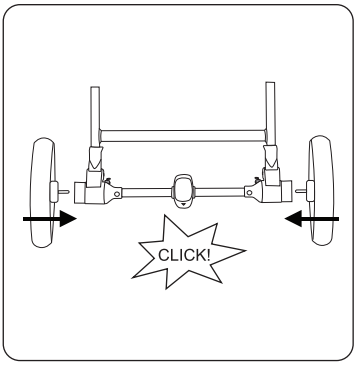

Push the rear wheels into the sides of the rear axle until you hear a "click".

Give them a firm tug to ensure they're securely attached.

6

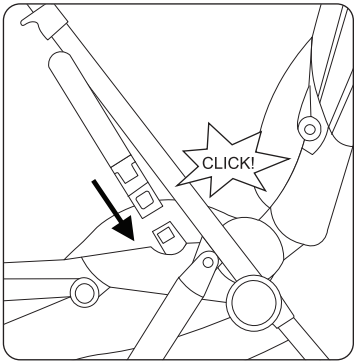


Insert the bumper bar into the slots ensuring that you hear a 'click'.

WARNING: The seat unit is not designed to be carried by the bumper bar when containing your child.


Reversible Seat

1

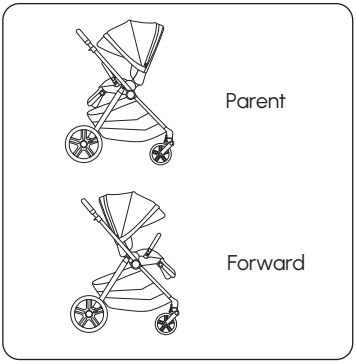


The seat is reversible.
It can be forward or parent facing.

2

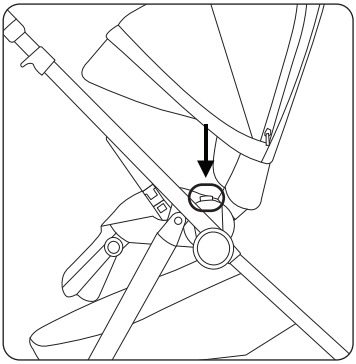


Press the buttons both sides of the connectors to remove the seat unit from the chassis.

3

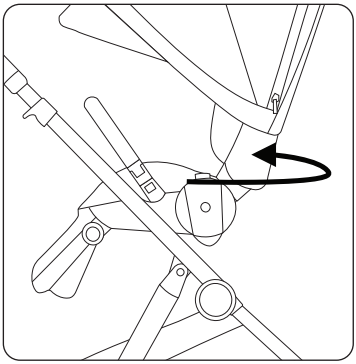

Rotate seat.


4

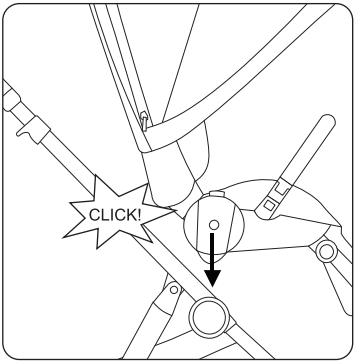

Line up the seat connectors with the chassis housing and press downwards.
Listen for a 'click' to signal correct assembly.


Harness

1

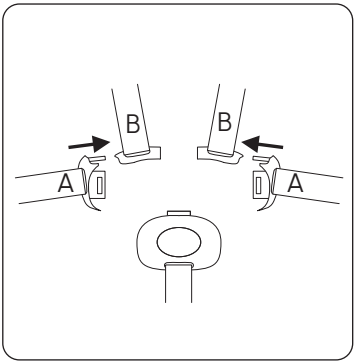


Slide two buckles A onto buckle B.

2

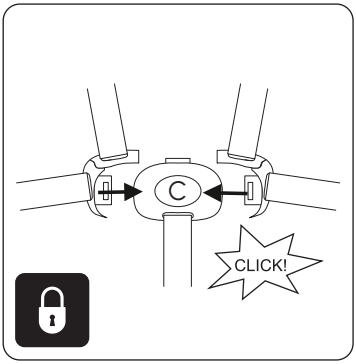


Then push the A and B buckles into C buckle holder.

3

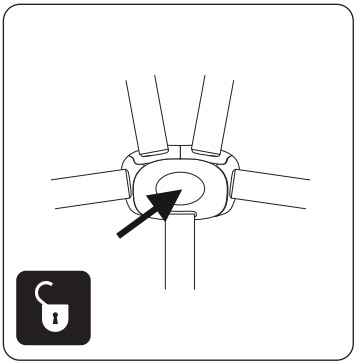

Press the centre button to release child from harness.

4

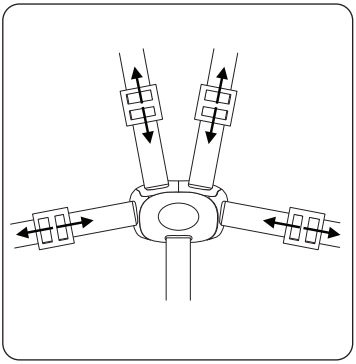


Slide two buckles A onto buckle B.

Backrest and Footrest Adjustment

1




2

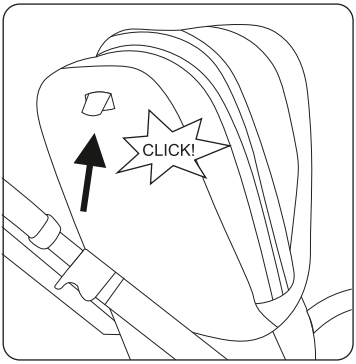

Lift the lever on the top rear of the seat to adjust the seat recline.
Ensure you hear a "click" as the seat engages at your desired position.


3

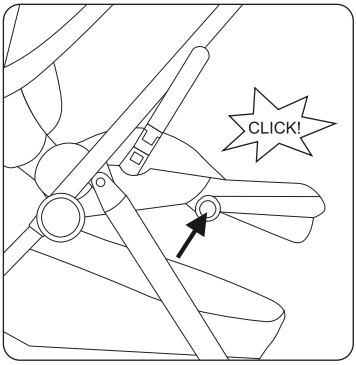


Press both footrest buttons simultaneously and adjust the footrest to the desired position.
Listen for the "click" signalling that the footrest is locked into position.

Canopy

1

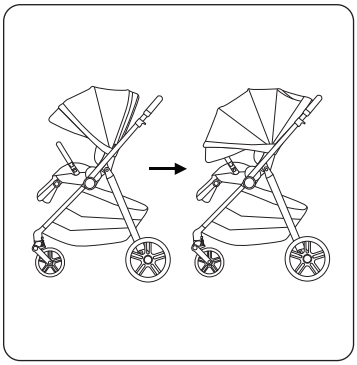


2

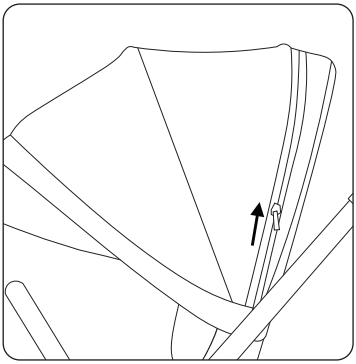

The canopy can be opened or closed by pulling forward or pushing backward on the canopy rim.

The canopy features an extension panel. Open the zip to extend the canopy.


3

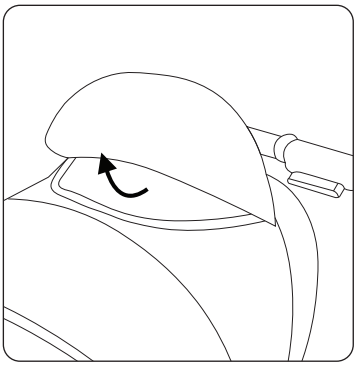

Lift the flap to reveal the mesh ventilation window.

Handle Adjustment

1

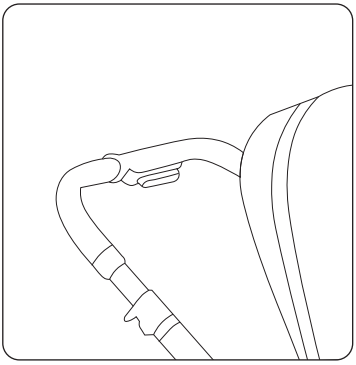

Push and hold the handle height adjustment button. At the same time adjust the handle up or down.

2



Release button at your desired position. Listen for the "click" to ensure the handle is secure.

Brakes


1



WARNING: Always apply the parking brake when the pram is not moving


WARNING: Always apply the brake when you are placing and removing the child.

2

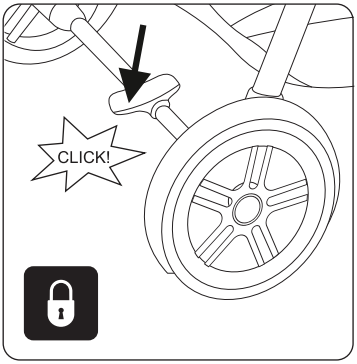

Press down on the brake pedal to engage the brake Listen for the "click" signalling that the brake is locked..


2

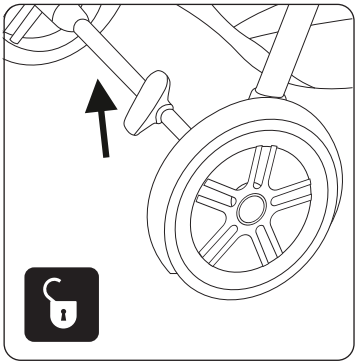

Push the brake pedal upwards to disengage the brake.

Accessories

1

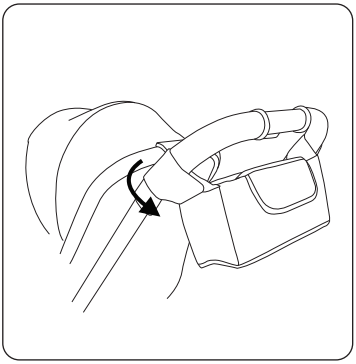

Organiser:

Wrap the velcro straps around both sides of the chassis handle and fasten to hold the organiser in place. Max weight for organiser is 2kg.

2



Footmuff:

Secure the footmuff to the seat unit with press studs.

3




Raincover:

Pull the raincover down over the stroller and secure the velcro.
The raincover fits both seat unit and carrycot.

Carrycot Assembly


1

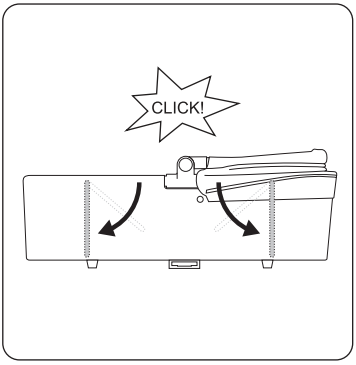

Set up the carrycot.
Pull the metal rods into place.
This will give your carrycot its structure.


WARNING: Ensure metal rods are fully engaged before continuing. Failure to do so could cause collapse.

2

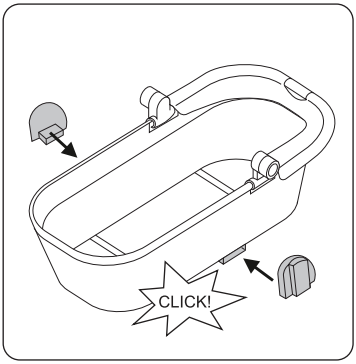

Insert the carrycot adaptors into the carrycot connectors.
Listen for a "click" to signal correct assembly.


3

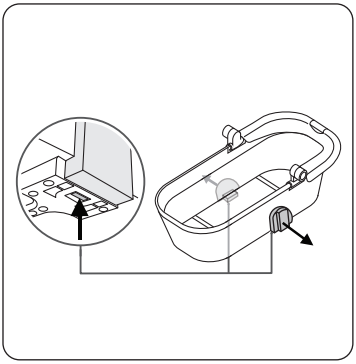

Press button on the bottom of the carrycot adaptors to remove them.


Carrycot Assembly

4

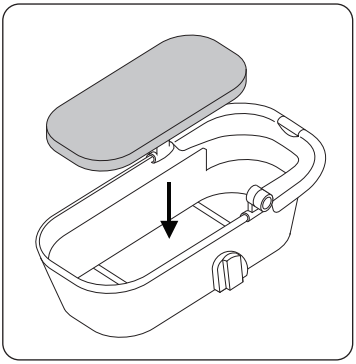


Insert the carrycot mattress.

5

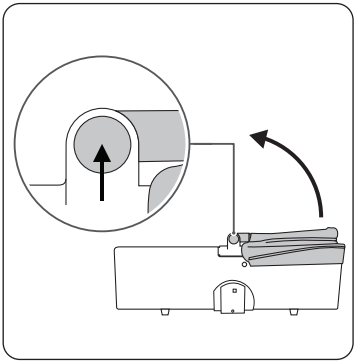

The canopy can be opened or closed. Press the buttons either side of the canopy to adjust the position up and down.

6

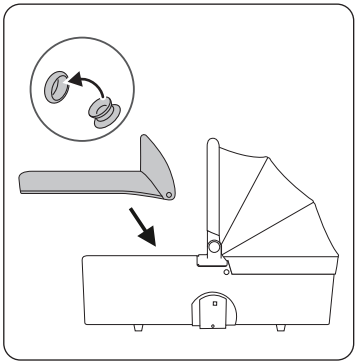

Attach the carrycot apron.


Pram Mode

1




Line up the connectors with the chassis housing and press downwards. Listen for a "click" to signal correct assembly.

2

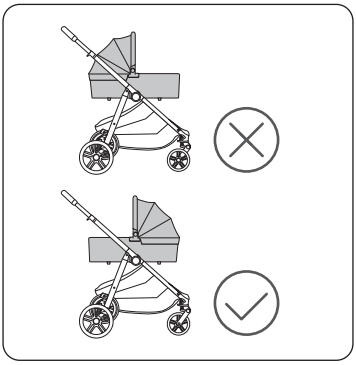

WARNING: Never use pram mode with carrycot forward facing.


3

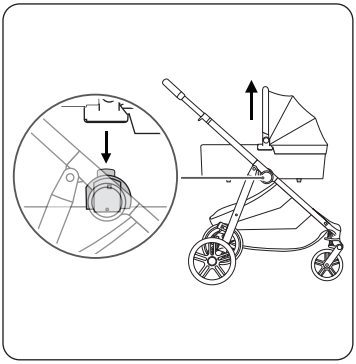

Press the buttons both sides of the connectors to remove the carrycot from the chassis.

Travel System

1

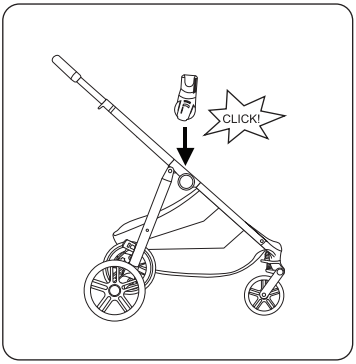

The Safe Fit i-Size Infant Carrier and adaptors are included.

Line up the adaptors with the chassis housing and press downwards.
Listen for a "click" to signal correct assembly.

2



Place the Safe Fit onto the adaptors. Push down to "click" into place.
Lift by handle to ensure car seat is secure.


WARNING: Never attach the car seat forward facing.

3



Press the button located on the side of the car seat and pull upwards to remove.

4

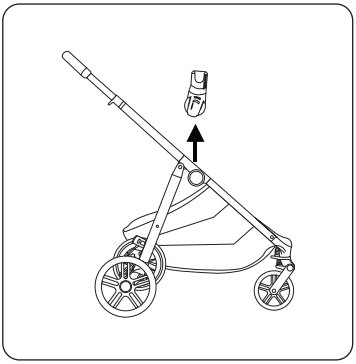


Press button on both sides of the adaptors to remove them from the chassis.

CONSULT THE INFANT CAR SEAT MANUAL FOR FULL INSTRUCTIONS ON HOW TO USE AND INSTALL THE INFANT CAR SEAT


Folding

1

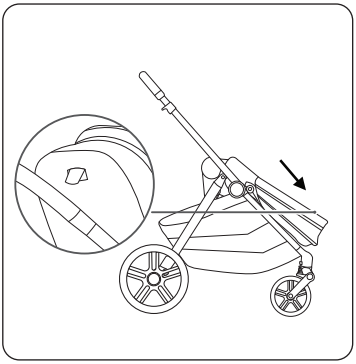


NEVER fold chassis with the infant carrier or carrycot attached.
ALWAYS fold the canopy before folding and apply the brakes.
Lift the lever on the top rear of the seat unit and push the seat unit forward to a close.

2

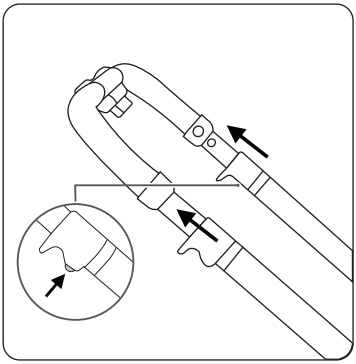

Adjust the handle to the lowest position.
Located on the chassis, hold in the safety lock and simultaneously pull up on both folding adjusters.
Push the chassis handle down to a close.

3

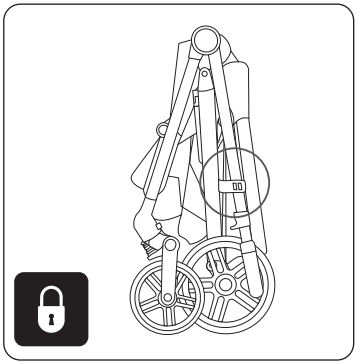

Pull up on the stroller to complete the close.
The safety lock will engage with a "click".

WARNING: To avoid injury ensure that your child is kept away when unfolding and folding this product.

Warnings

WARNING: This product is suitable for one child from birth (max. weight 22kg or 4 years whichever comes first).
WARNING: Suitable from birth in pram mode up to a maximum weight of 9kg or until the child can sit up unaided, roll over or push itself up on its hands and knees.
WARNING: Use the most reclined position for new born baby.
WARNING: Follow suitability recommendations given in the separate infant car seat instruction manual.
WARNING: Never leave the child unattended.
WARNING: Ensure all locking devices are engaged before use.
WARNING: Always apply the parking brake when the product is stationary.
WARNING: Ensure the parking brake is engaged during the loading and unloading of the child.
WARNING: Take extra care in windy conditions.
WARNING: Be careful when going up or down kerbs.
WARNING: To avoid injury ensure that your child is kept away when unfolding and folding this product.
WARNING: Do not let your child play with this product.
WARNING: Always use the restraint system.
WARNING: Always use the crotch strap in combination with the waist belt section of the harness.
WARNING: Check that the pram body or seat unit or car seat attachment devices are correctly engaged before use.
WARNING: This product is not suitable for running or skating.
WARNING: Do not let other children play or hang on the product.
WARNING: Do not use this product if any part is broken, torn or missing.
WARNING: Do not add an additional mattress to the seat unit when in pram mode.
WARNING: Do not place the product near an open fire or other source of strong heat.
WARNING: Adult assembly is required.
WARNING: When in use, the head of the child in the product should never be lower than the body of the child.

Warnings

WARNING: Any load attached to the handle and/or on the back of the backrest and/or on the sides of the vehicle will affect the stability of the vehicle.
WARNING: Bags and other items should not be hung from the handles as this can affect the stability of the product.
WARNING: Do not use parts or accessories which are not approved by the manufacturer.
WARNING: Do not allow your child to climb unassisted into the product.
WARNING: Remove your child and fold the product when going up or down escalators.
WARNING: If this product is used by someone unfamiliar with it e.g. grandparents, always show them how it works.
WARNING: A basket is provided for the carriage of 8kg of items evenly distributed.
WARNING: Infant car seats should not be used in place of a cot or cot bed. Should your child need to sleep then it should be placed in a suitable pram body, cot or cot bed.
WARNING: Overloading, incorrect folding and the use of non-approved accessories is unsafe and may damage or break this product.
WARNING: Never leave the raincover, hood or apron on indoors, in a hot atmosphere or near a heat source as your child may overheat.
WARNING: To prevent damage, remove the raincover before folding the pushchair.
WARNING: Do not place anything on top of the raincover.
WARNING: Only use the pram body or seat unit or car seat on the Vienna chassis.

Care & Maintenance

- The product requires regular maintenance to ensure correct and safe performance.
- Regularly inspect the wheels, locks, brakes, harness, catches, seat adjusters, joints and fixings to ensure they are clean, operating correctly and in full working order.
- Replace tyres if they are excessively worn.
- Do not use this product if any part is broken, torn or missing and use only spares provided by the manufacturer.
- If parts become stiff or difficult to operate, ensure dirt is not the cause, then try a light application of a silicon lubricant, ensuring it penetrates between the components. Regular lubrication of moving parts will extend the life of your product and make opening and folding easier.
- After exposure to damp conditions, dry off with a soft cloth and leave fully open in a warm environment. Storing damp will encourage mildew to form. Store in a dry place.
- Do not leave in sunlight for prolonged periods as some fabrics may fade.

- Spot or sponge clean fabrics with mild detergent.
- NEVER use bleach.
- Dry in shade thoroughly before reuse and avoid direct heat and sunlight. Do not iron. Do not dry clean.
- Wipe clean plastics and metals with a damp cloth.
- Never clean any part of the product with abrasive, ammonia based, bleach based or spirit type cleaners.
- Ensure the product is fully dry before use or storage.
- Always ensure the product is stored in a dry place to prevent mold or mildew developing.

Troubleshooting

Issue	Solution
Chassis will not fold	Check the storage basket and seat hinges for hidden toys, blankets, or bunched-up fabric. Ensure the safety lock is pushed in before pulling up on the folding adjusters. Ensure the seat unit is folded over properly.
Brake not locking	Check the rear axle and brake cogs for lodged mud, leaves, or grit. Carefully remove debris with a soft brush.
Harness buckle is not fastening or feels stiff	Dirt, food or foreign objects in the harness can fall into buckle mechanism. Routinely check the buckle area for crumbs, dirt, or foreign objects. Vacuum the seat regularly.

For any and all other product issues not covered in the above please contact our dedicated customer services team
Contact: support@pugglebaby.co.uk

Recycling the Packaging

When you have unpacked your product and ensured that all parts are present,
please discard the packaging components in accordance with your local authority guidelines. For further information, please check the material and your postcode at

https://www.recyclenow.com/recycle-an-item.

www.thenurserystore.co.uk

Imported by Online4baby Ltd.
Meadowbank, Tweedale Way, Oldham, OL9 8EH