
puggle

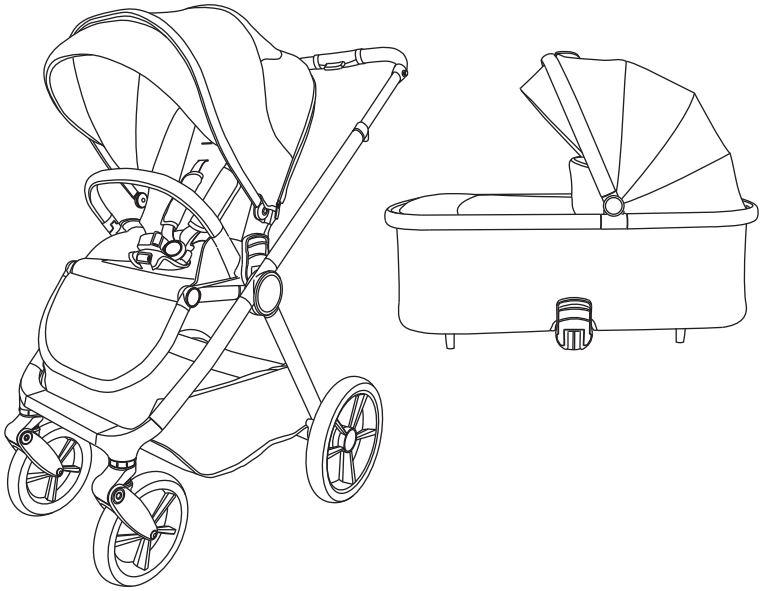


# Brooklyn 3in1 Pushchair with Carrycot, Raincover + Adaptors

Everything you need to know

# **IMPORTANT**. READ THESE INSTRUCTIONS AND SAFETY WARNINGS CAREFULLY BEFORE USE, AND KEEP FOR FUTURE REFERENCE.

CAUTION: There are many small components used in the construction of this travel system. These items should be kept out of reach of young children whilst assembling the unit.

This Brooklyn 3in1 Pushchair, Carrycot, Raincover + Adaptors is tested to comply with EN 1888-2:2018+A1:2022 and EN 1466:2023.

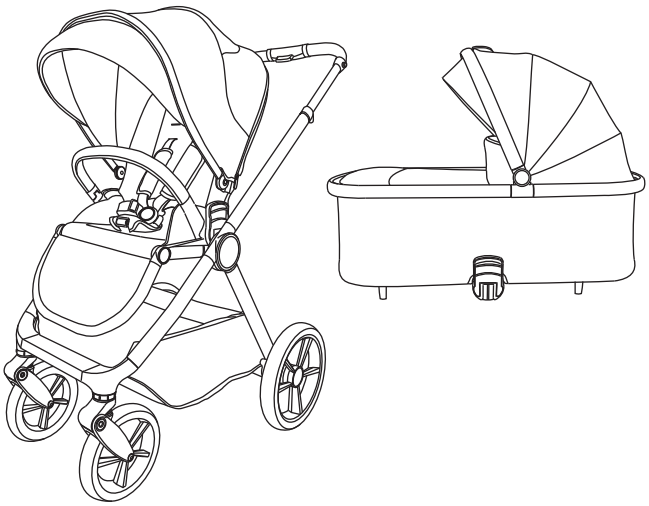

Thank you for purchasing the Brooklyn 3in1 Pushchair, Carrycot, Raincover + Adaptors, we hope you love it as much as we do!

# Getting started:

Lay out the parts on a soft, level surface and compare to the part/ fixings checklist.

Do not discard any packaging until you are sure that you have all the parts.

# We're here to help!


If you have a query with this product or require replacement parts, please contact us at supp**ort@pugglebaby.co.uk**.

# Learn more

Scan the QR code to view our step-by-step demonstration video.


**www.thenurserystore.co.uk**

# Parts List

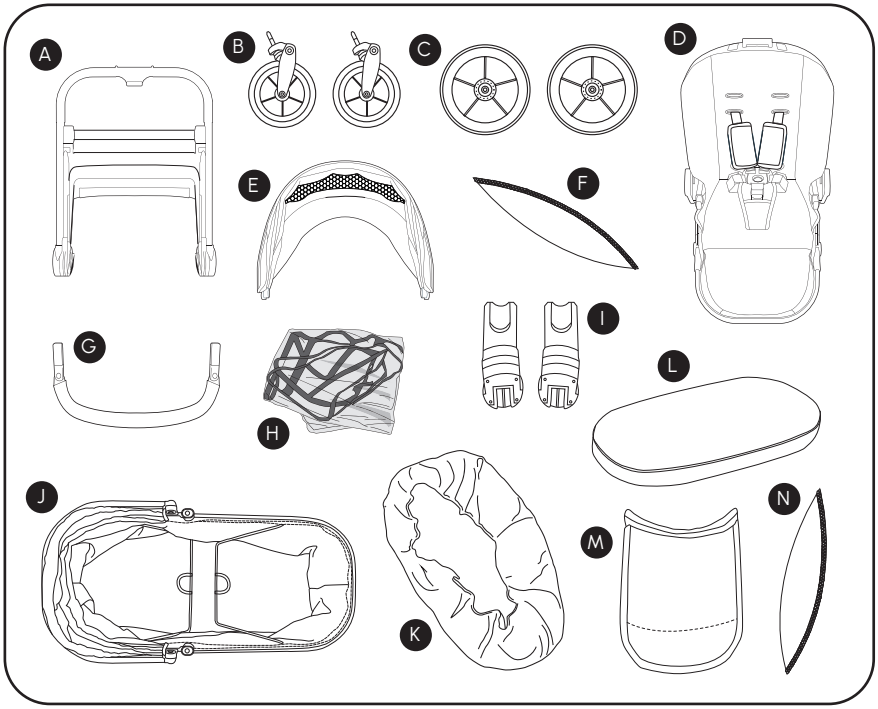


- A Chassis
- B Front wheels
- C Rear wheels
- D Seat unit
- E Canopy
- F Canopy visor
- G Bumper bar
- H Raincover
- I Car seat adaptors
- J Carrycot
- K Carrycot lining
- L Carrycot mattress
- M Carrycot apron
- N Carrycot canopy visor


# Parts List

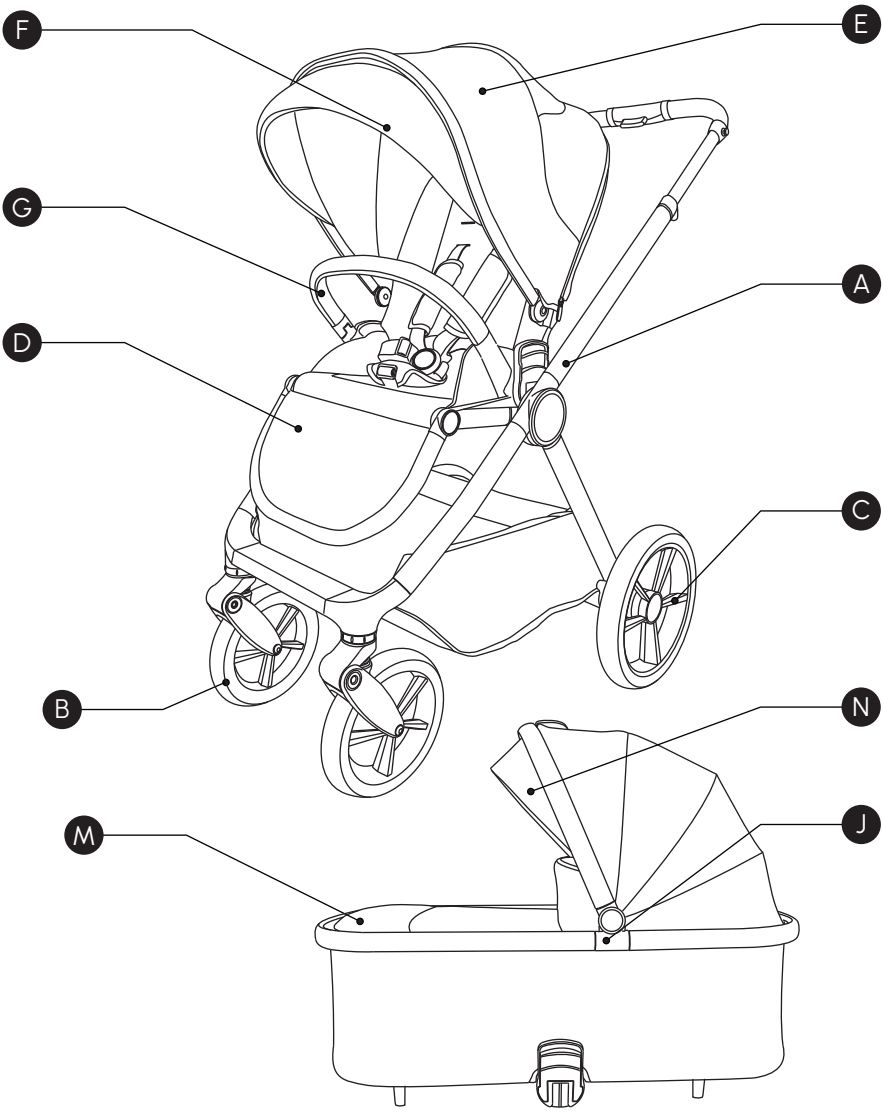


*parts not visible on this diagram have not been labelled

# Chassis Assembly


**1**

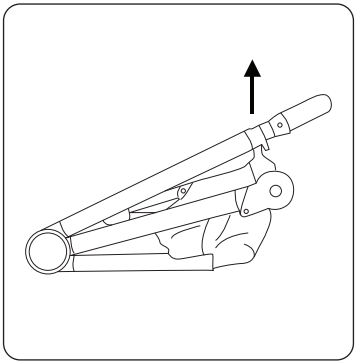

Lift up the handle to open the chassis.

**WARNING: Before attempting to fold the chassis, ensure you have read the 'Folding' section on pages 27 & 28**


**2**

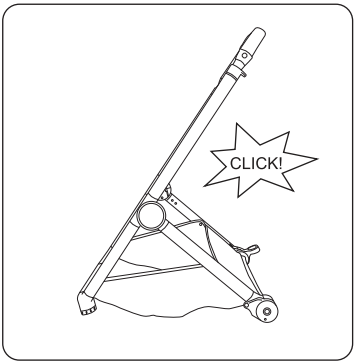


When the chassis is completely open, you should hear a "click" sound on both sides indicating it is locked in place.


**WARNING: Always ensure the opened chassis is locked in place before you use it.**

**3**

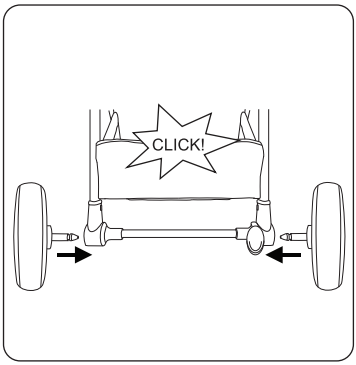



Push each rear wheel into the sides of the rear wheel axle until you hear a "click". Give them a tug to ensure they are attached securely.

4

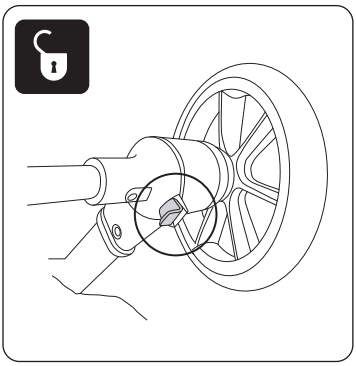


**To remove** the rear wheels, simply pull and hold the metal atch located underneath the rear wheel axle and pull the wheel out.

5

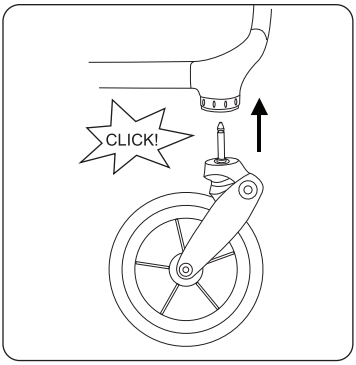


Insert each of the front wheel pins into the centre of the socket until you hear a "click". Give each wheel a firm tug to ensure they're securely attached.


6

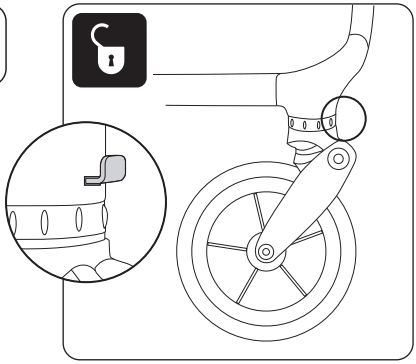

**To remove** the front wheels, push and hold the latch at the back of the wheel socket and pull the wheel out.


# Carrycot Assembly

**1**

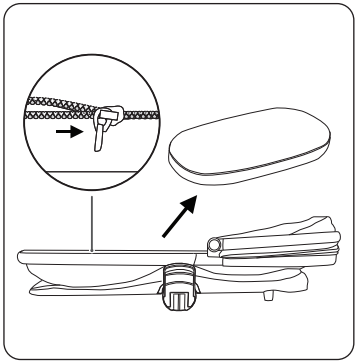

Remove the carrycot mattress and unzip the carrycot lining to remove from the carrycot.


**2**

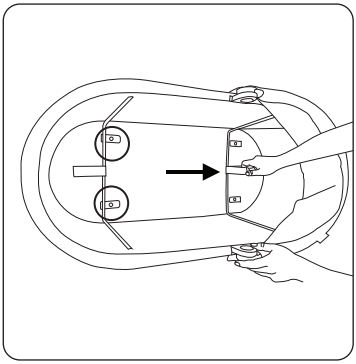

Pull the metal rods into place as shown. The metal rods should engage with the plastic holders in the carrycot base board. This will give your carrycot its structure.

**WARNING: Ensure metal rods are fully engaged before continuing. Failure to do so could cause collapse and fatality.**


**3**

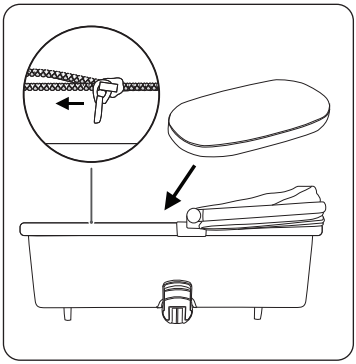

Re-zip the carrycot lining onto the carrycot frame and re-insert the carrycot mattress.

**WARNING: Do not add an additional mattress to the carrycot.**


**4**

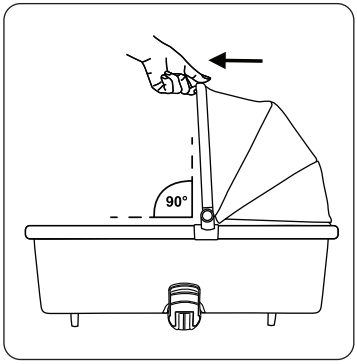


Open the canopy by pulling forward on the canopy rim until it clicks into place.


**WARNING! Keep the handle at the upright position when carrying or lifting the carrycot.**

**5**

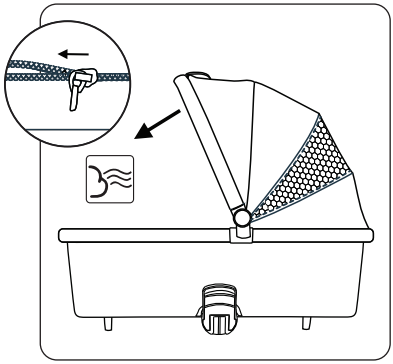


The canopy features an extension panel for extra air circulation and to keep an eye on baby.
Undo the zip and pull forward on the canopy rim to extend the canopy further.

**6**

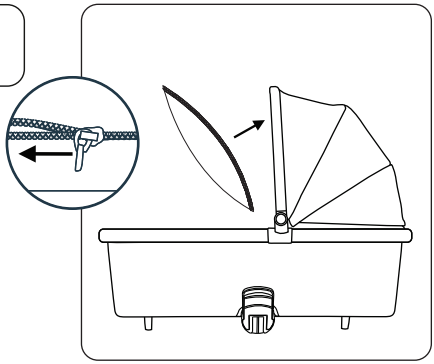


The canopy also features a visor (N). Starting from the right-hand side, fully zip the visor to the canopy rim.

**7**

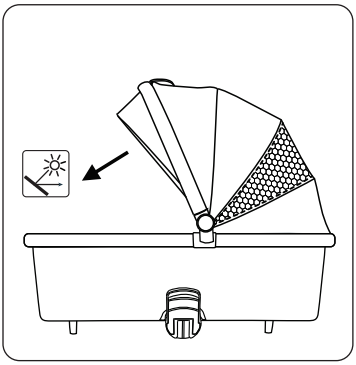


The visor can be pulled out for extra sun protection or folded back underneath the canopy rim when not in use.

**8**

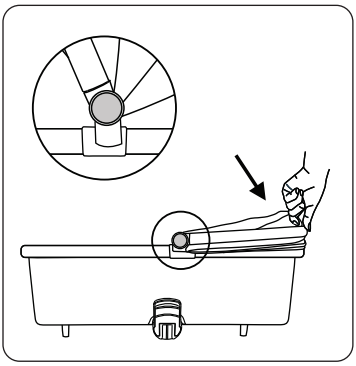

To adjust the canopy back to upright position or to fold it back completely, push in buttons both sides of the canopy and adjust to desired position.

**9**

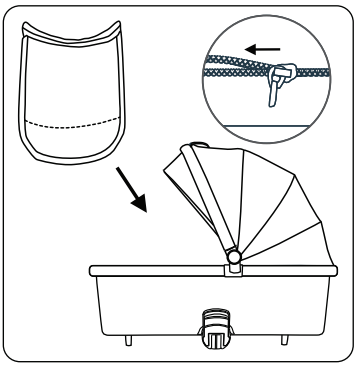


Starting from the right, zip the apron onto the carrycot. Fasten the press studs to the inside of the canopy frame.

**WARNING! The carrycot is not suitable for overnight sleeping.**


# Seat Unit Assembly

**1**

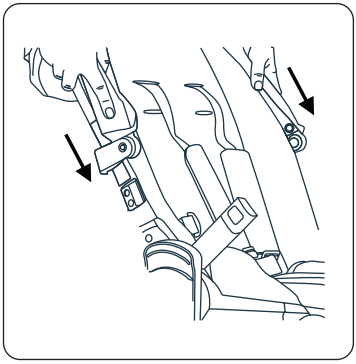


Attach the canopy to the seat unit. First attach the plastic canopy clips to their respective sides.

**2**

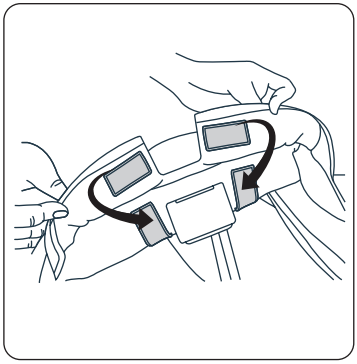


At the top back of the canopy, pull the canopy edges around the seat unit backrest, ensuring the backrest adjustment mechanism comes through the allocated hole.
Secure the velcro at the top and sides.

**3**

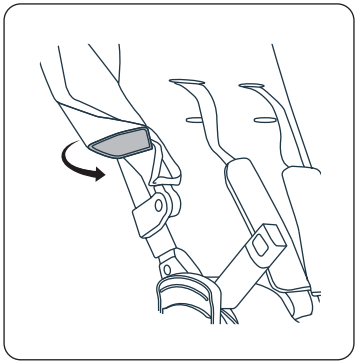

# Seat Unit Assembly


**4**

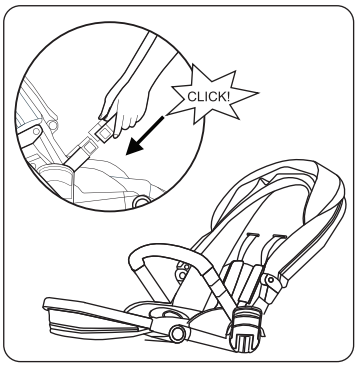


Insert the bumper bar (G) into the connection posts. Listen for the "click" signalling correct assembly.


Give the bumper bar a tug to ensure it's securely in place.

**5**

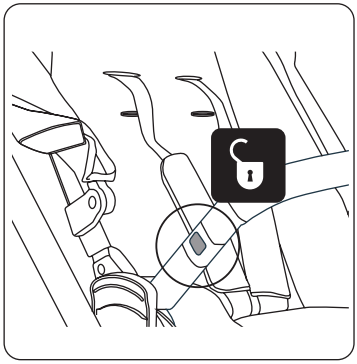

**To remove** the bumper bar, press the buttons on both sides and lift up.


**6**

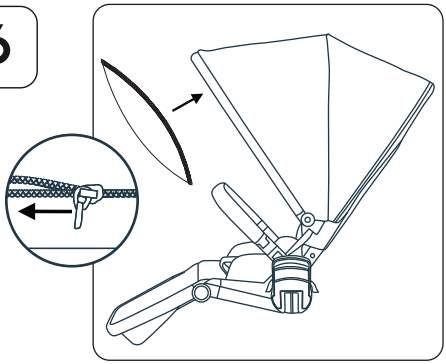

Attach the canopy visor (F) to the canopy. Starting from the right-hand side, fully zip the visor to the canopy rim.


# Brakes

1

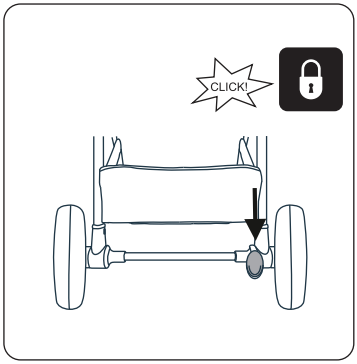


Press down on the brake pedal on the rear axle to engage the brake.
Listen for the "click" signalling that the brake is locked.

2

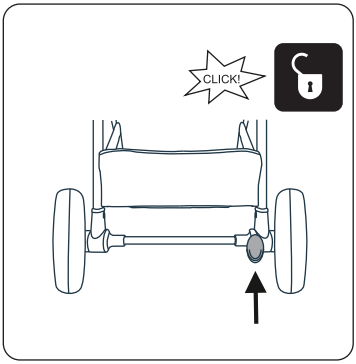



Push the brake pedal upwards to disengage the brake.

**WARNING! Always apply the parking brake when the pram is not moving.**
**WARNING! Always apply the brake when you are placing and removing the child.**
**WARNING! Always apply the brake when you are making adjustments to the pram (e.g. changing seat direction).**

# Swivel Wheels


1

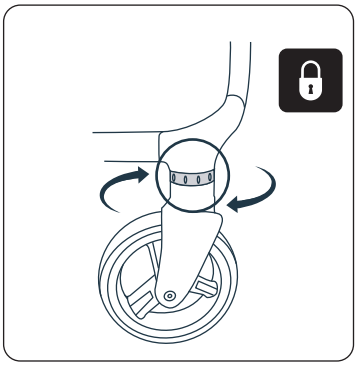

When travelling along straight surfaces or uneven terrain, the front wheels may spin.

To lock the front swivel wheels into place, twist the ridged locking mechanism at the top of the front wheels.


2

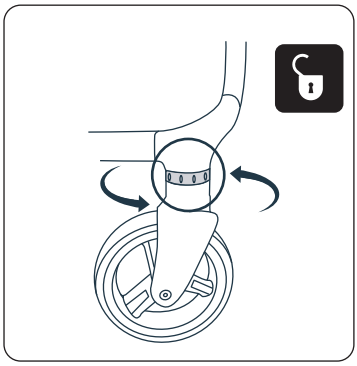

To go back to 360° swivel mode, twist the ridged locking mechanism at the top of the front wheels back.


# Handle Adjustment

**1**

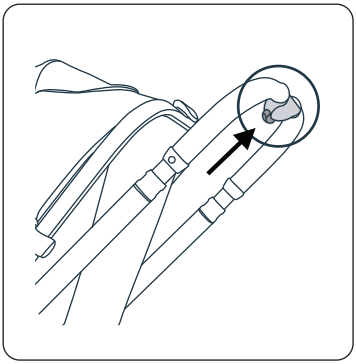

Push the button in the middle of the handle bar and pull or push the handle to your desired height.

**2**

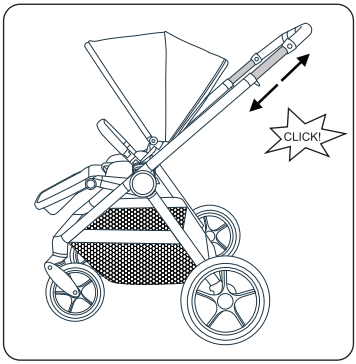


The handle will "click" into place.


# Pram Mode

**1**




Line up the connectors with the chassis housing and press downwards. Listen for a "click" to signal correct assembly.

**2**

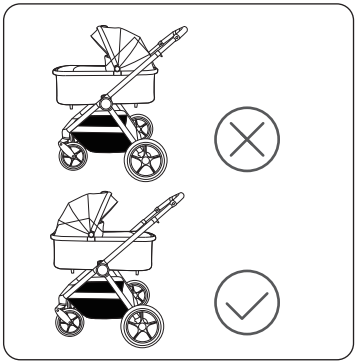

**WARNING: Never use pram mode with carrycot forward facing.**


**3**

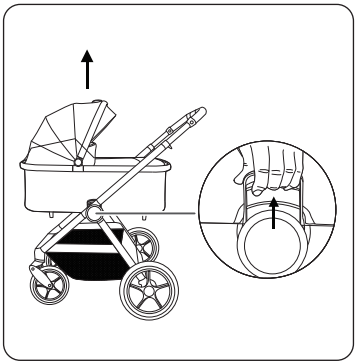

Lift levers both sides of the connectors and pull the carrycot upwards.

# Pushchair Mode


**1**

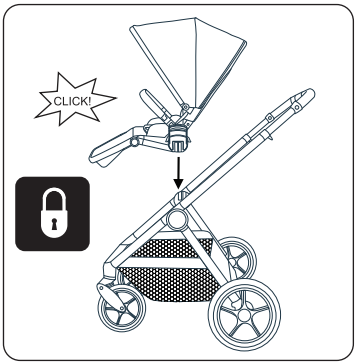


Attach the seat unit to the chassis. Line up the seat unit connectors with the chassis connection points and press downwards. Listen for a 'click' to signal correct assembly.


**WARNING! The seat unit is not suitable for children under 6 months.**

**2**

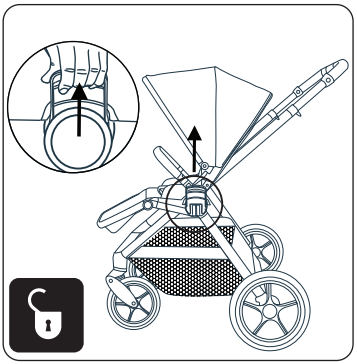


**To remove** the seat unit from the chassis, lift levers both sides of the connectors and pull the seat unit upwards.

**3**

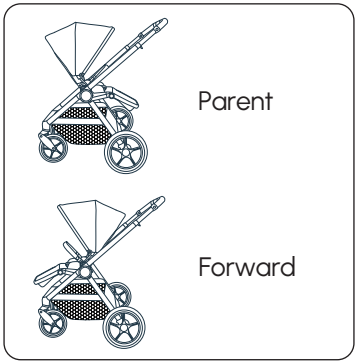


The seat unit is reversible in pushchair mode. It can be forward facing or parent facing.


**4**

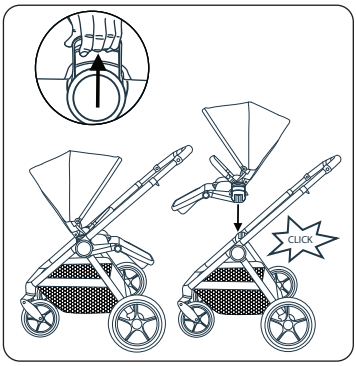


Lift lever both sides of the seat connectors to remove the seat unit from the chassis.
To re-attach the seat unit to the chassis, line up the seat connectors with the chassis connection points and press downwards.
Listen for a "click" to signal correct assembly.


# Harness

1

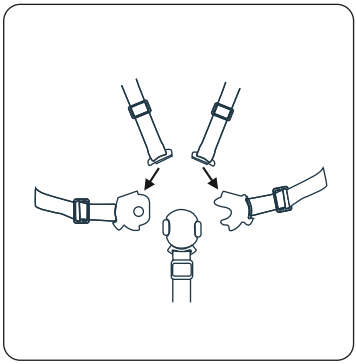

**To lock** the harness, first slide the shoulder strap connectors into the waist strap clasps.


2

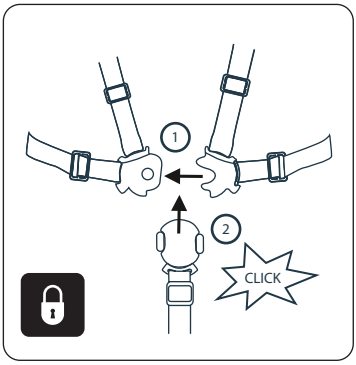


Next, join the magnetic waist strap clasps together. Then place the magnetic front clasp on top to complete the buckle.

Listen for the "click" signalling that the harness buckle is locked.


3

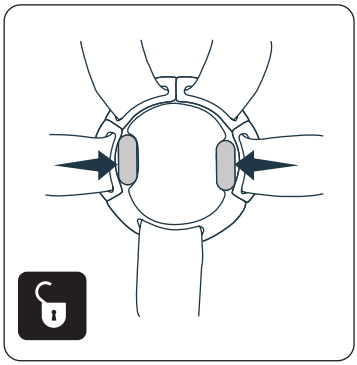

*To unlock* the harness, firmly press in the buttons on both sides of the buckle and pull the magnetic front clasp off. Then pull apart the waist strap clasps.

Slide out the shoulder strap connectors from the waist strap clasps to fully open the harness..


**4**

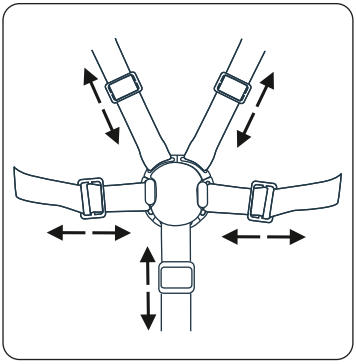

To adjust the harness, move the slides as shown.


**WARNING! Always adjust the harness to fit your child correctly for their comfort and safety. A loose fitting harness can be very dangerous.**

**5**

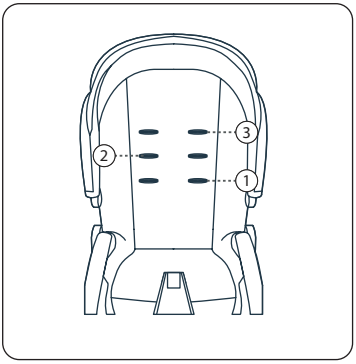



The seat unit has 3 shoulder height positions. The harness is assembled in the lowest position which is suitable for a 6 month old baby.
Before using always check your baby is comfortable and adjust the shoulder strap height as required.

**3**

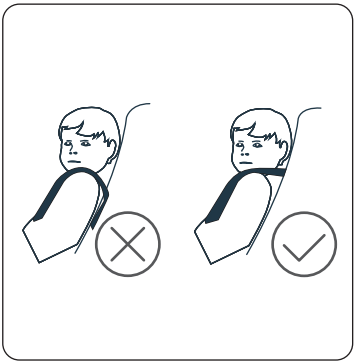


**WARNING! Adjust the shoulder strap height according to baby height.**

6

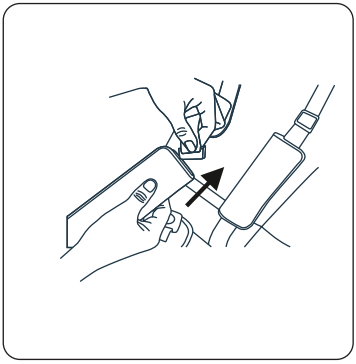

Open the harness and remove the chest pads to adjust the shoulder height position.

7

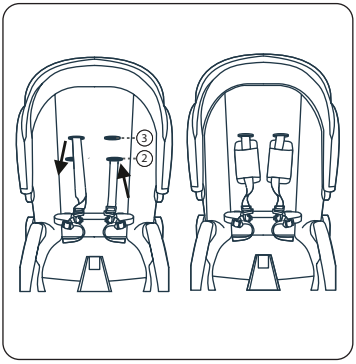



To increase the shoulder height, feed harness tabs through slots in seat unit.
Re-insert the harness tabs through slots at desired height.
Pull out from front of seat.
Reverse the process to lower the shoulder height.

Re-attach the chest pads.

**WARNING! Always adjust the shoulder strap height according to baby height and ensure that both straps are at the same level.**


# Backrest Adjustment

1

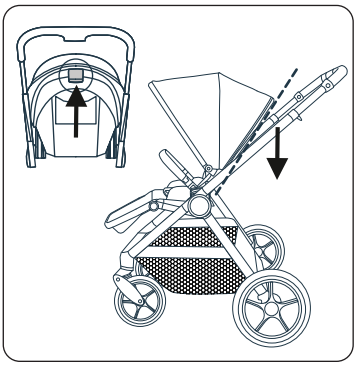

Lift the lever at the back of the seat unit to adjust the seat unit recline.


2

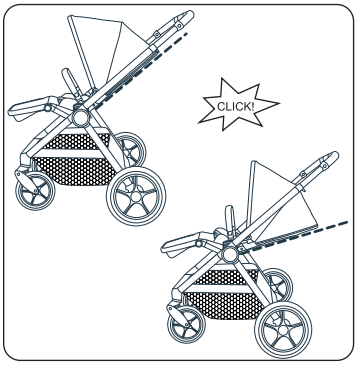


Ensure you hear a "click" as the seat engages at your desired position.

# Footrest Adjustment


1

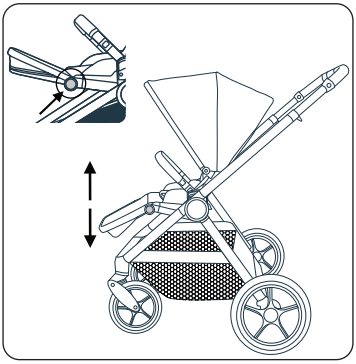

Press both footrest buttons s imultaneously
and adjust the footrest to the desired
position. Listen for the "click" signalling
that the footrest is locked into position.


# Canopy Adjustment

1

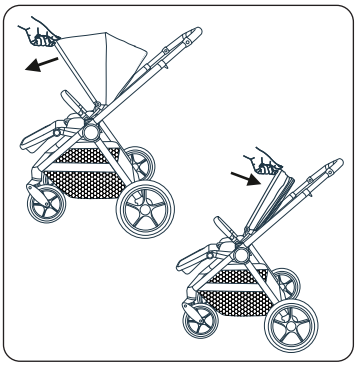

The canopy can be opened or closed by pulling forward or backward on the canopy rim.


2

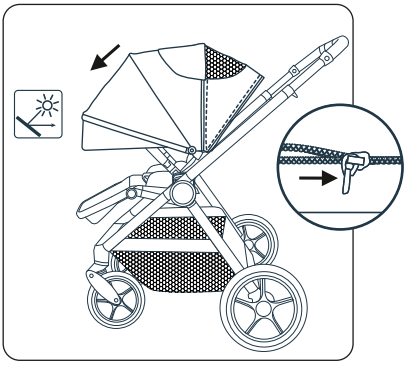

The canopy features an extension panel for maximum sun protection.
The extension panel has a mesh window for air circulation and to keep an eye on baby in forward facing position.

The canopy visor can be pulled out for extra sun protection or folded back underneath the canopy rim when not in use.

**1**

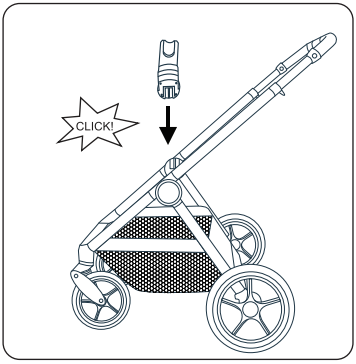


The Safe Fit i-Size Infant Carrier and adaptors are included.

Line up the adaptors with the chassis housing and press downwards.
Listen for a "click" to signal correct assembly.

**2**





Place the car seat onto the adaptors.
Push down to "click" into place.
Lift by handle to ensure car seat is secure.

**WARNING! Never attach the car seat forward facing.**


IMPORTANT: Refer to the car seat manual for full details of use.

**3**

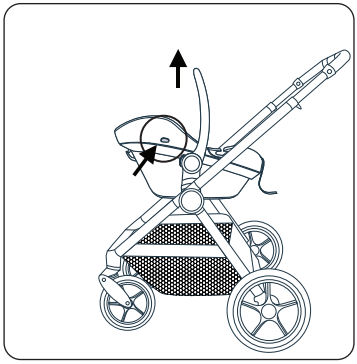


**To remove** the car seat, press the buttons located on the sides of the car seat and pull upwards.

4

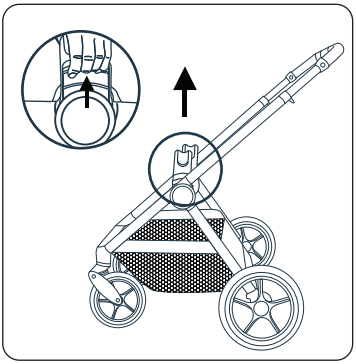


**To remove** the car seat adaptors, lift up levers on the adaptors and pull adaptors upwards.

**1**

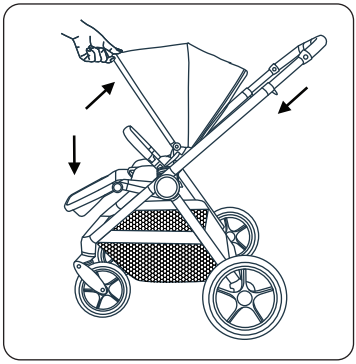


NEVER fold chassis with the infant carrier or carrycot attached.
ALWAYS fold the canopy before folding and apply the brakes.
For a more compact fold, remove the seat unit before folding. Otherwise, the chassis can fold with the seat unit attached forward facing or parent facing.

**2**

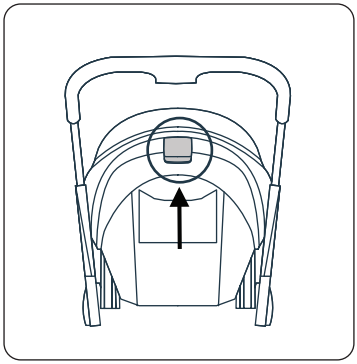

Lift the adjustment lever at the back of the seat unit and push the backrest forward until the seat unit is completely folded over.


**3**

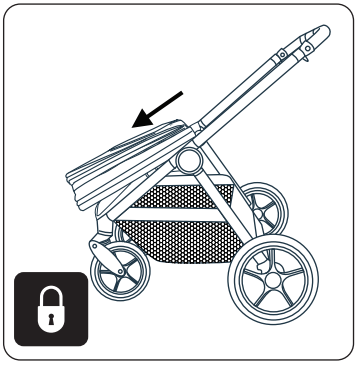

Pull up on the stroller to complete the close.
The safety lock will engage with a "click".

**WARNING: To avoid injury ensure that your child is kept away when unfolding and folding this product.**


**4**

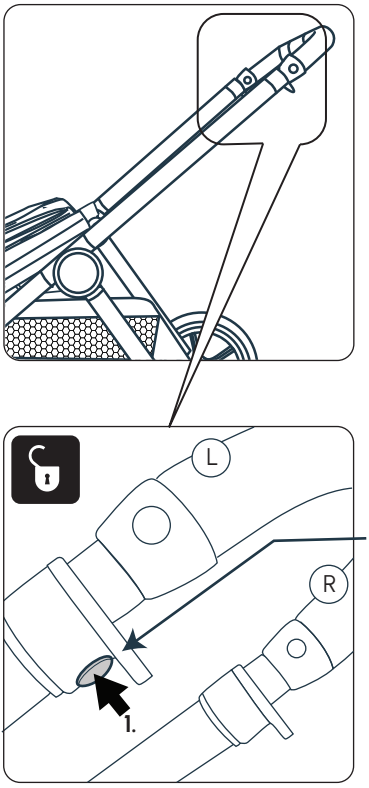


**WARNING: the button MUST be pressed to release left hand lever. Pull both levers at the same time to avoid damaging the product.**


1. Push the button on the left-hand side of the handle to release the lever

**5**

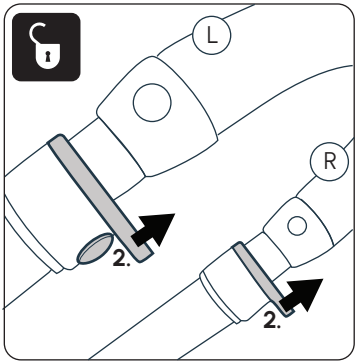


2. With the button still pressed, pull up the levers on both sides of the chassis at the same time.


**5**

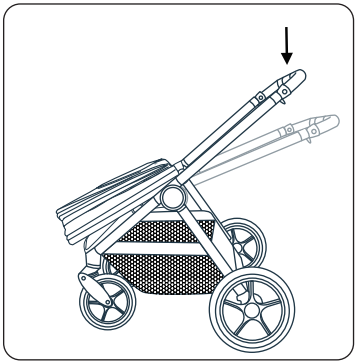

Then gentley press down on the handle to fold.

**WARNING: To avoid injury ensure that your child is kept away when unfolding and folding this product.**

1

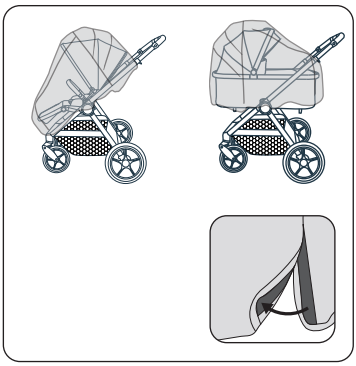

**Raincover:**

Pull the raincover down over the stroller and secure the velcro.
The raincover fits both seat unit and carrycot.

**WARNING:** This product is suitable for one child from birth (max. weight 22kg or 4 years whichever comes first).
**WARNING:** Suitable from birth in pram mode up to a maximum weight of 9kg or until the child can sit up unaided, roll over or push itself up on its hands and knees.
**WARNING:** Use the most reclined position for new born baby.
**WARNING:** Follow suitability recommendations given in the separate infant car seat instruction manual.
**WARNING:** Never leave the child unattended.
**WARNING:** Ensure all locking devices are engaged before use.
**WARNING:** Always apply the parking brake when the product is stationary.
**WARNING:** Ensure the parking brake is engaged during the loading and unloading of the child.
**WARNING:** Take extra care in windy conditions.
**WARNING:** Be careful when going up or down kerbs.
**WARNING:** To avoid injury ensure that your child is kept away when unfolding and folding this product.
**WARNING:** Do not let your child play with this product.
**WARNING:** Always use the restraint system.
**WARNING:** Always use the crotch strap in combination with the waist belt section of the harness.
**WARNING:** Check that the pram body or seat unit or car seat attachment devices are correctly engaged before use.
**WARNING:** This product is not suitable for running or skating.
**WARNING:** Do not let other children play or hang on the product.
**WARNING:** Do not use this product if any part is broken, torn or missing.
**WARNING:** Do not add an additional mattress to the seat unit when in pram mode.
**WARNING:** Do not place the product near an open fire or other source of strong heat.
**WARNING:** Adult assembly is required.
**WARNING:** When in use, the head of the child in the product should never be lower than the body of the child.

# Warnings

**WARNING:** Any load attached to the handle and/or on the back of the backrest and/or on the sides of the vehicle will affect the stability of the vehicle.
**WARNING:** Bags and other items should not be hung from the handles as this can affect the stability of the product.
**WARNING:** Do not use parts or accessories which are not approved by the manufacturer.
**WARNING:** Do not allow your child to climb unassisted into the product.
**WARNING:** Remove your child and fold the product when going up or down escalators.
**WARNING:** If this product is used by someone unfamiliar with it e.g. grandparents, always show them how it works.
**WARNING:** A basket is provided for the carriage of 8kg of items evenly distributed.
**WARNING:** Infant car seats should not be used in place of a cot or cot bed. Should your child need to sleep then it should be placed in a suitable pram body, cot or cot bed.
**WARNING:** Overloading, incorrect folding and the use of non-approved accessories is unsafe and may damage or break this product.
**WARNING:** Never leave the raincover, hood or apron on indoors, in a hot atmosphere or near a heat source as your child may overheat.
**WARNING:** To prevent damage, remove the raincover before folding the pushchair.
**WARNING:** Do not place anything on top of the raincover.
**WARNING:** Only use the pram body or seat unit or car seat on the Vienna chassis.

- The product requires regular maintenance to ensure correct and safe performance.
- Regularly inspect the wheels, locks, brakes, harness, catches, seat adjusters, joints and fixings to ensure they are clean, operating correctly and in full working order.
- Replace tyres if they are excessively worn.
- Do not use this product if any part is broken, torn or missing and use only spares provided by the manufacturer.
- If parts become stiff or difficult to operate, ensure dirt is not the cause, then try a light application of a silicon lubricant, ensuring it penetrates between the components. Regular lubrication of moving parts will extend the life of your product and make opening and folding easier.
- After exposure to damp conditions, dry off with a soft cloth and leave fully open in a warm environment. Storing damp will encourage mildew to form. Store in a dry place.
- Do not leave in sunlight for prolonged periods as some fabrics may fade.

- Spot or sponge clean fabrics with mild detergent.
- NEVER use bleach.
- Dry in shade thoroughly before reuse and avoid direct heat and sunlight. Do not iron. Do not dry clean.
- Wipe clean plastics and metals with a damp cloth.
- Never clean any part of the product with abrasive, ammonia based, bleach based or spirit type cleaners.
- Ensure the product is fully dry before use or storage.
- Always ensure the product is stored in a dry place to prevent mold or mildew developing.

# Troubleshooting

| Issue | Solution |
|---|---|
| **Chassis will not fold** | Check the storage basket and seat hinges for hidden toys, blankets, or bunched-up fabric.<br><br>Ensure the safety lock button is pushed in before pulling up on the folding levers.<br><br>Ensure the seat unit is folded over properly. |
| **Brake not locking** | Check the rear axle and brake cogs for lodged mud, leaves, or grit. Carefully remove debris with a soft brush. |
| **Harness buckle is not fastening or feels stiff** | Dirt, food or foreign objects in the harness can fall into buckle mechanism.<br><br>Routinely check the buckle area for crumbs, dirt, or foreign objects. Vacuum the seat regularly. |

For any and all other product issues not covered in the above please contact our dedicated customer services team
Contact: support@pugglebaby.co.uk

# Recycling the Packaging

When you have unpacked your product and ensured that all parts are present,
please discard the packaging components in accordance with your local authority guidelines. For further information, please check the material and your postcode at

**https://www.recyclenow.com/recycle-an-item.**

www.thenurserystore.co.uk

Imported by Online4baby Ltd.
Meadowbank, Tweedale Way, Oldham, OL9 8EH