puggle



Feasty Highchair (6m-3yrs)

Everything you need to know

IMPORTANT. READ THESE INSTRUCTIONS AND SAFETY WARNINGS CAREFULLY BEFORE USE, AND KEEP FOR FUTURE REFERENCE.

CAUTION: Failure to follow the warnings and the instructions throughout this booklet could result in serious injury or death. Each mode has specific warnings, make sure to read and understand the warnings in each mode.

This Puggle Feasty Highchair is tested to comply with EN 14988:2017+A2:2024 & EN 17191: 2021



Thank you for purchasing the Puggle Feasty Highchair, we hope you love it as much as we do!

Getting started:

Lay out the parts on a soft, level surface and compare to the part/ fixings checklist.

Do not discard any packaging until you are sure that you have all the parts.

We're here to help!


If you have a query with this product or require replacement parts, please contact us at support@pugglebaby.co.uk.

Learn more

Scan the QR code to view our step-by-step assembly video.


www.thenurserystore.co.uk

Parts

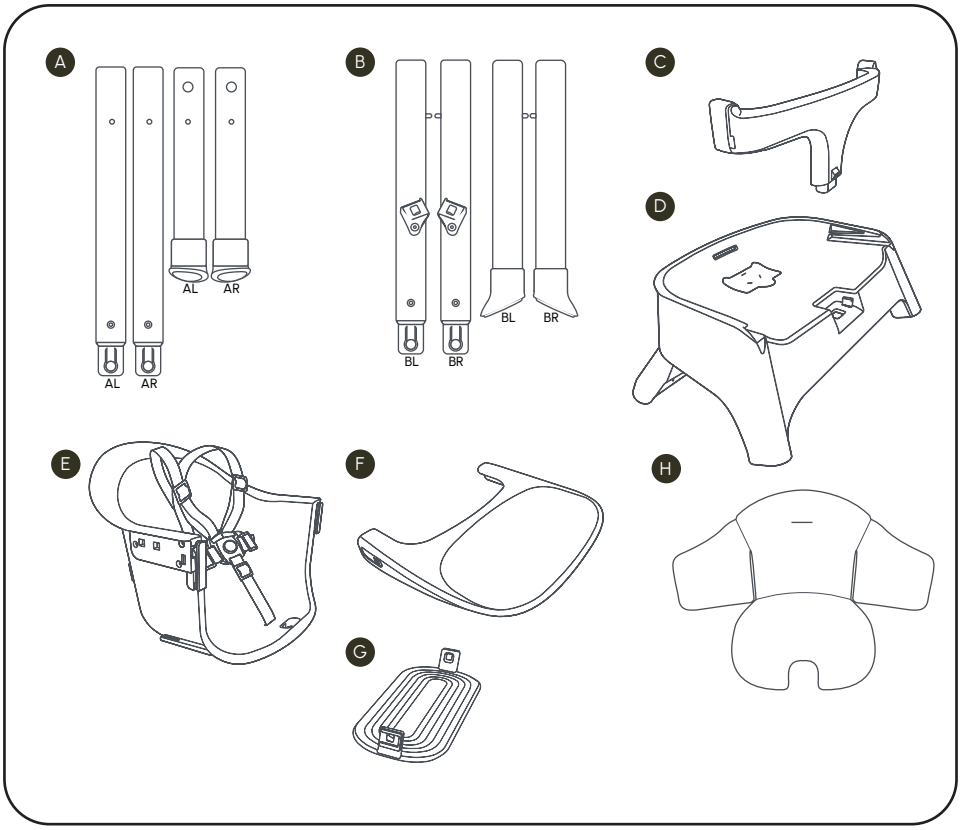


- A back legs x 4
- B front legs x 4
- C T-bar
- D seat base
- E seat
- F tray
- G footrest
- H seat liner

Parts

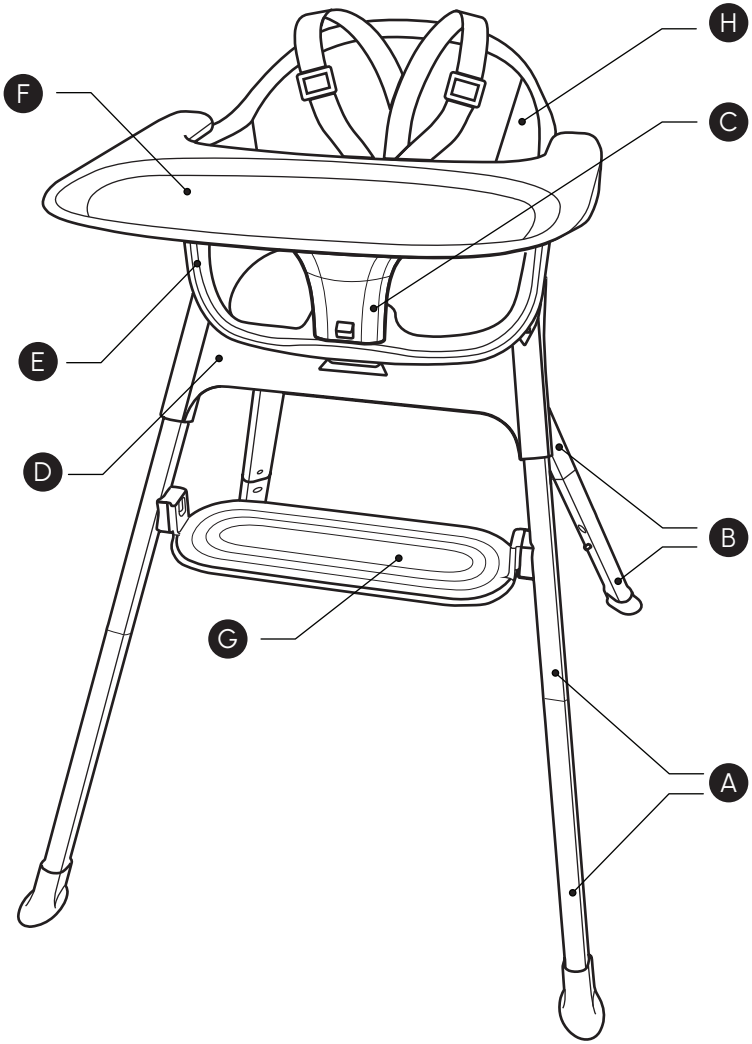


Modes


This product can be used in the following modes:

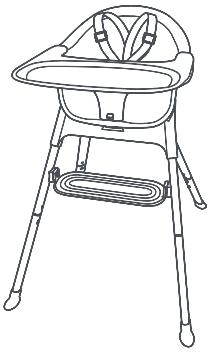


Mode 1 – Highchair

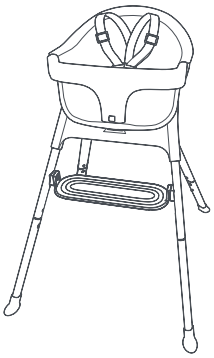


Mode 2 – Highchair w/o tray

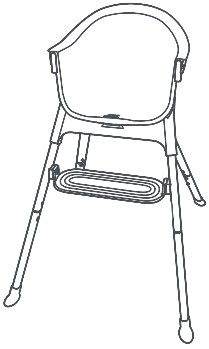

Mode 3 – Toddler Chair

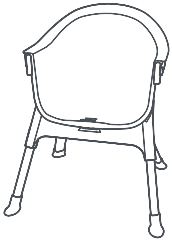


Mode 4 – Low Toddler Chair

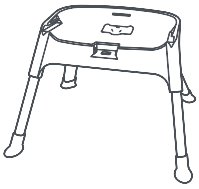

Mode 5 – Toddler stool


Assembly

1

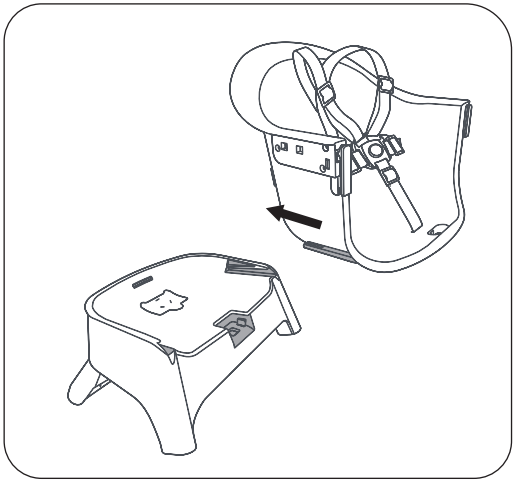


Slide the seat unit onto the base.

2

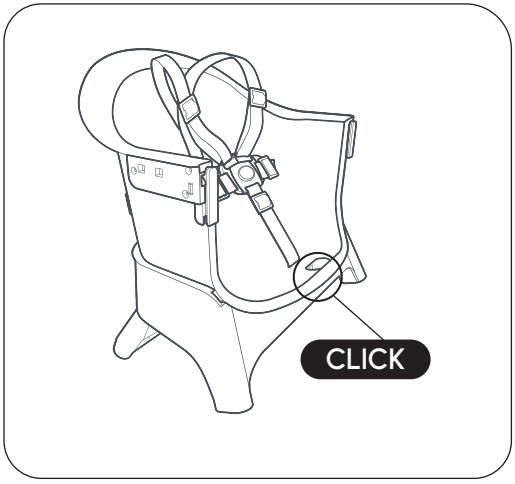


You will hear a click when it is securely attached.

3

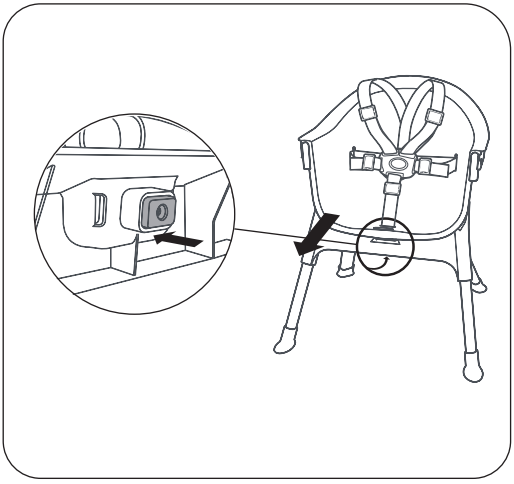


To remove the seat unit from the base, push the release button under the base and slide forward.

4

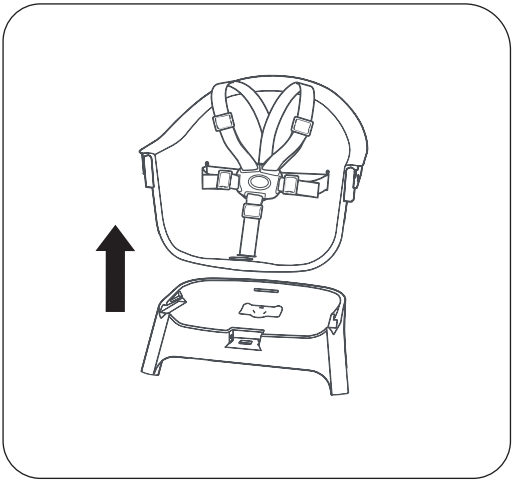


Then lift the seat unit off the base.

5

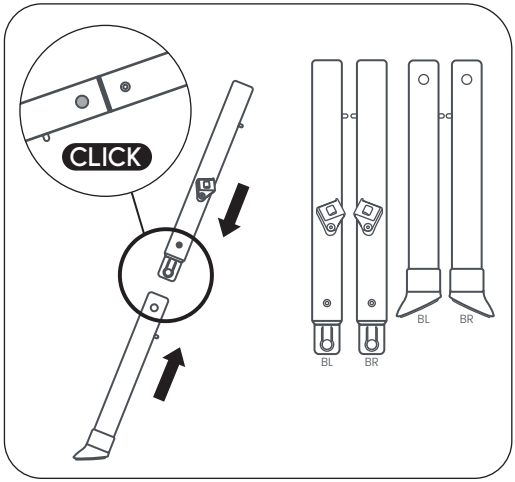


Connect the upper front leg to the lower front leg, push firmly until they click in place. Repeat for both front legs.

6

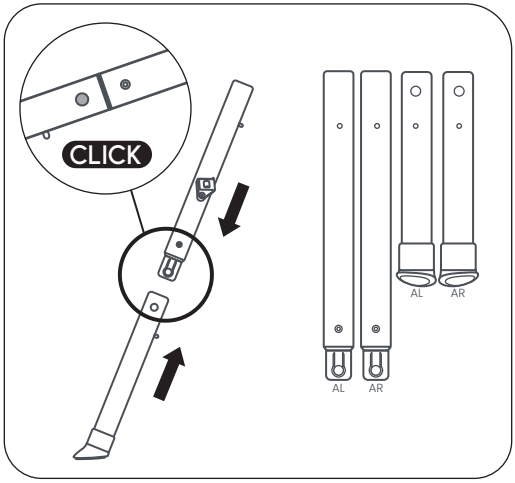


Connect the upper back leg to the lower back leg, push firmly until they click in place. Repeat for both front legs.

7

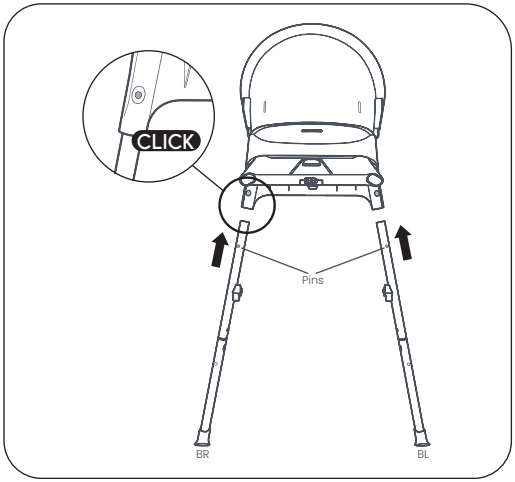


Connect the top of the front legs into their corresponding housing on the seat unit base. You will hear a click when securely in place.

8

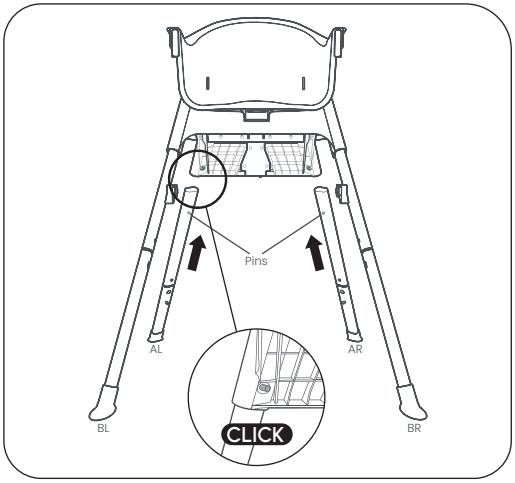


Connect the top of the back legs into their corresponding housing on the seat unit base. You will hear a click when securely in place.

9

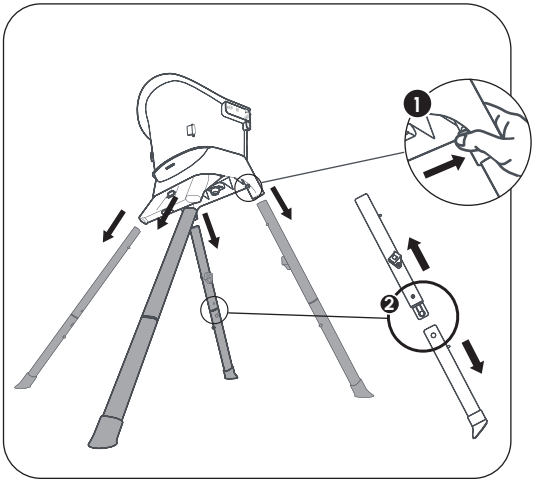


To remove, press the pin to the top of the legs and pull to release them. Press the pin in the middle connector on each leg to separate the two parts.

10

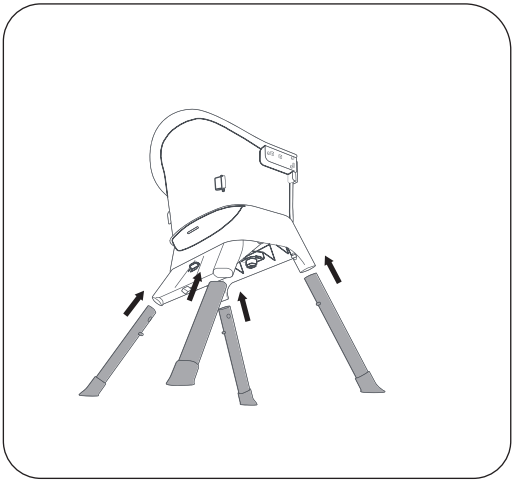


To use in feeding chair mode connect only the lower sections with feet of the front and back legs.

11

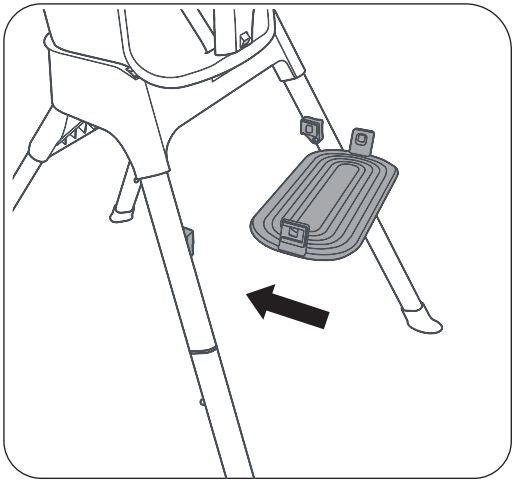


Connect the footrest to the footrest housing located on the front legs.

12

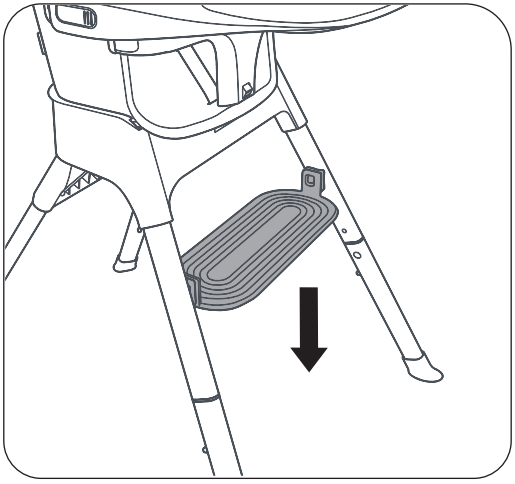


For taller children install with the connectors facing upwards to lower the footrest height.

13

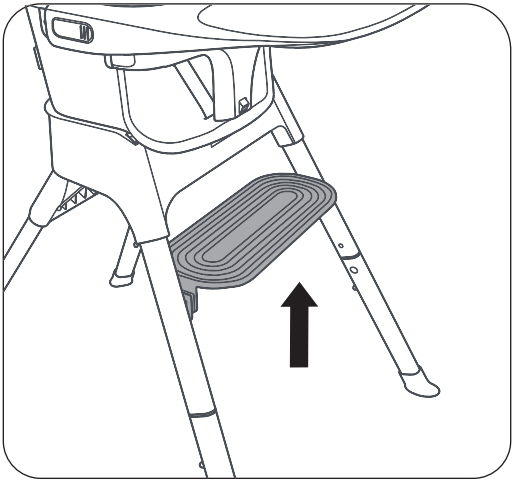


For smaller children install with the connectors facing downwards to higher the footrest height.

14

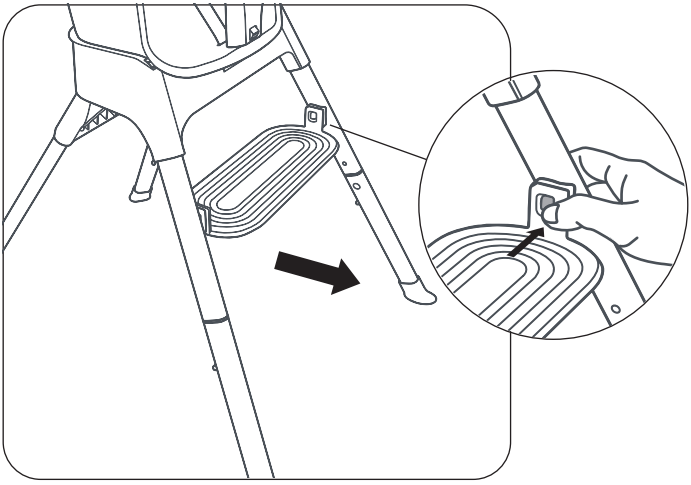


To remove, press the connectors to release the footrests

15

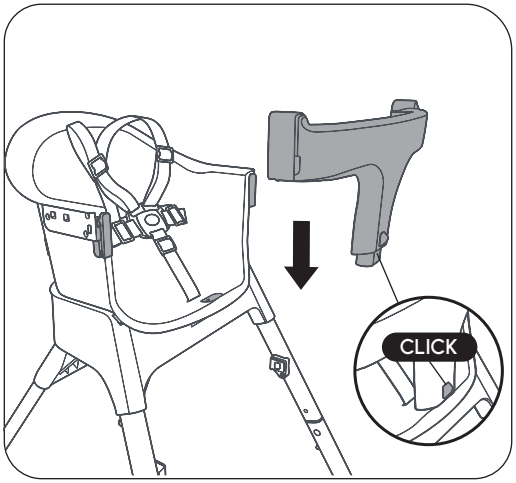


Connect the T-bar by sliding it downwards into the groves as indicated in the diagram. The base section will click into the seat base.

16

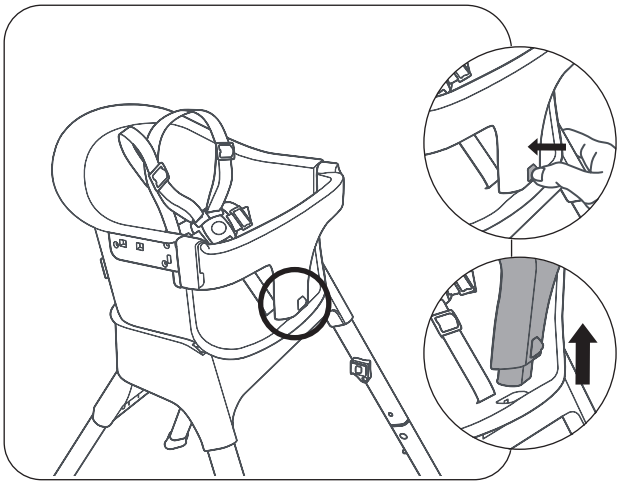


To remove, press on the release button and lift upwards.

17

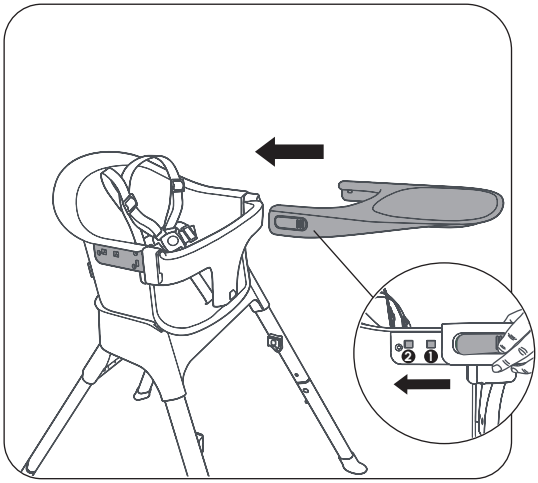


Attach the tray to its corresponding housing either side of the seat unit as indicated in the diagram.

18

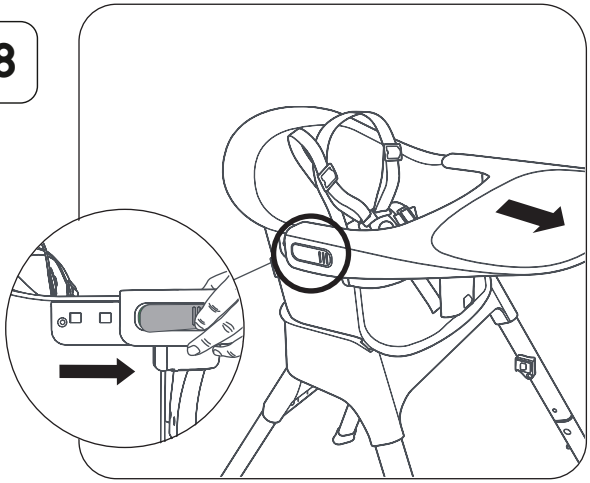


To remove or adjust the position, press the release button on either side as indicated and slide to required position.

19

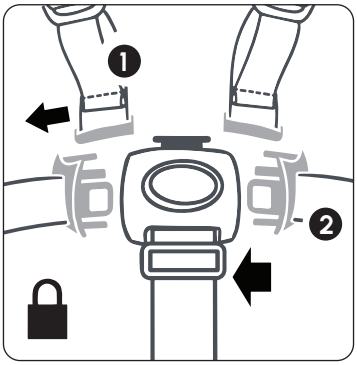


Lock, slide the top harness connector into the lower harness connector. Then click into the central buckle.

20

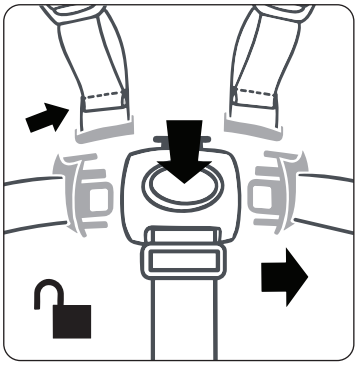


Unlock, press the centre button and remove the clips from buckle.

21

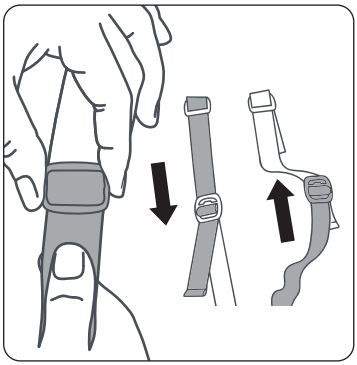


To adjust, move the adjuster by sliding it up or down.

22

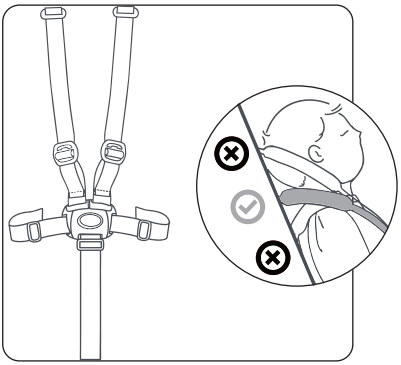


To Note. The harness should fit snugly to the child.

23

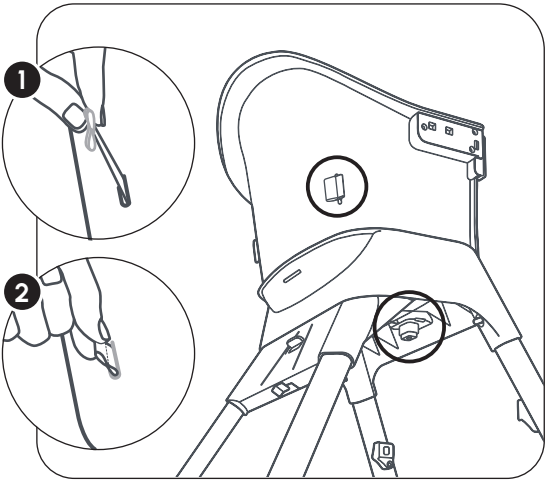


To remove the harness, turn the tabs and feed them through the harness holes on the back of the seat unit.

24

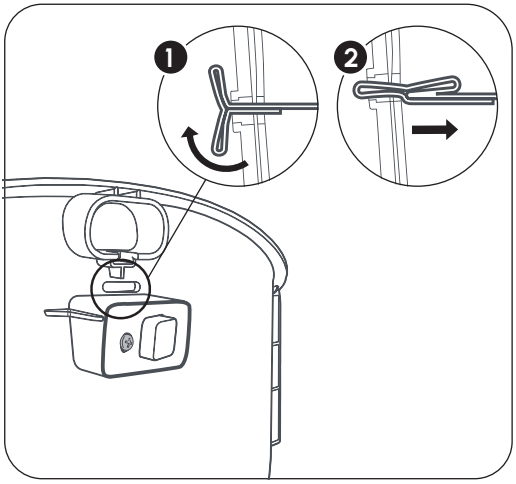

On the underside of the seat base, turn the tab and feed it through the crotch harness hole.

25

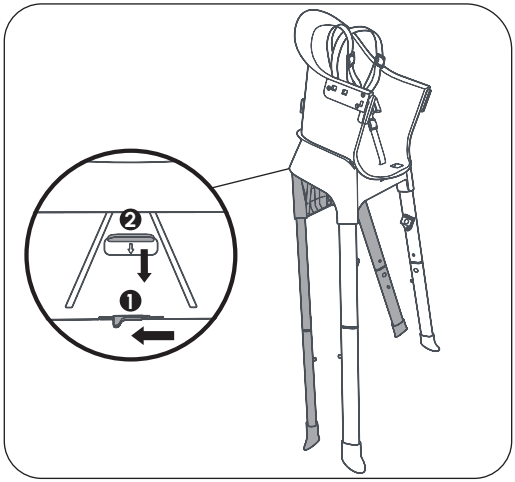

To fold the chair slide the release and push down the lever found at the back of the seat.

Converting between modes

26



Mode 1 - Assembling in highchair mode. The max. weight for this mode is 15kg. For ages 6 months - 3 years.
Follow steps 1 - 22.
WARNING! The harness and T-bar MUST be used for children under 3 years of age or up to 15kg.

27



Mode 2 -Converting to highchair mode w/o tray. The max. weight for this mode is 15kg. For ages 6 months - 3 years.
Remove tray, step 18.
WARNING! The harness and T-bar MUST be used for children under 3 years of age or up to 15kg.


28



Mode 3 - Converting to toddler chair. The max. weight for this mode is 22kg. For ages 3–6 years.
Remove tray, step 18 & remove T-bar, step 16.
Remove the harness, steps 23 & 24.
WARNING! DO NOT use in this mode until the child is 3 year or more.


Converting between modes

29

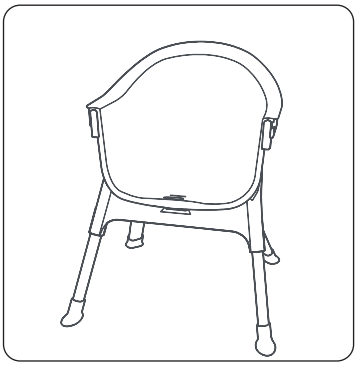

Mode 4 – Converting to low toddler chair. Maximum weight for a child in this mode is 22kg. For ages 3 years – 6 years.
Remove the upper section of the legs, refer to steps 9 and 10.
WARNING! DO NOT use in this mode until the child is 3 year or more.

30

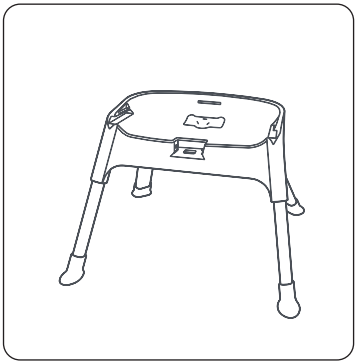

Mode 5 - Converting to toddler stool. Maximum weight for a child in this mode is 22kg, ages 3 years – 6 years.
Removed the seat unit from base, steps 3 & 4.
WARNING! DO NOT use in this mode until the child is 3 year or more.

Warnings

WARNING: Read all instructions before using the infant floor seat. Keep instructions for future use. The child may be hurt if you do not follow these instructions.
Before using, remove and dispose of any plastic bags and other packaging (e.g. fasteners, fixing ties, etc.) and keep them out of reach of children.
WARNING! FALL HAZARD: Children have suffered severe head injuries including skull fractures when falling from high chairs. Falls can happen suddenly if child is not restrained properly.
WARNING! ALWAYS use restraints and adjust to fit snugly.
WARNING! Stay near and watch child during use.
WARNING! FALL HAZARD: Infants have suffered skull fractures falling while in and from floor seats.
WARNING! DROWNING HAZARD : Infants have drowned when floor seat has been placed in a bath tub or pool.
WARNING! NEVER use in or near water.
WARNING! It is recommended that the high chair be used only by children capable of sitting upright unassisted.
WARNING! Failure to follow these warnings and instructions may cause serious injury or death.
WARNING! Follow the manufacturer's instructions.
WARNING! ALWAYS use restraints and adjust to fit snugly.
WARNING! Never leave the child unattended.



WARNING! Always keep child in view while in the highchair.
WARNING! Highchair is intended for children able to sit up unaided and up to 3 years or a maximum weight of 15kg.
WARNING! Position the highchair away from solid structures and benches to avoid injuries caused by falls and by access to dangerous items.
WARNING! Do not move or carry the highchair with your child inside.
WARNING! Always use the restraint system.

Warnings

WARNING! The harness must always be used and correctly fitted. Most injuries from highchairs are caused by falls.

HIGH CHAIR modes – 6 Months - 3 Years / Max. 15 kg
WARNING! NEVER leave the child unattended.
WARNING! ALWAYS use the restraint system. Adjust to fit snugly.
WARNING! Falling hazard: Prevent your child from climbing on the product.
WARNING! Do not use the highchair unless all components are correctly fitted and adjusted.
WARNING! Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires etc. in the vicinity of the highchair.
WARNING! Be aware of the risk of tilting when your child can push its feet against a table or any other structure.
WARNING! Tray is not designed to hold child in chair.
WARNING! The child should be secured in the high chair at all times by the restraint system.
WARNING! Do not use the product until the child can sit up unaided.
WARNING! Do not use the product if any part is broken, torn or missing.
WARNING! Please keep children away when unfolding and folding the product to avoid injury.
WARNING! This High Chair is intended for children able to sit up unaided and up to 3 years or a maximum weight of 15 kg.

FEEDING CHAIR modes – 6 –12 months (Max. 15 kg)
WARNING! Discontinue use if the child attempts to stand up or can stand unassisted.
WARNING! Use ONLY on the floor.
WARNING! NEVER use on an elevated surface.
WARNING! ALWAYS use restraints. Adjust to fit snugly.
WARNING! NEVER leave the child unattended.
WARNING! NEVER lift or carry child in the product.

Warnings

WARNING! Use ONLY with a child that is able to hold their head up unassisted.
WARNING! STOP using when the child can climb out or walk.
WARNING! DO NOT place this product near a window as it can be used as a step by the child and cause the child to fall out of the window.
WARNING! Be aware of the risk of open fires and other sources of strong heat in the vicinity of the product.
WARNING! DO NOT place this product near a window where cords from blinds or curtains could strangle a child.
WARNING! ALWAYS keep child in view while in product.

TODDLER CHAIR modes – maximum weight 22 kg

WARNING! In toddler chair mode, this product is intended for children capable to walk and sit unaided from 3 to 6 years old.
WARNING! All assembly fittings should always be tightened properly.
WARNING! Do not to use the seating if any part is broken, torn or missing and use only spare parts approved by the manufacturer.
WARNING! The restraint system must be removed, concealed, or covered (as applicable) when the product is used in "toddler chair" mode.

WARNING! DO NOT place this near a window as it can be used as a step by the child and cause the child to fall out of the window.
WARNING! Be aware of the risk of open fires and other sources of strong heat in the vicinity of the product.
WARNING! DO NOT place this product near a window where cords from blinds or curtains could strangle a child.

Conforms to EN 14988:2017+A2:2024 & EN 17191: 2021

Care & Maintenance

This product requires regular maintenance. The cleaning and maintenance of the product must only be carried out by an adult.
· The product must be maintained regularly to provide full satisfaction. We advise you to check and if necessary clean mechanical parts every fortnight.
· Do not force it if it becomes difficult to fold it up or unfold it. Clean the product. If difficulties persist, contact your supplier.
· Use a sponge and mild soap. Do not use detergent.
· Tray is dishwasher safe. Wash thoroughly before initial use and periodically. Wipe clean with anti-bacterial solution/wipes.
NOTE: Detach the tray from the seat before placing the tray in the dishwasher.

Troubleshooting

Issue	Solution
Missing parts	The fittings for this product are supplied inside a box within the main carton and are labelled as fittings. Check all the packaging thoroughly to ensure that you have not overlooked them before you throw it away. If necessary, contact our customer service team at **support@pugglebaby.co.uk**.
Harness buckle is not fastening or feels stiff	Dirt, food or foreign objects in the harness can fall into buckle mechanism. Routinely check the buckle area for crumbs, dirt, or foreign objects. Vacuum the seat regularly.

For any and all other product issues not covered in the above please contact our dedicated customer services team
Contact: **support@pugglebaby.co.uk**

Recycling the Packaging

When you have unpacked your product and ensured that all parts are present, please discard the packaging components in accordance with your local authority guidelines. For further information, please check the material and your postcode at

https://www.recyclenow.com/recycle-an-item.

Notes

www.thenurserystore.co.uk

Imported by Online4baby Ltd.
Meadowbank, Tweedale Way, Oldham, OL9 8EH